



ROCKWOOD

---


C A B I N E T R Y

**CABINET ASSEMBLY INSTRUCTIONS**


## TABLE OF CONTENTS

|                                                                 |              |
|-----------------------------------------------------------------|--------------|
| <b>Assembling Instructions - Base Cabinet</b>                   | <b>3-6</b>   |
| <b>Assembling Instructions - Lazy Susan Corner Base Cabinet</b> | <b>7-12</b>  |
| <b>Assembling Instructions - Blind Corner Base Cabinet</b>      | <b>13-18</b> |
| <b>Assembling Instructions - Base 3 Drawers Cabinet</b>         | <b>19-24</b> |
| <b>Assembling Instructions - Wall Cabinet</b>                   | <b>25-27</b> |
| <b>Assembling Instructions - Wall Diagonal Corner Cabinet</b>   | <b>28-32</b> |
| <b>Assembling Instructions - Pantry</b>                         | <b>33-38</b> |
| <b>Assembling Instructions - Oven Cabinet</b>                   | <b>39-45</b> |
| <b>Assembling Instructions - Vanity</b>                         | <b>46-51</b> |


# ASSEMBLING INSTRUCTIONS - BASE CABINET

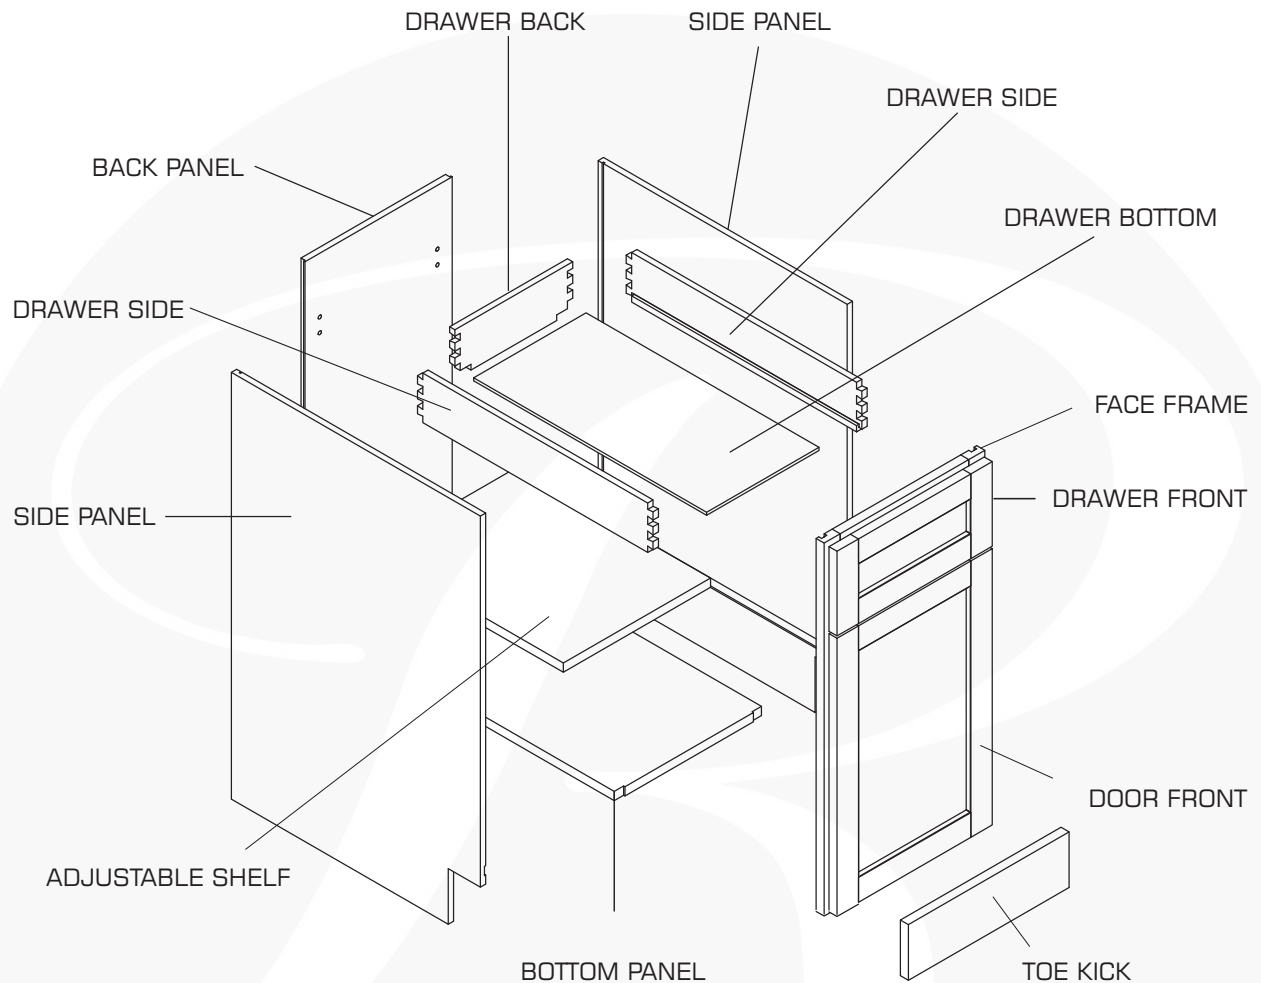


GLIDES

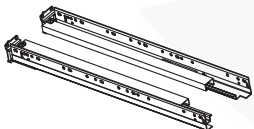


METAL BRACKETS




SCREWS




SHELF CLIPS




GLIDE SUPPORTS

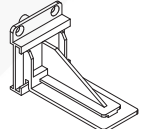

## TOOLS



WOOD  
GLUE

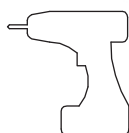

SCREW  
DRIVER




RUBBER  
Mallet



NAIL  
GUN




STAPLER

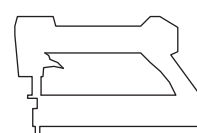


SPOTNAILS  
XC1008


**STEP 1**

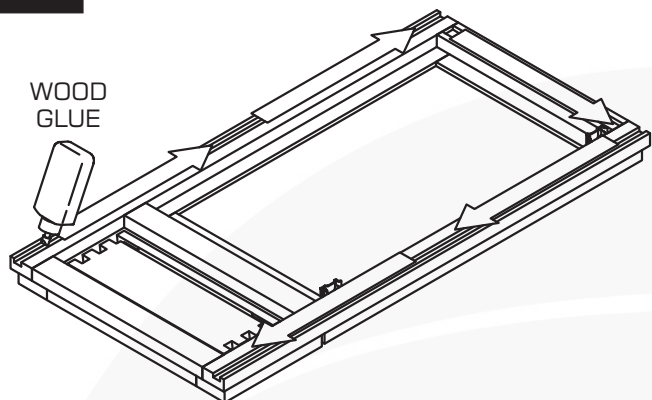


**STEP 2**

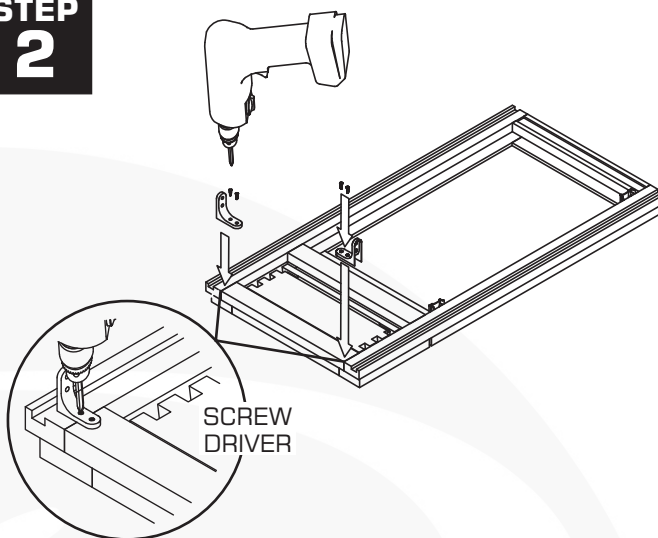


**STEP 3**

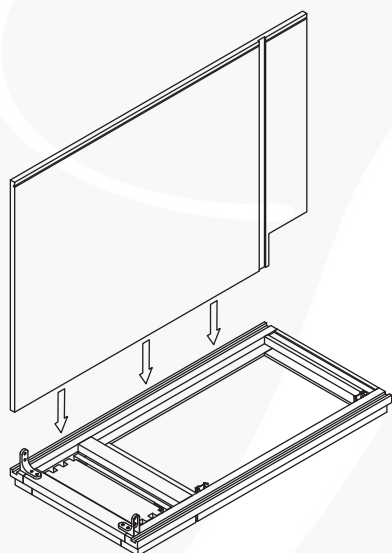


**STEP 4**

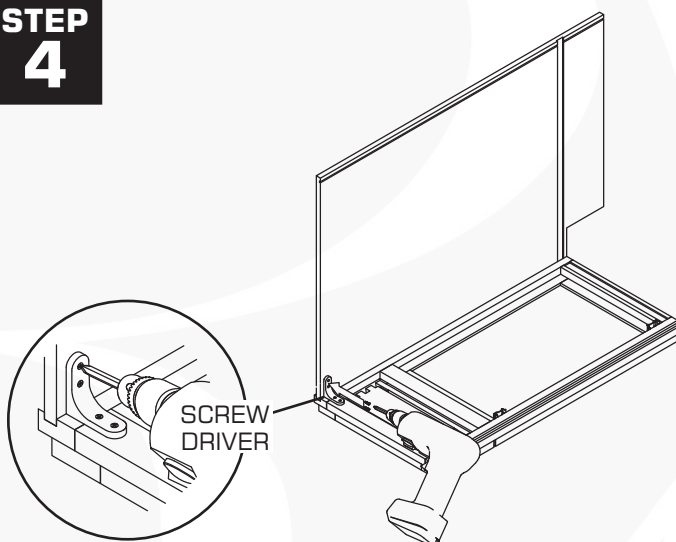


**STEP 5**

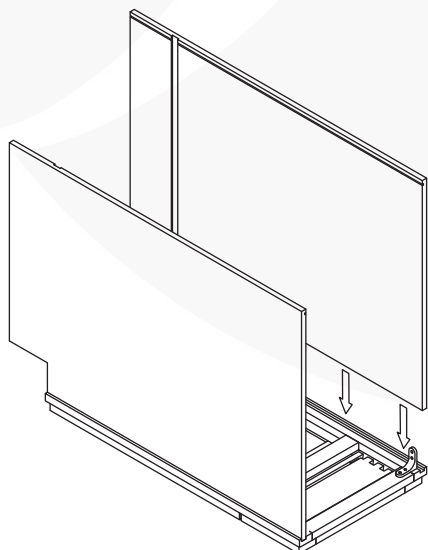


**STEP 6**

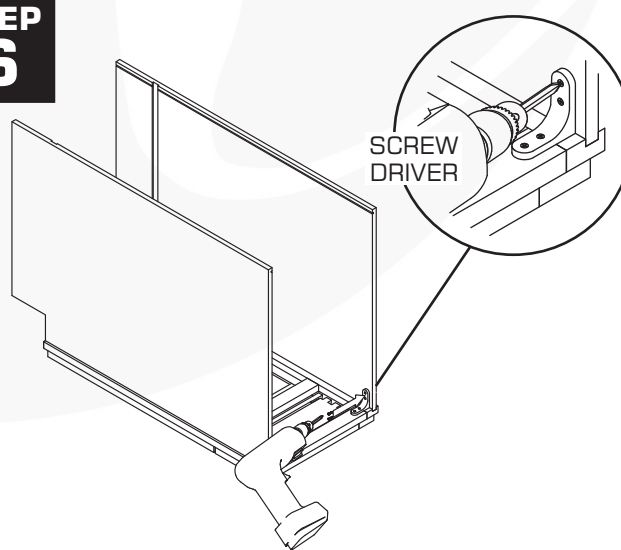


**STEP  
7**

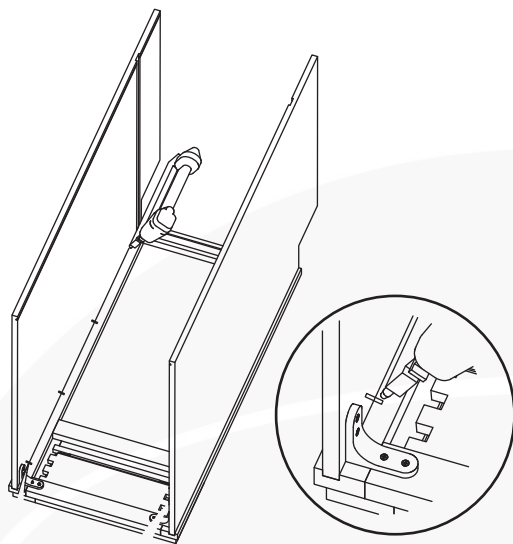


**STEP  
8**

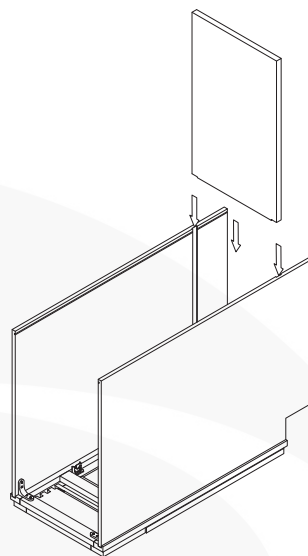


**STEP  
9**

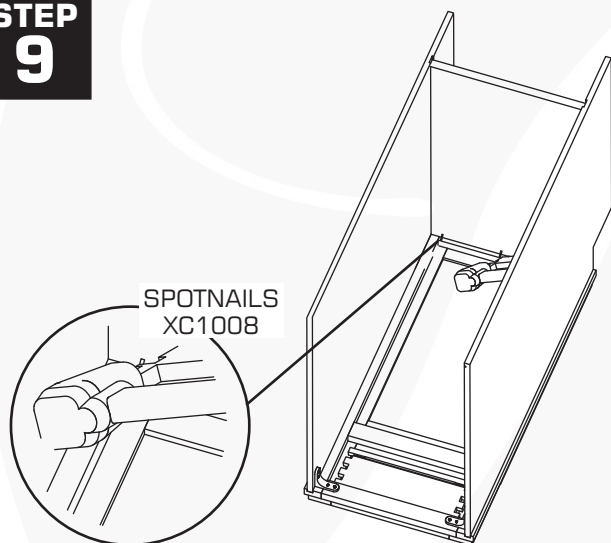


**STEP  
10**

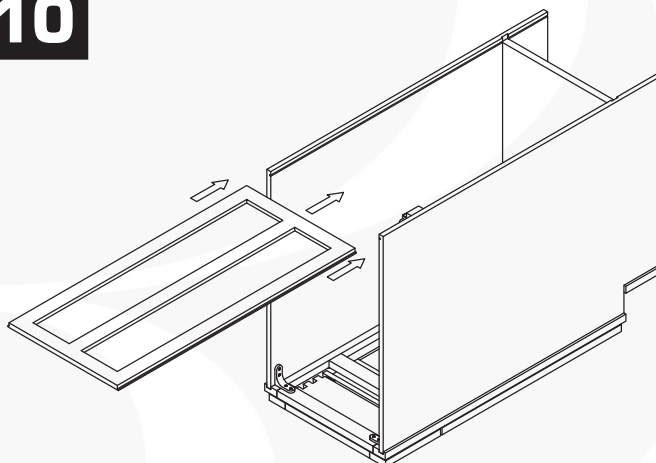


**STEP  
11**

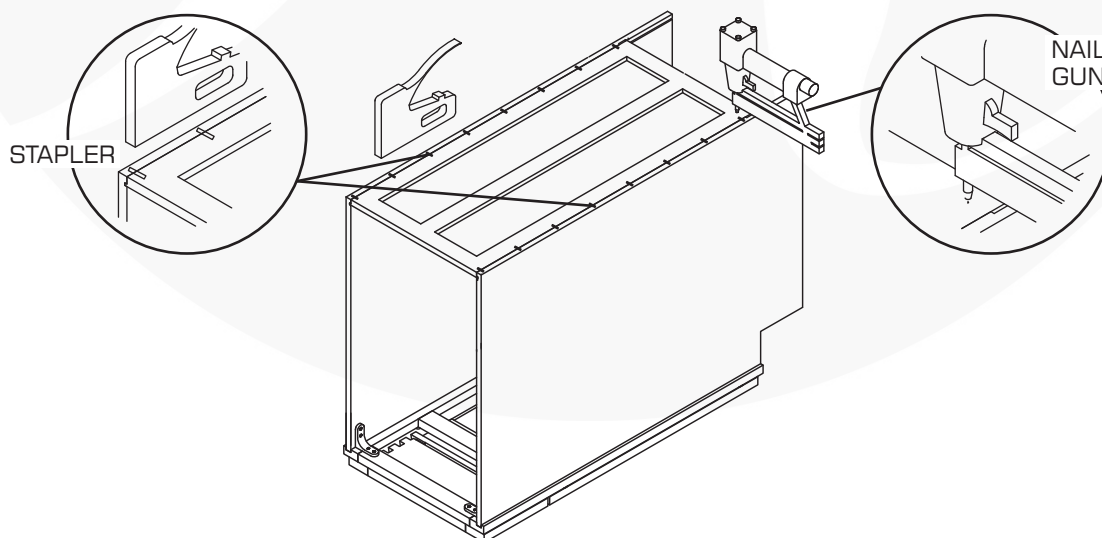


**STEP  
12**

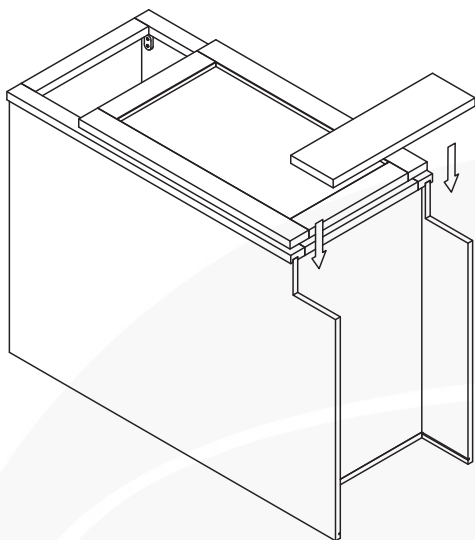


**STEP  
13**

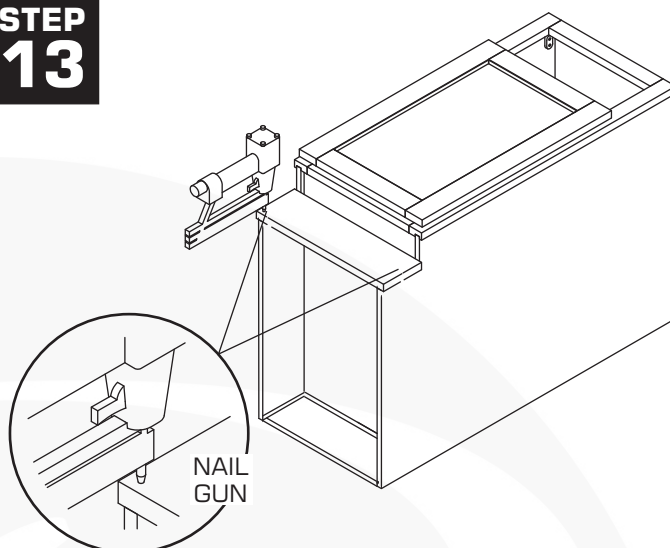


**STEP  
14**

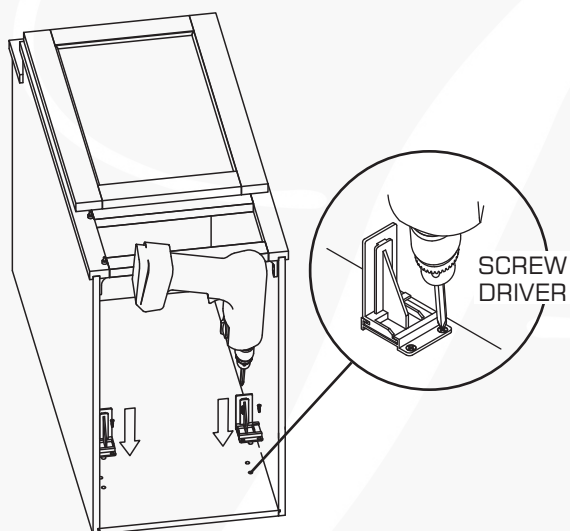


**STEP  
15**

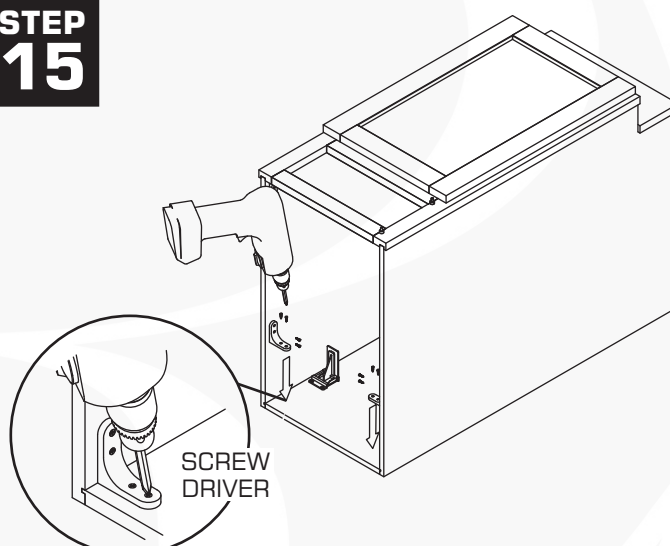


**STEP  
16**

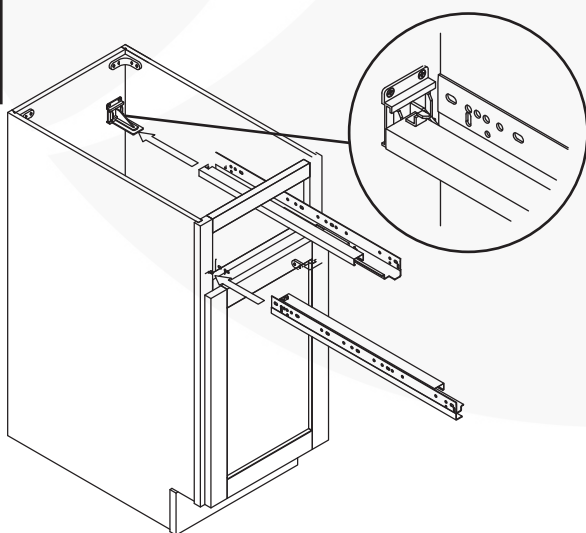


**STEP  
17**

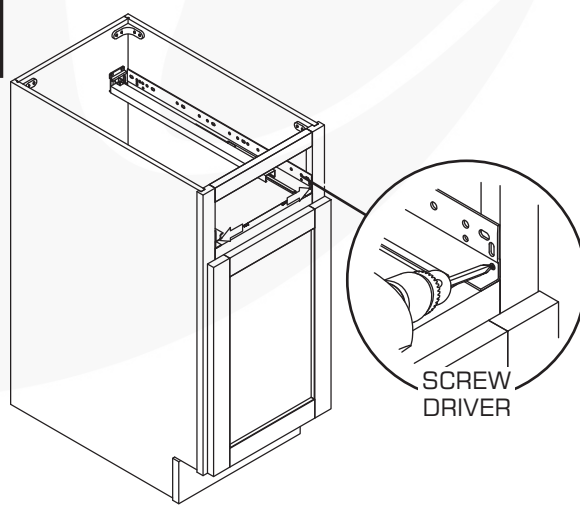


**STEP  
18**

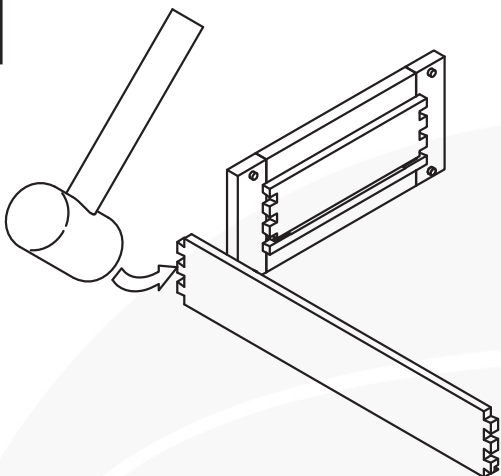


**STEP  
19**

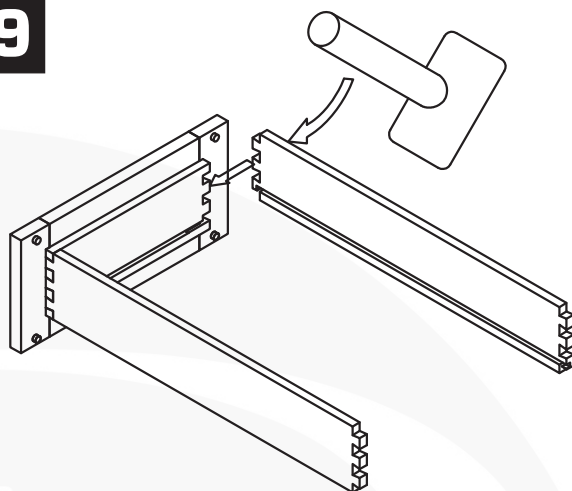


**STEP  
20**

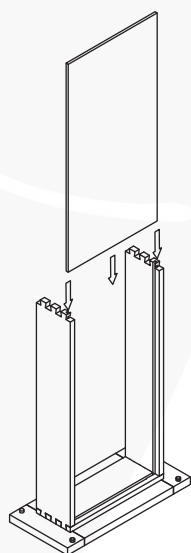


**STEP  
21**

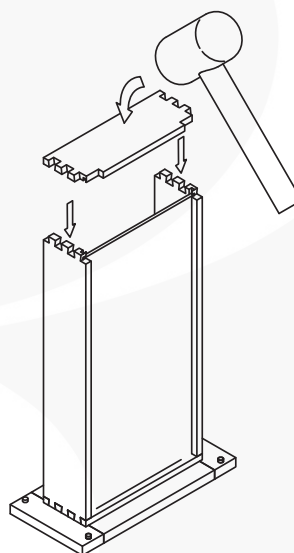


**STEP  
22**

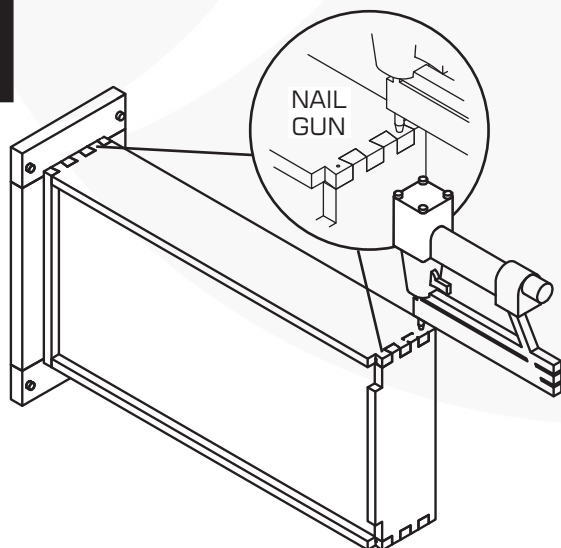


**STEP  
23**

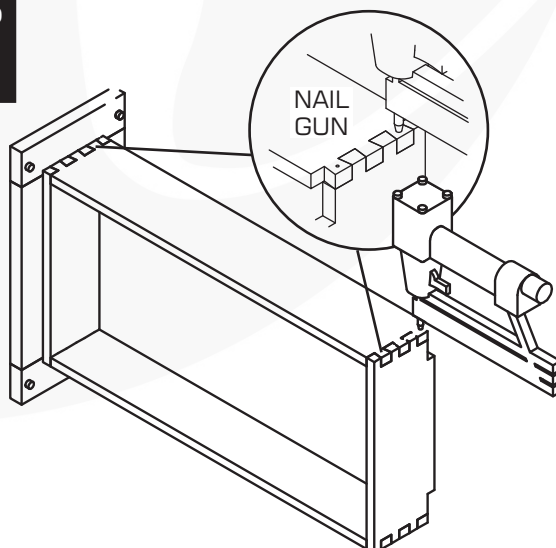

**STEP  
24**

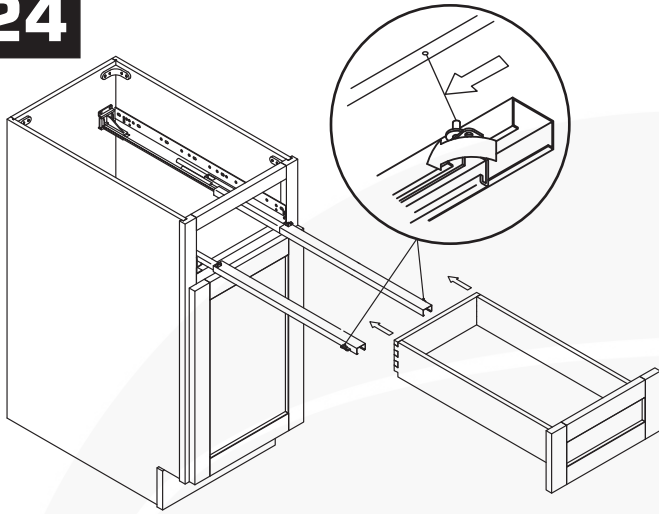


**STEP  
25**

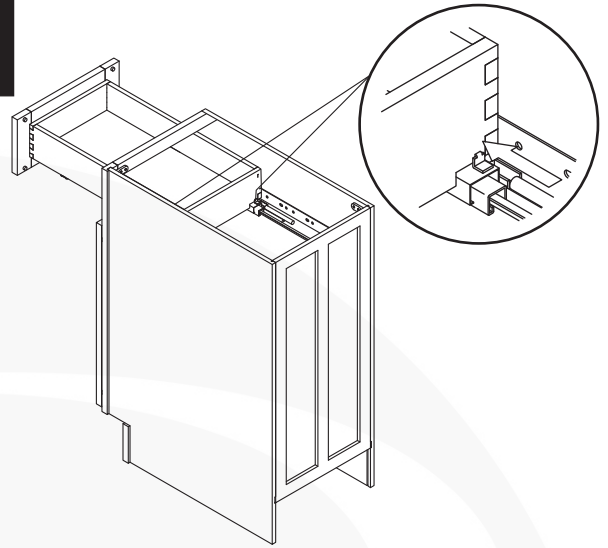


**BASE CABINET**


**STEP  
26**

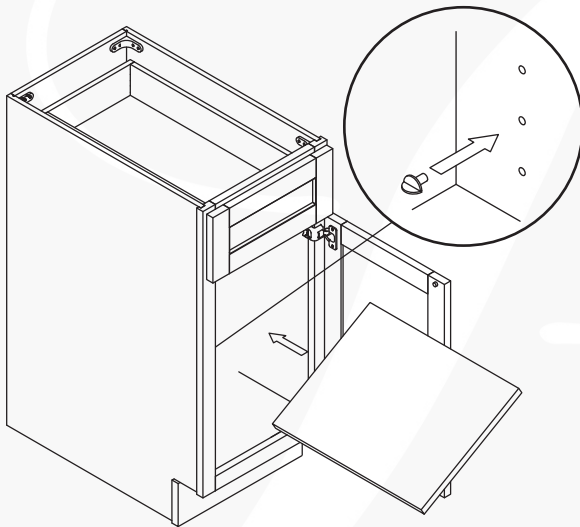

**STEP  
27**

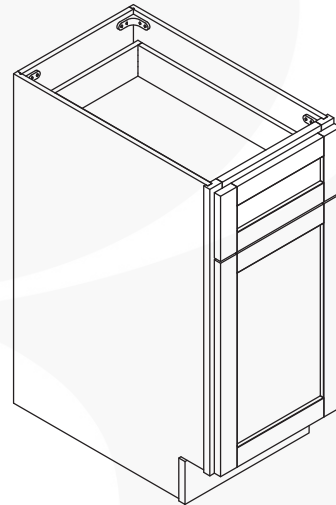


# ASSEMBLING INSTRUCTIONS - LAZY SUSAN CABINET

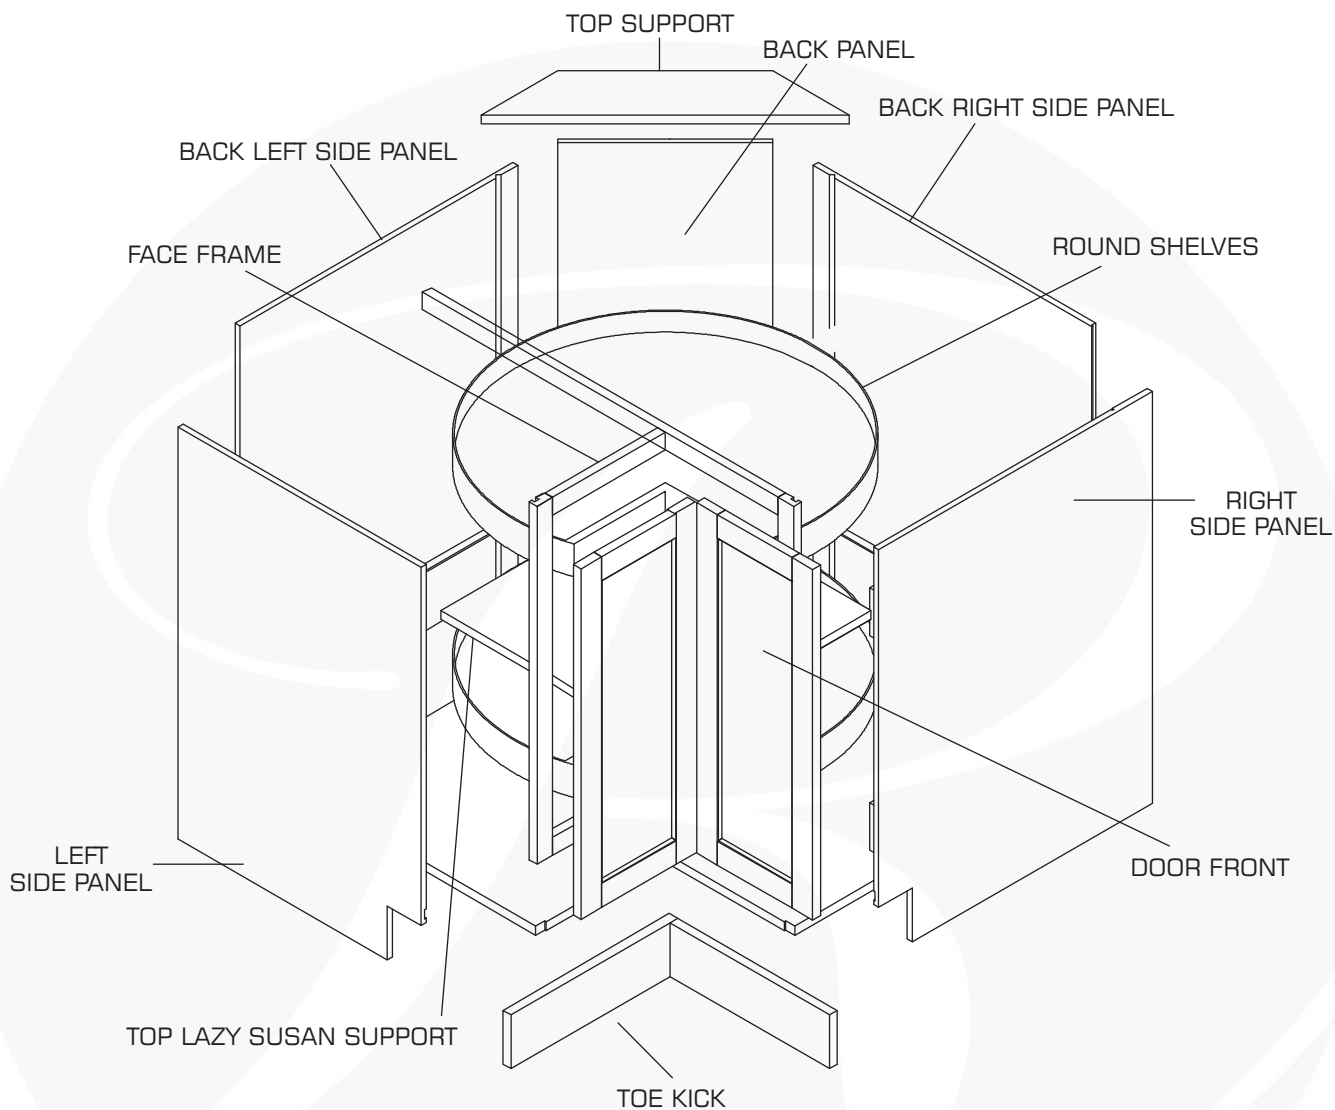

## METAL BRACKETS




## SHELF CLIPS



## BIFOLD HINGE




## 170 HINGE




## SCREWS



## TOOLS



WOOD  
GLUE

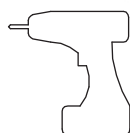

SCREW  
DRIVER




RUBBER  
Mallet



NAIL  
GUN




STAPLER

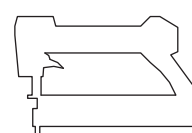


SPOTNAILS  
XC1008


**STEP 1**

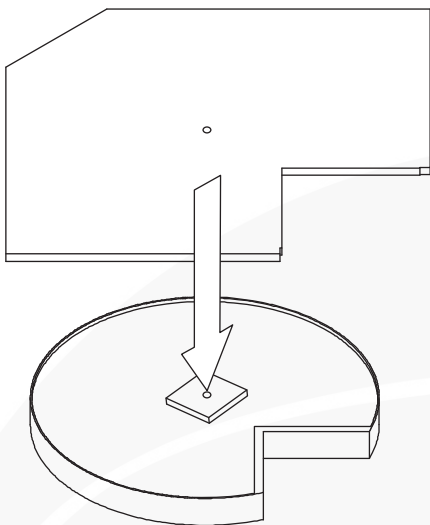


**STEP 2**

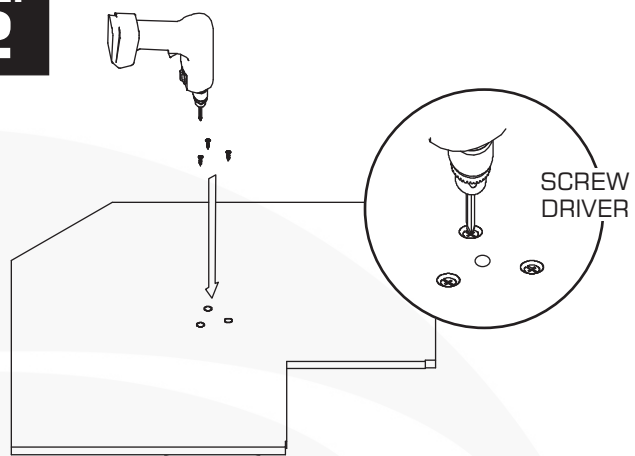


**STEP 3**

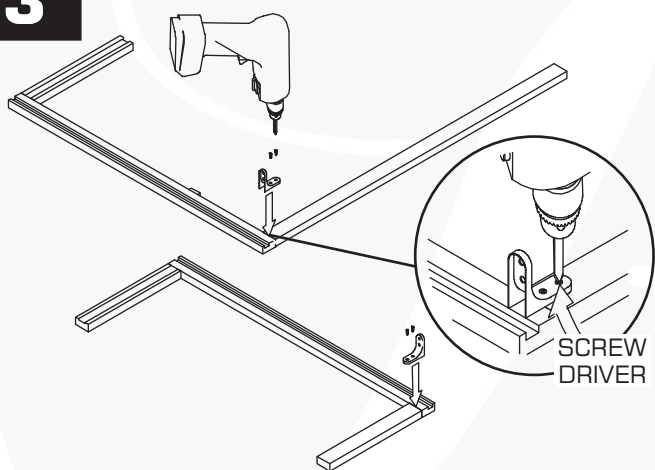


**STEP 4**

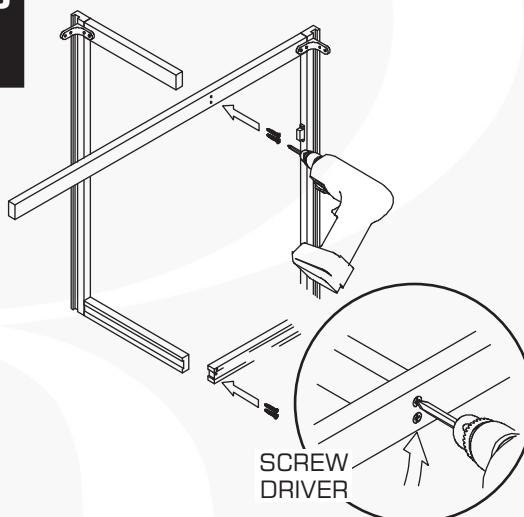


**STEP 5**

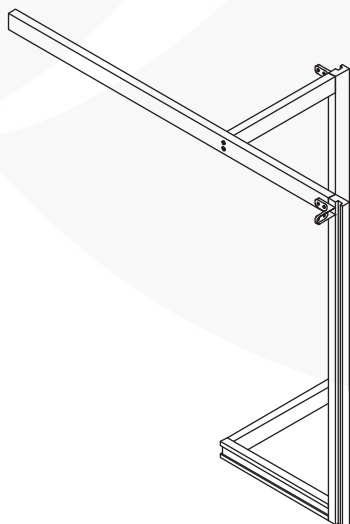


**STEP 6**

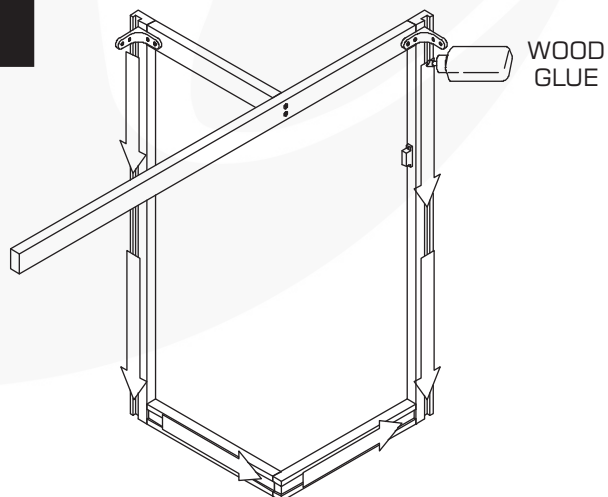


**STEP  
7**

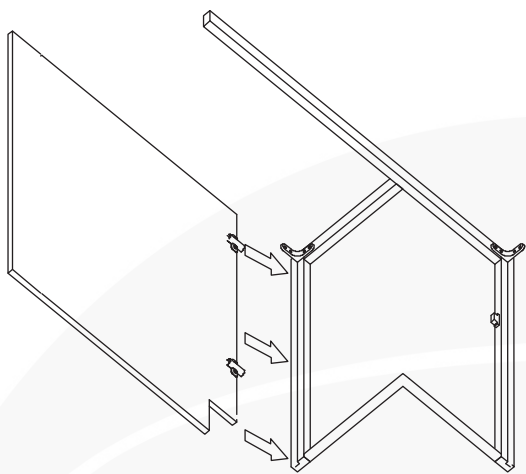


**STEP  
8**

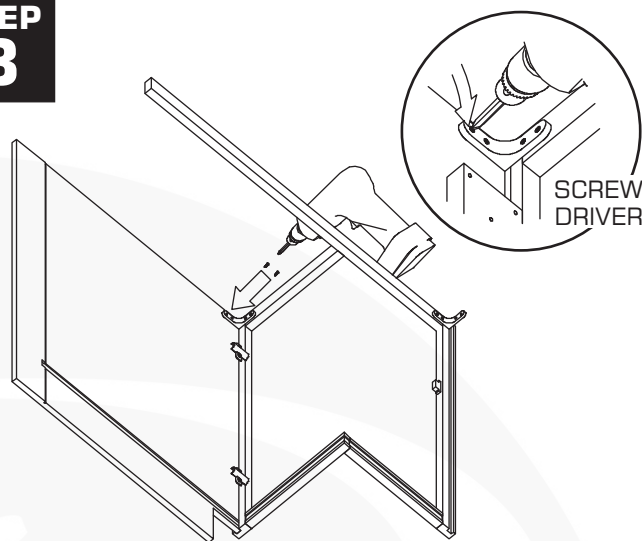


**STEP  
9**

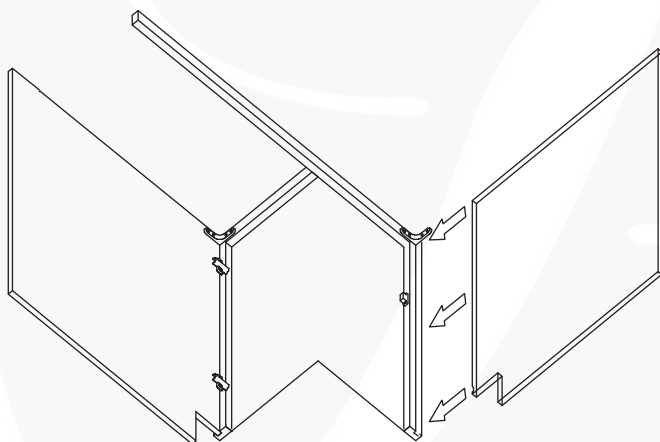


**STEP  
10**

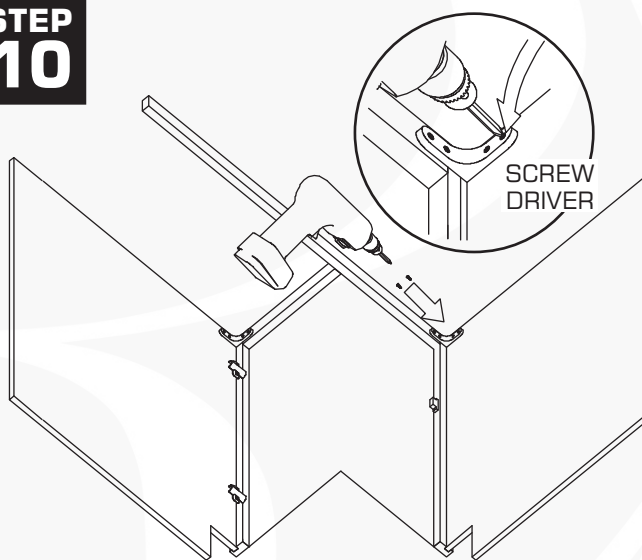


**STEP  
11**

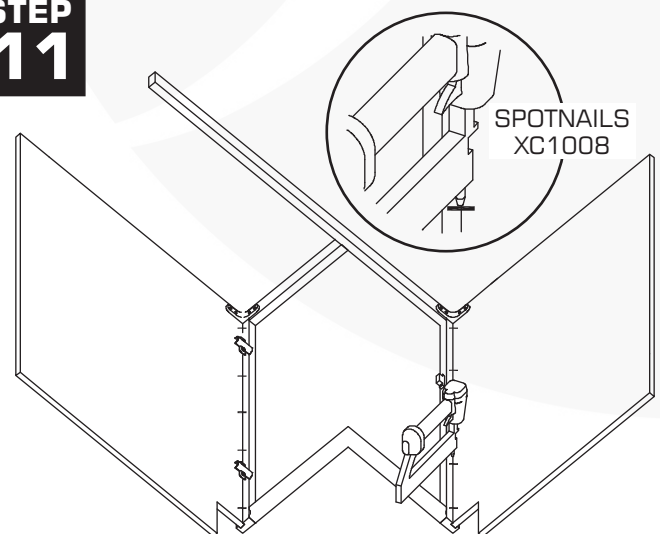


**STEP  
12**

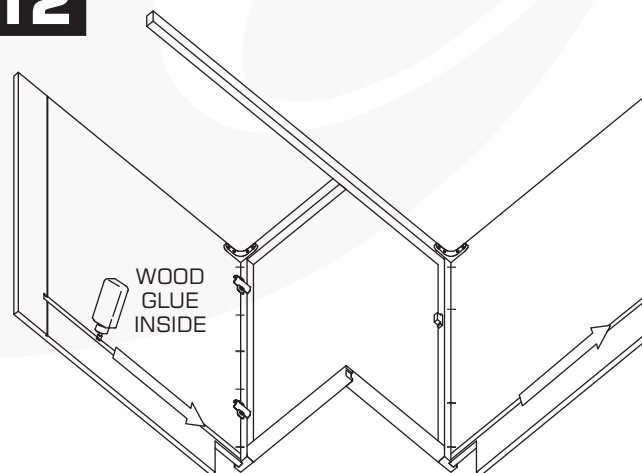


**STEP  
13**

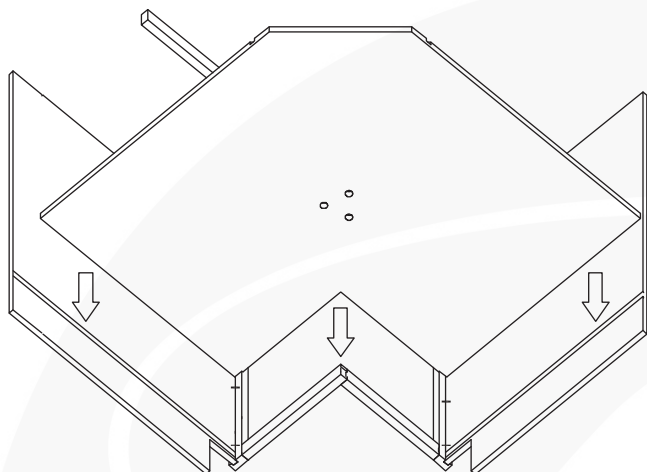


**STEP  
14**

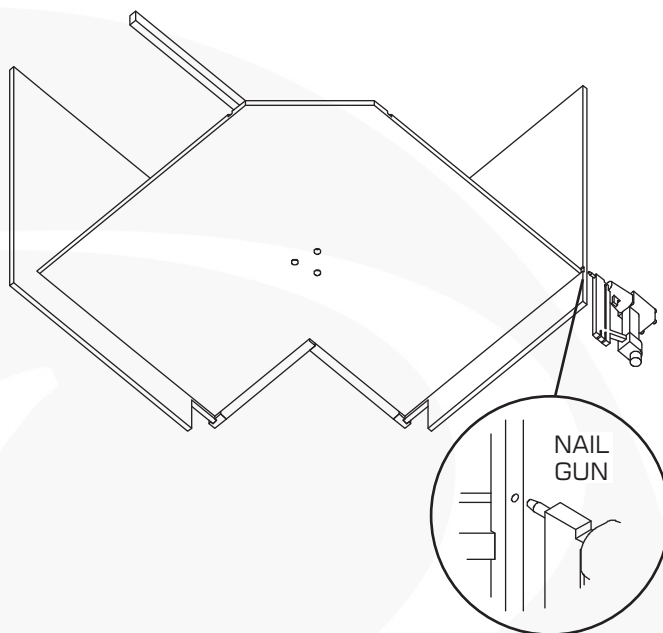


**STEP  
15**

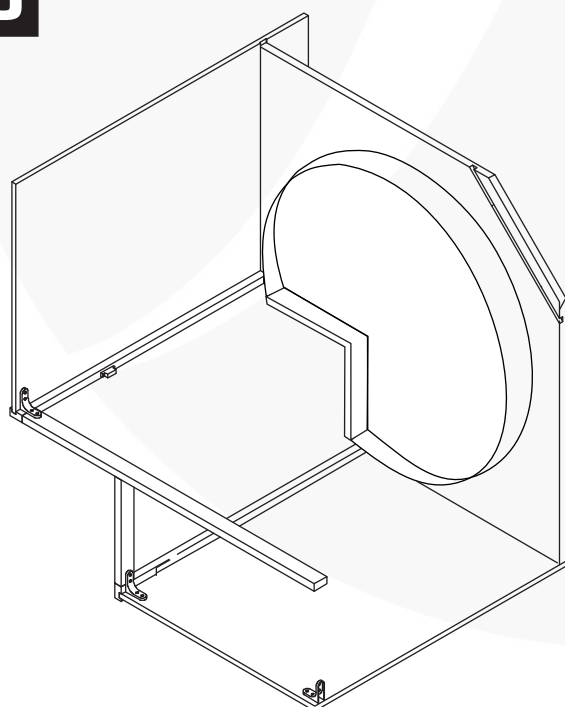


**STEP  
16**

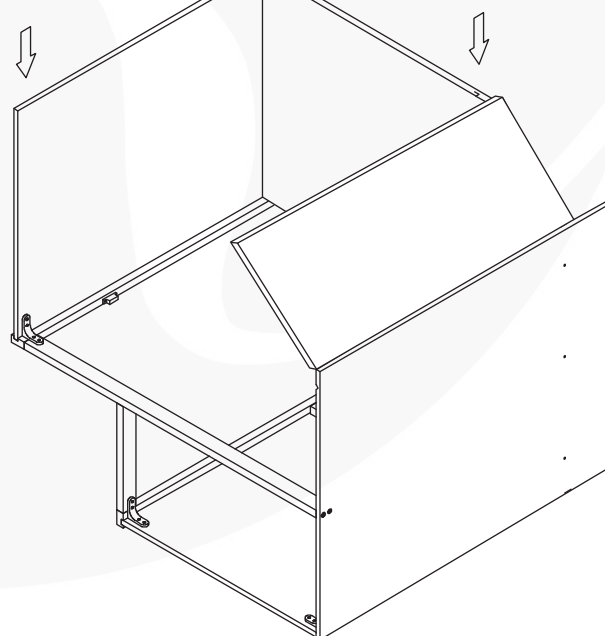


**STEP  
17**

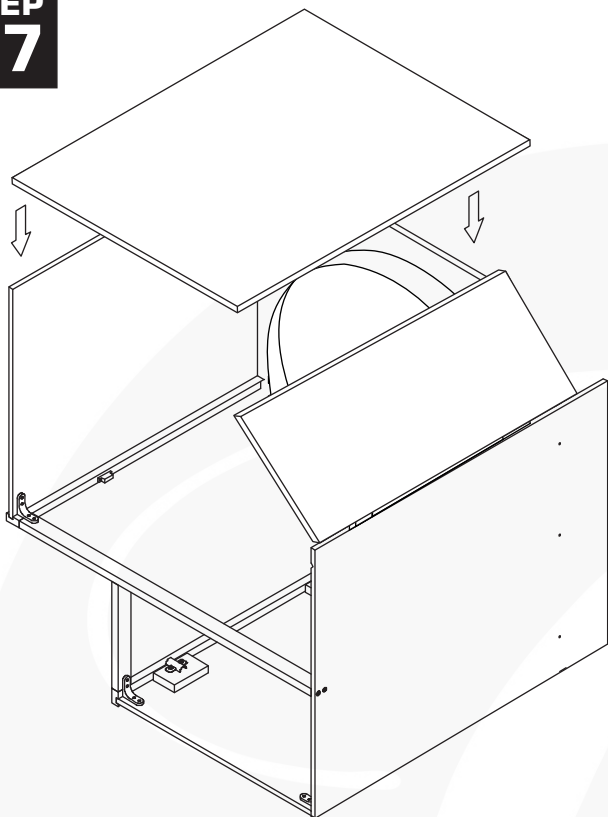


**STEP  
18**

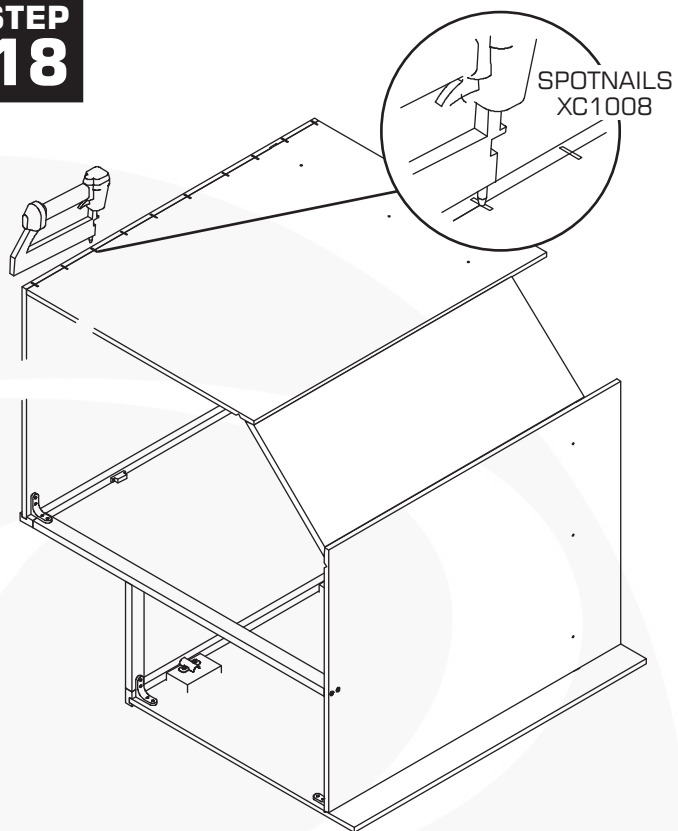


**STEP  
19**

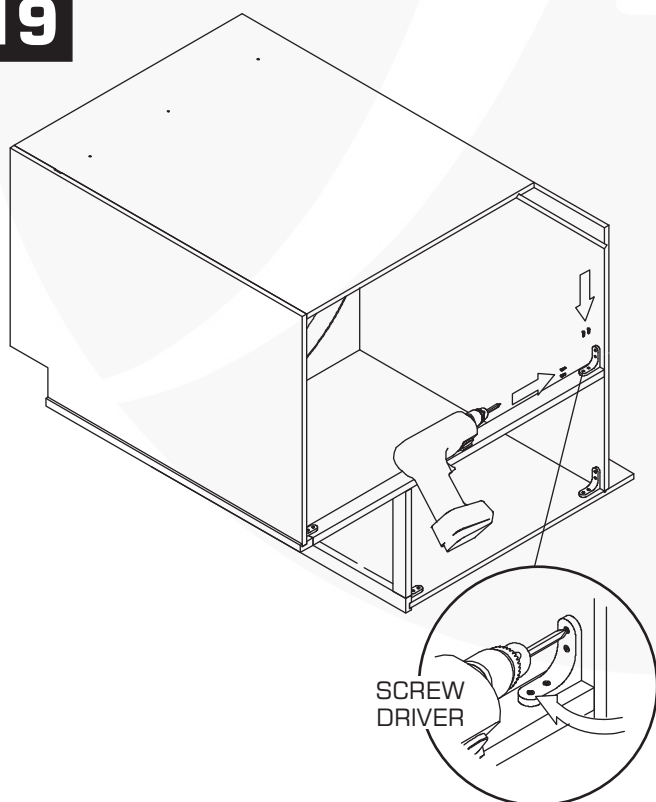


**STEP  
20**

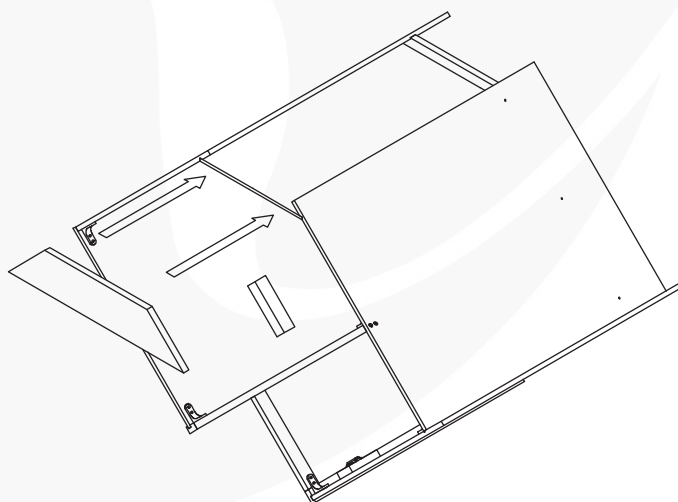


**STEP  
21**

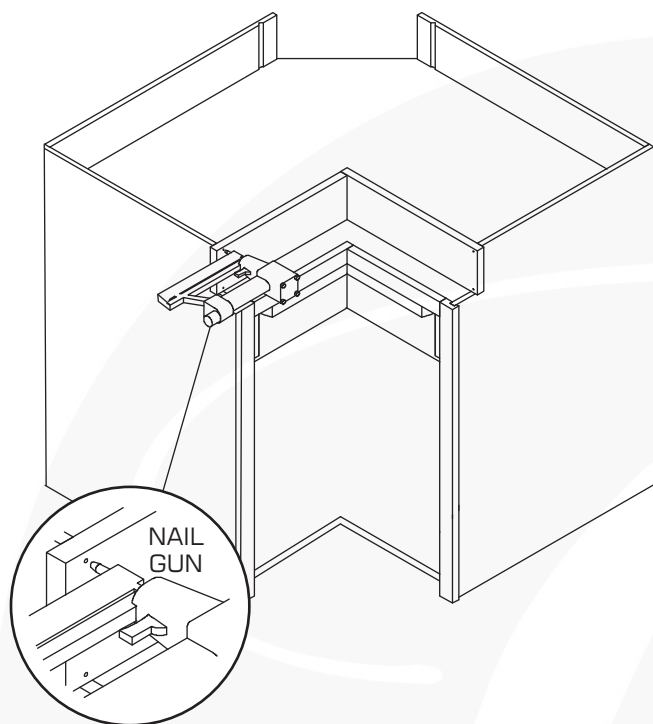


**STEP  
22**

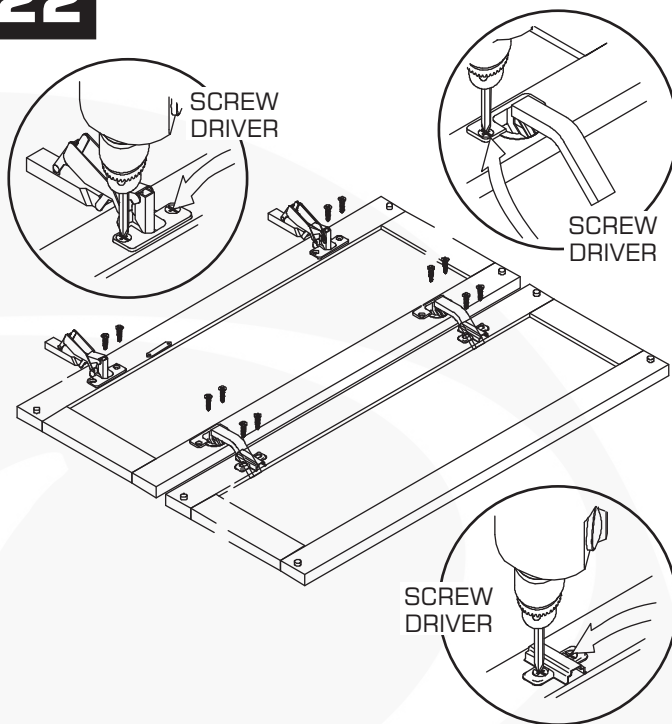




**STEP  
23**

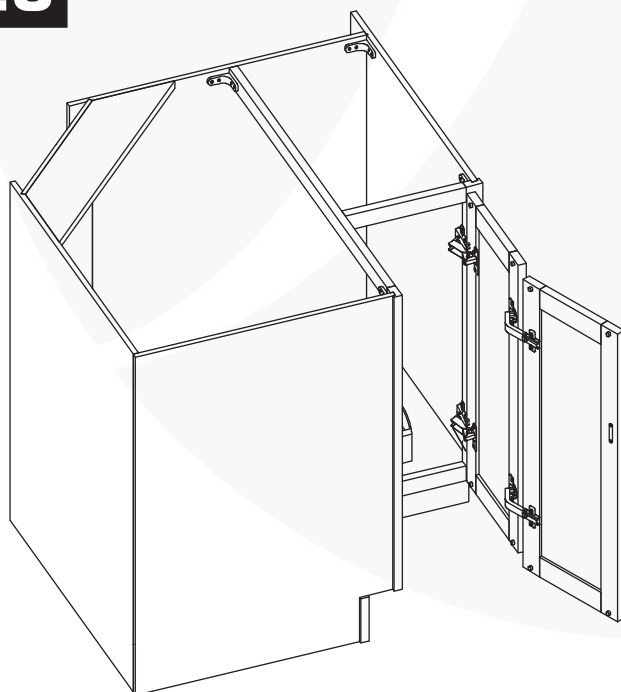

**STEP  
24**

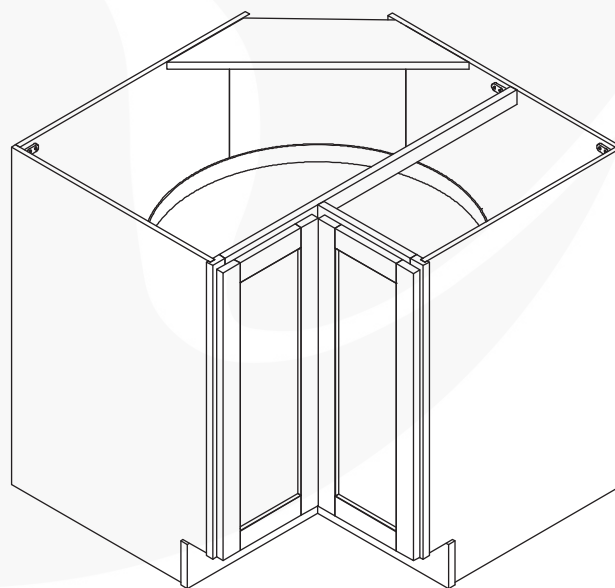


# ASSEMBLING INSTRUCTIONS - BLIND CORNER BASE CABINET

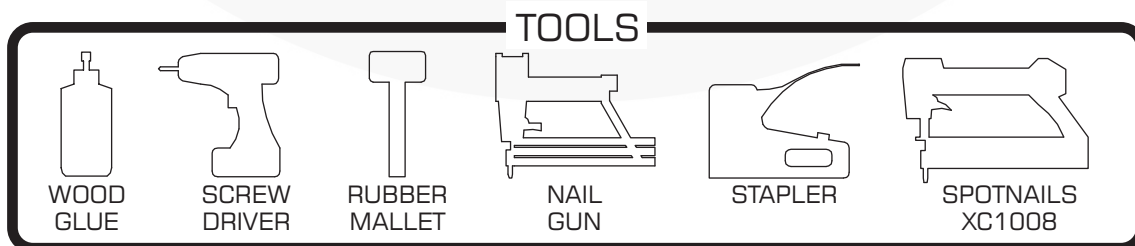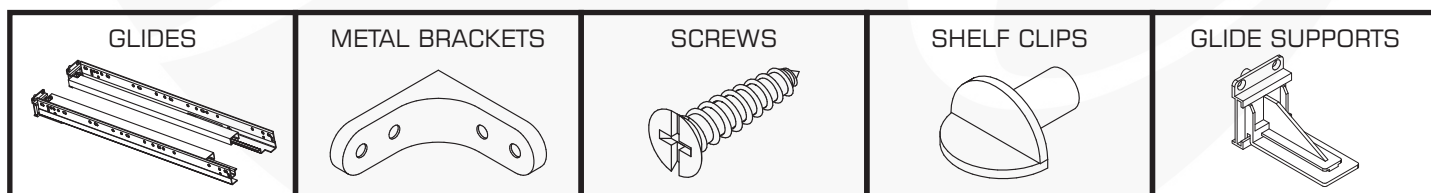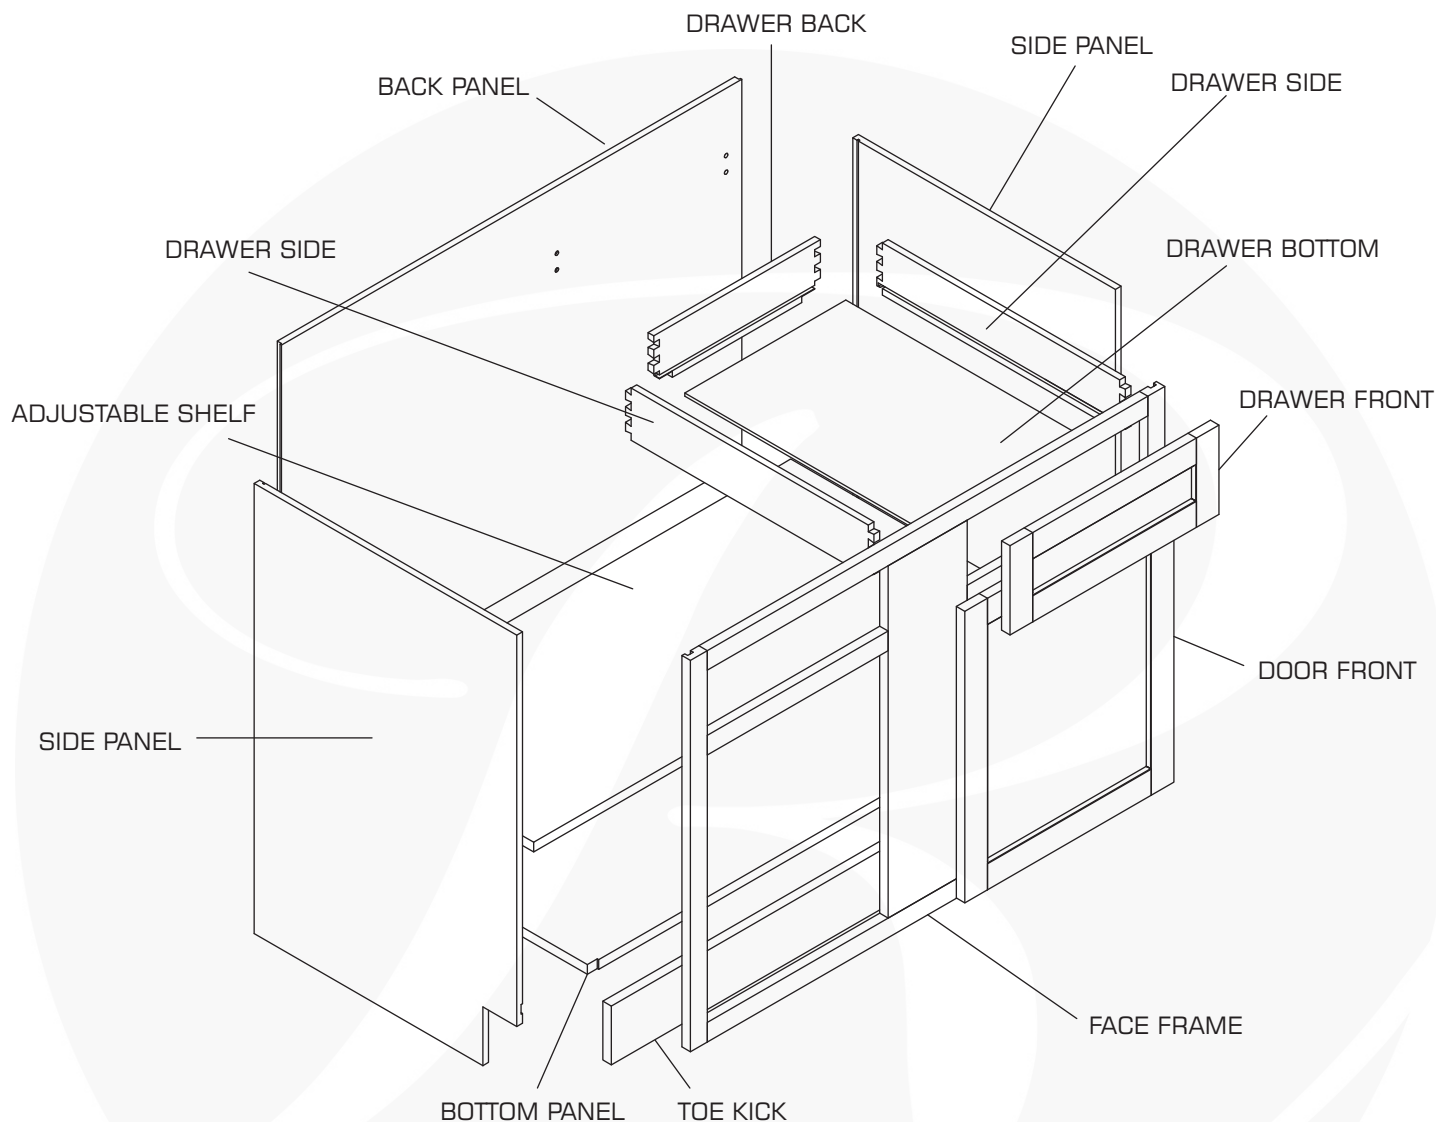


**STEP 1**


WOOD  
GLUE

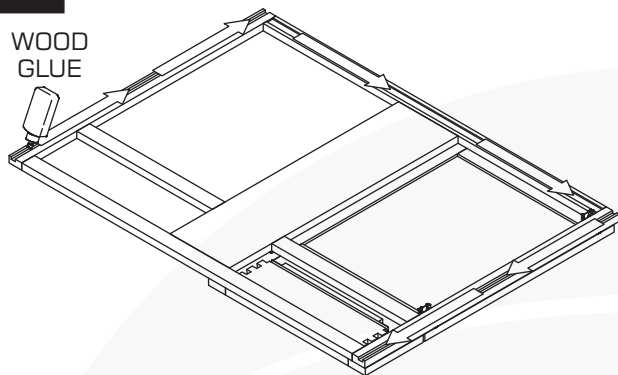


**STEP 2**

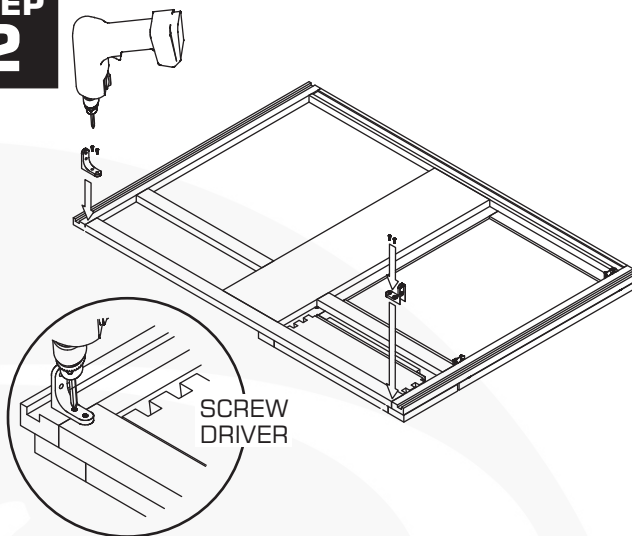


**STEP 3**

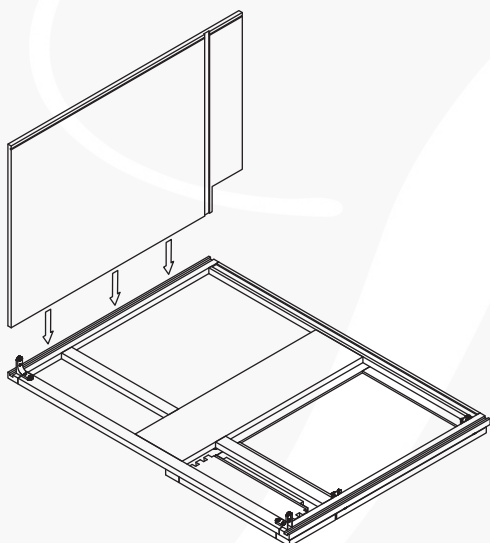


**STEP 4**

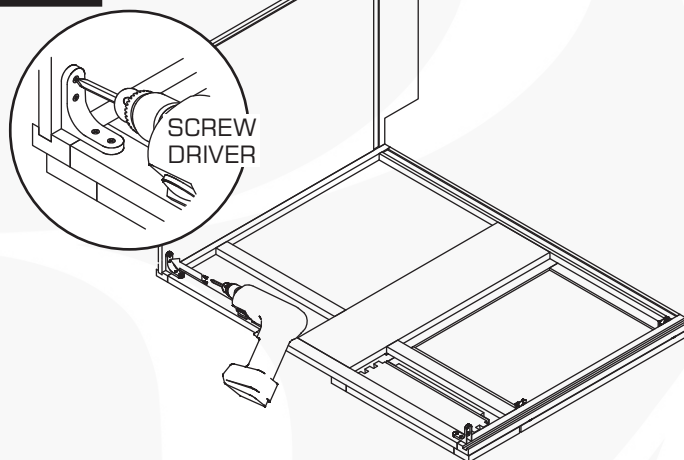


**STEP 5**

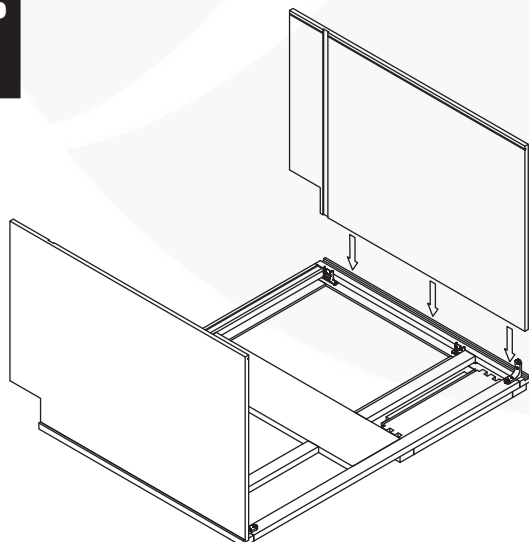


**STEP 6**

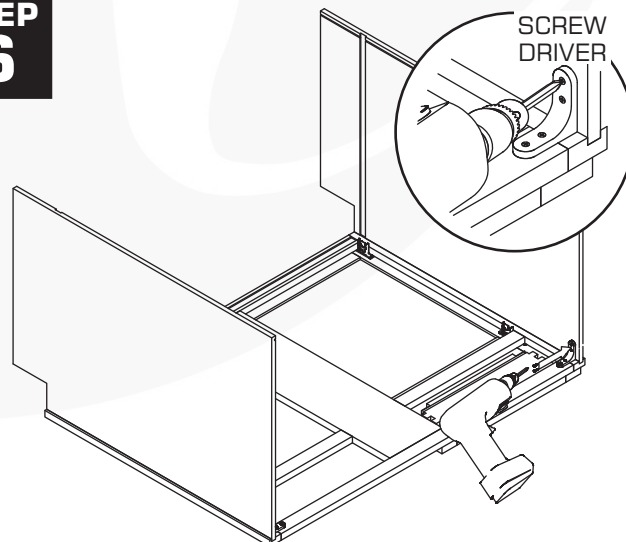


**STEP  
7**

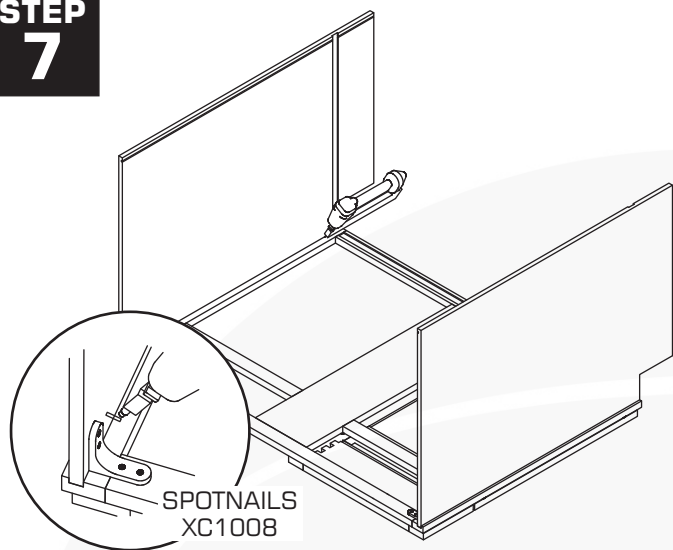


**STEP  
8**

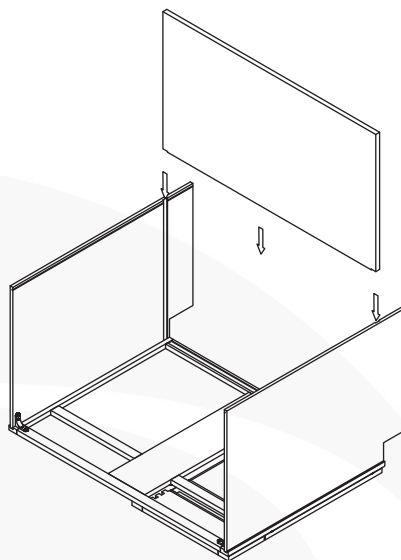


**STEP  
9**

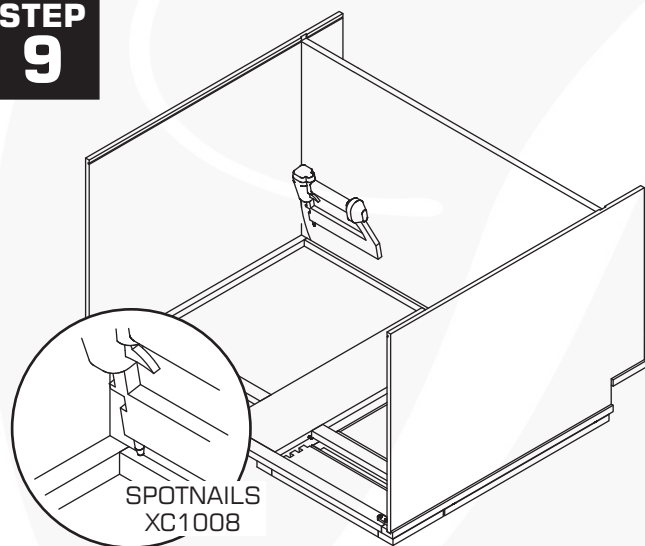


**STEP  
10**

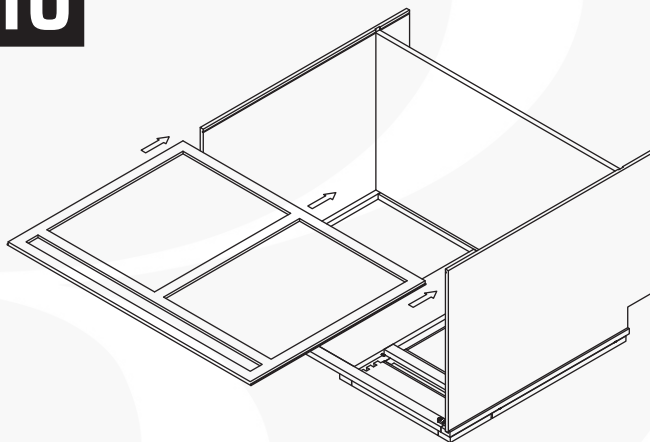


**STEP  
11**

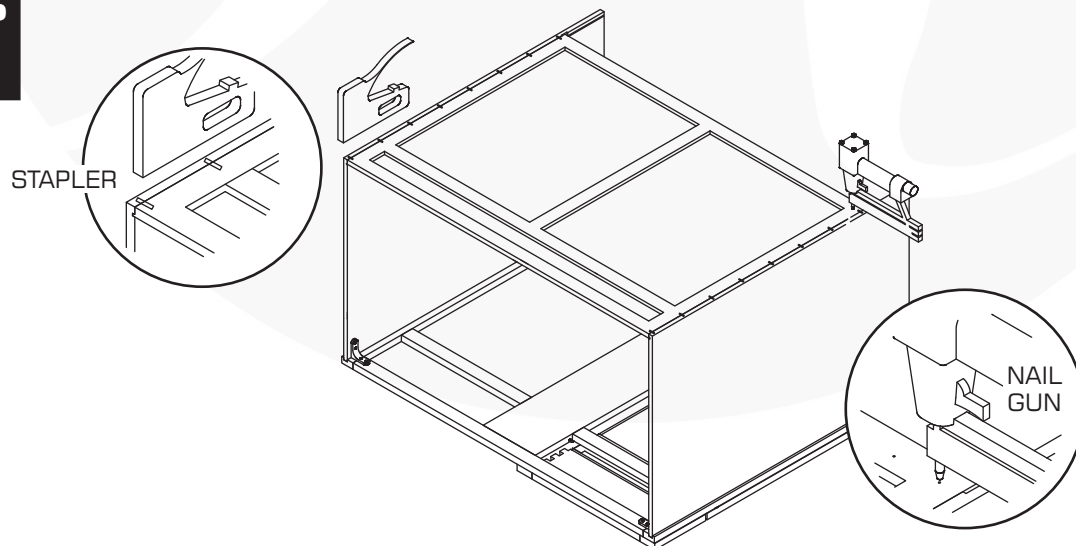


**STEP  
12**

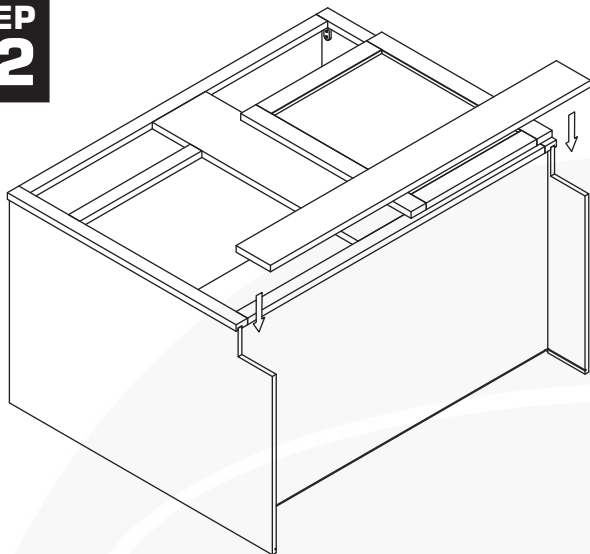


**STEP  
13**

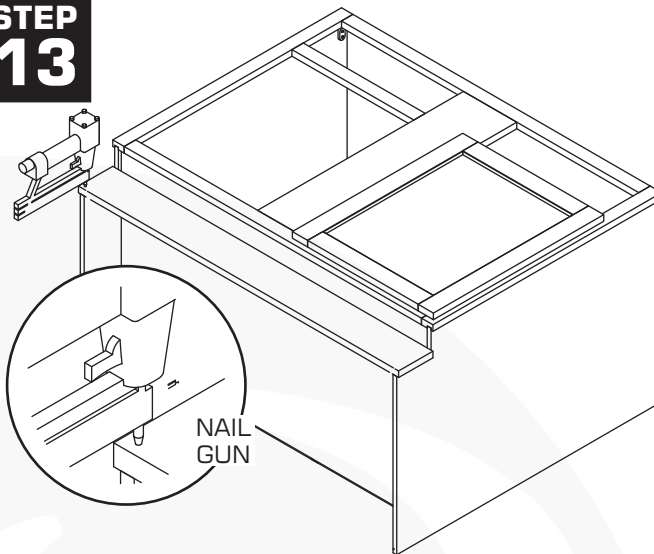


**STEP  
14**

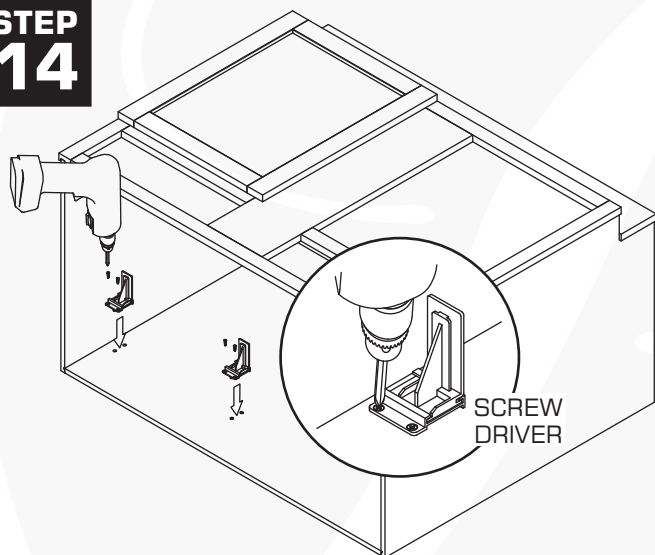


**STEP  
15**

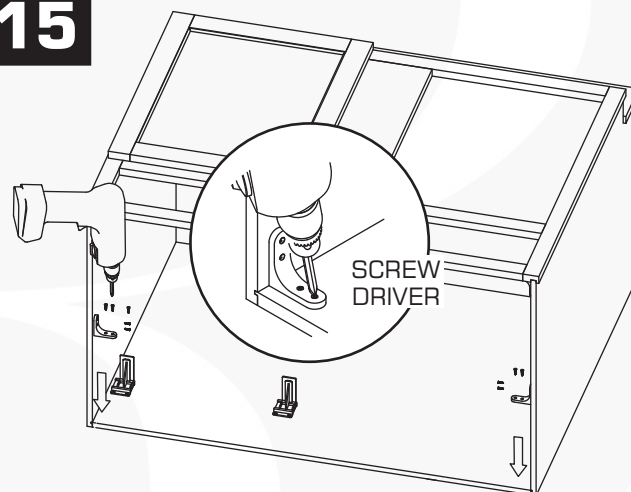


**STEP  
16**

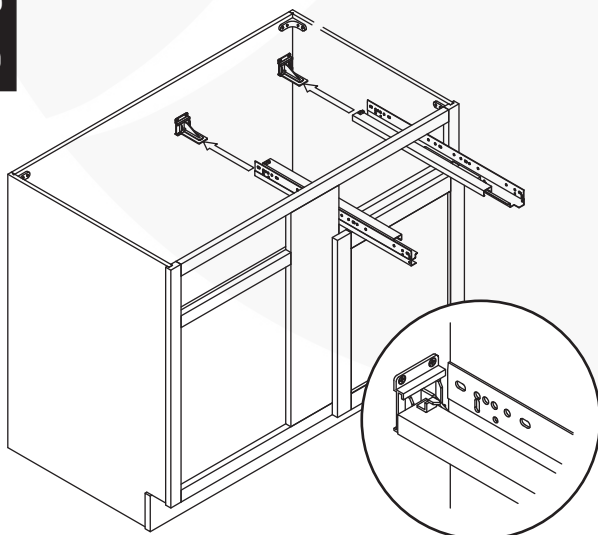


**STEP  
17**

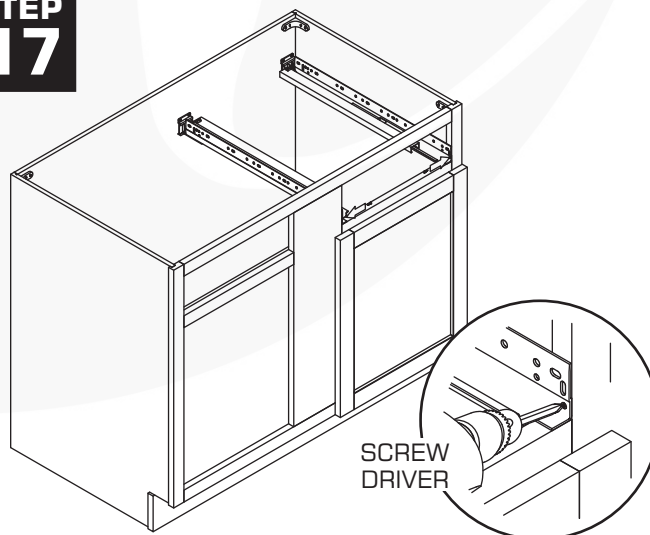


**STEP  
18**

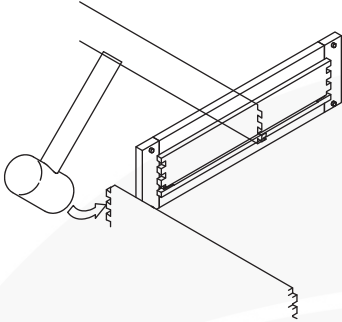


**STEP  
19**

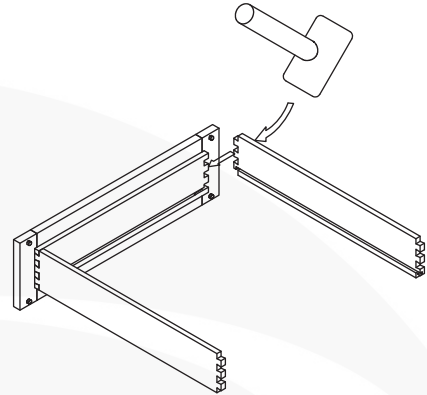


**STEP  
20**

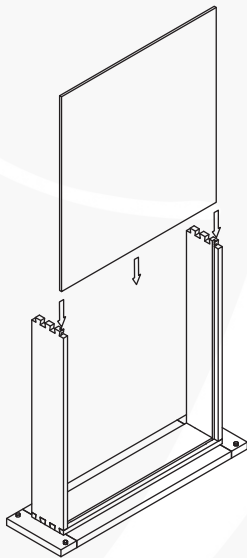


**STEP  
21**

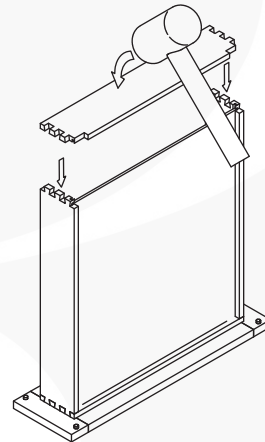


**STEP  
22**

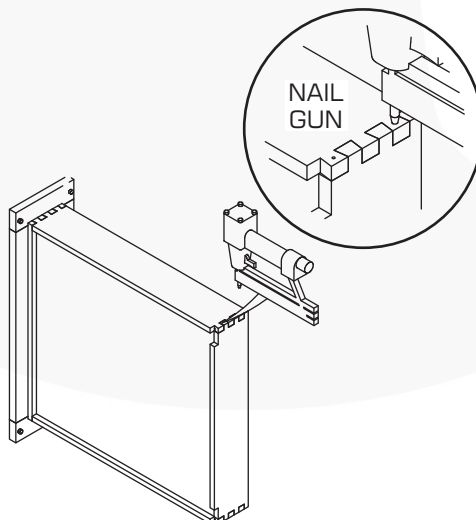


**STEP  
23**

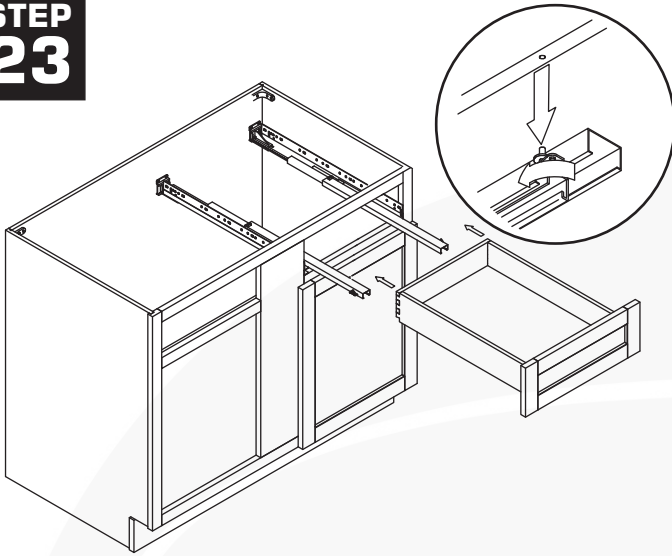


**STEP  
24**

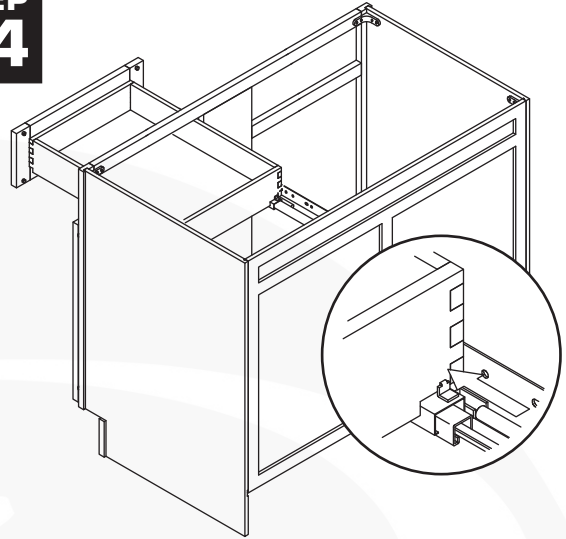



**STEP  
25**

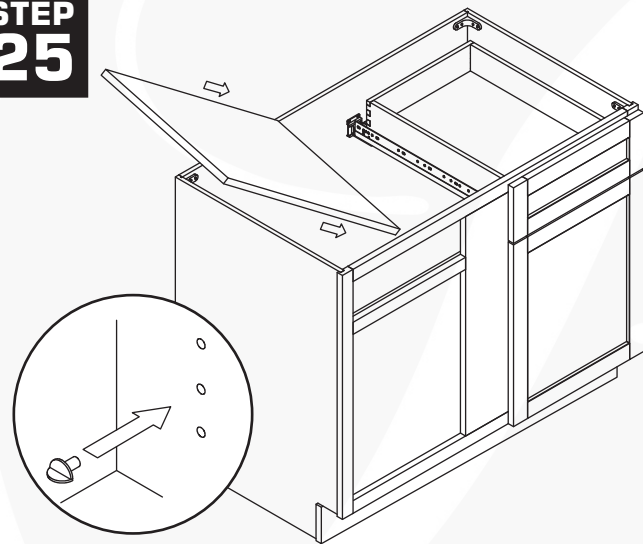

**STEP  
26**

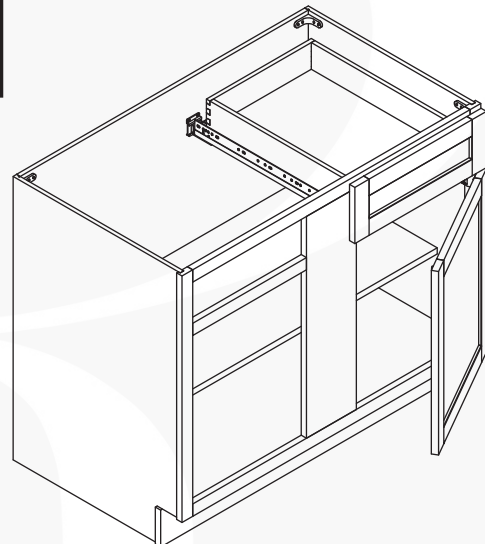


# ASSEMBLING INSTRUCTIONS - BASE 3 DRAWERS

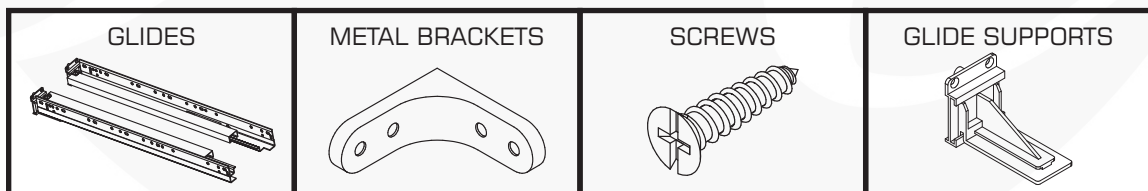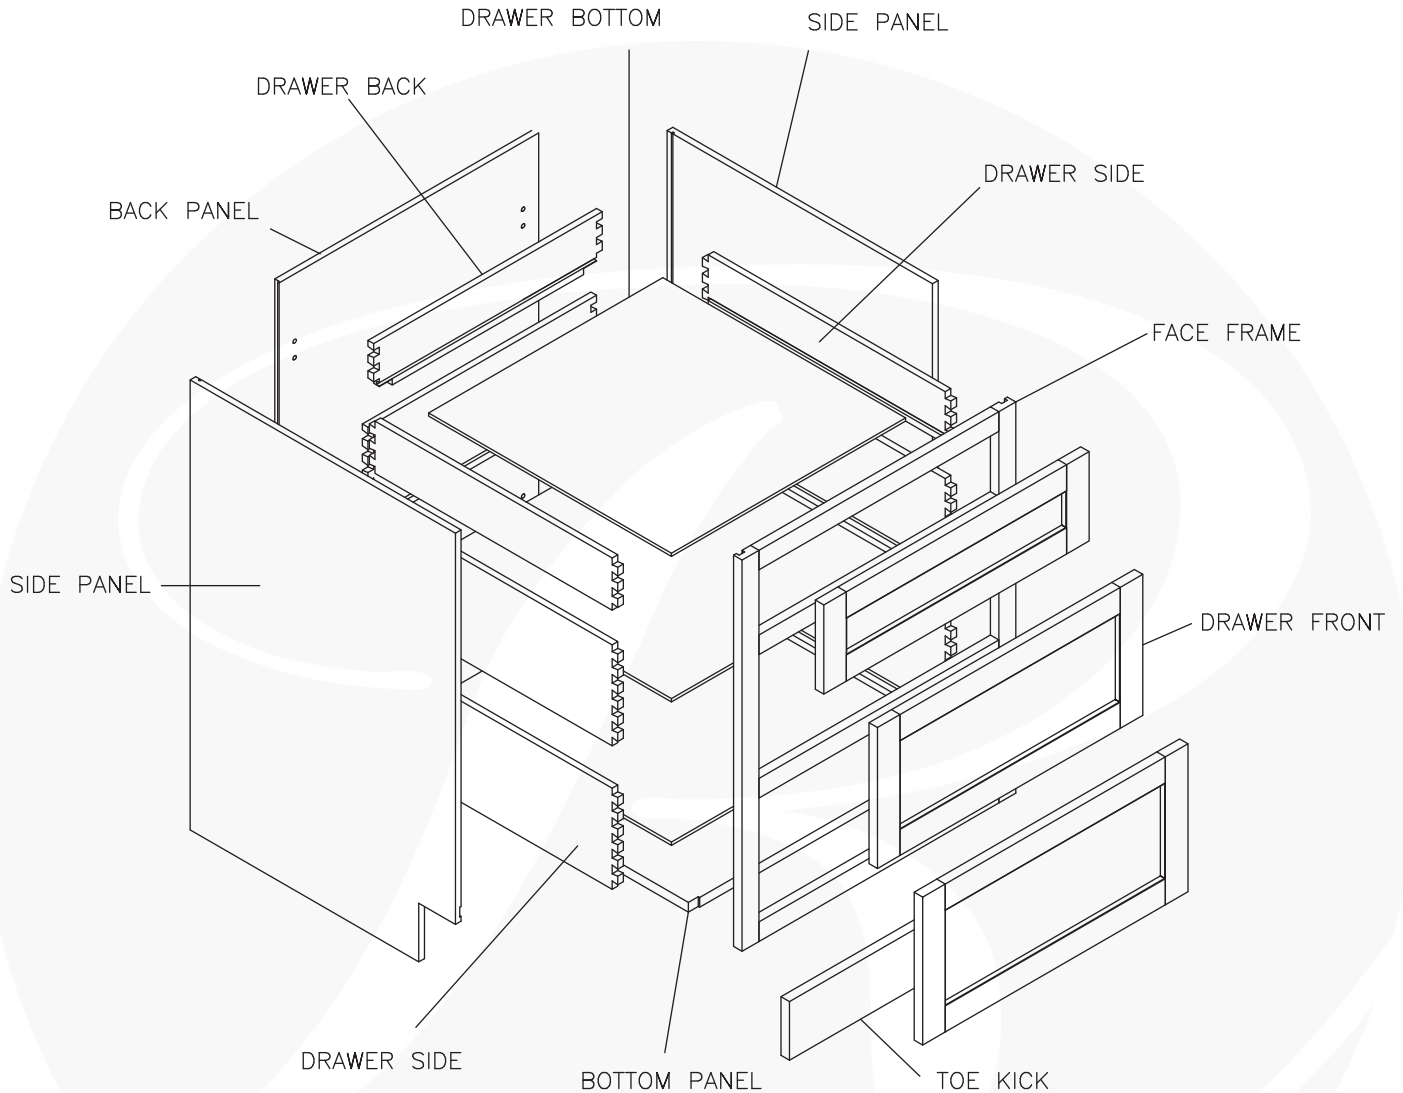


**STEP 1**


WOOD  
GLUE

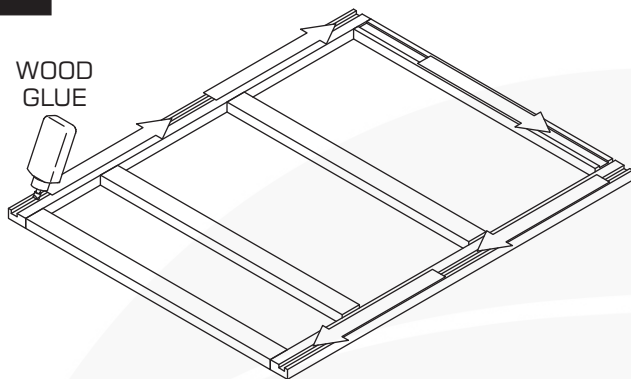


**STEP 2**

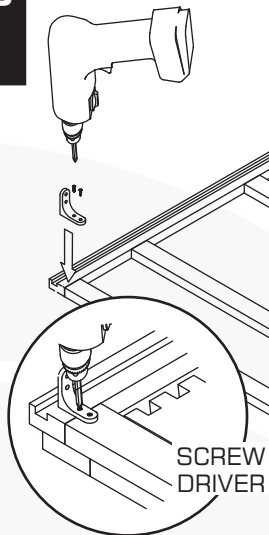


**STEP 3**

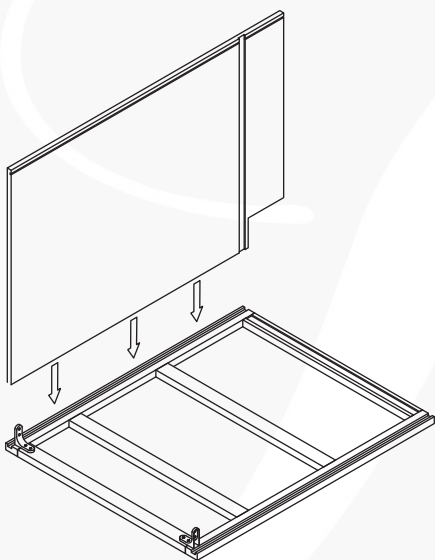


**STEP 4**

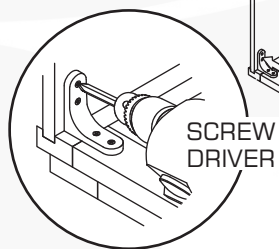


**STEP 5**

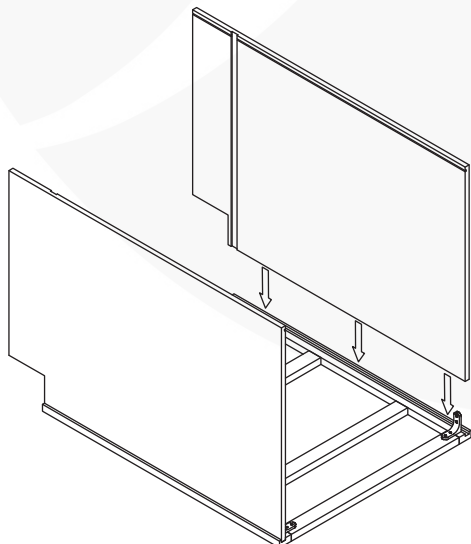


**STEP 6**

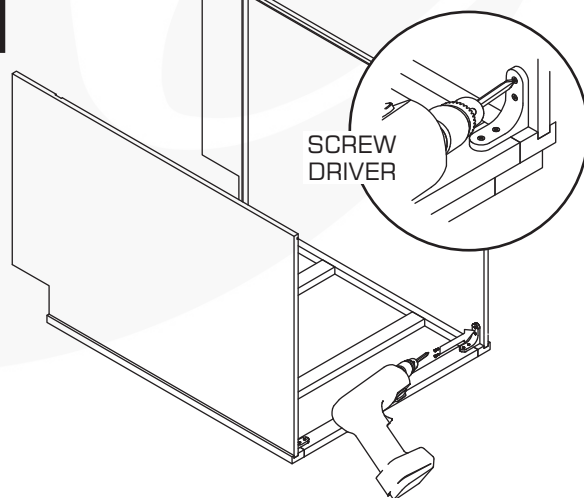


**STEP  
7**

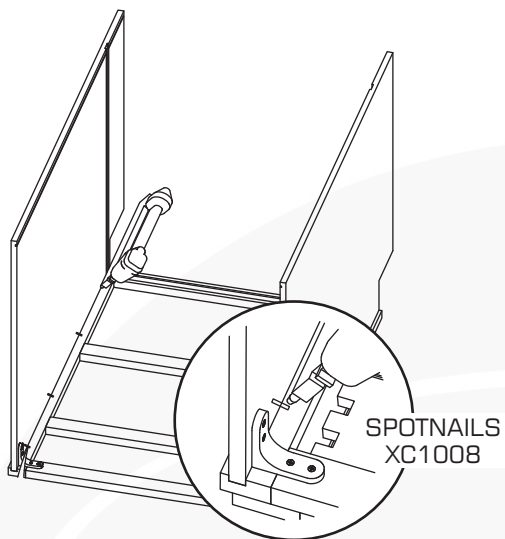


**STEP  
8**

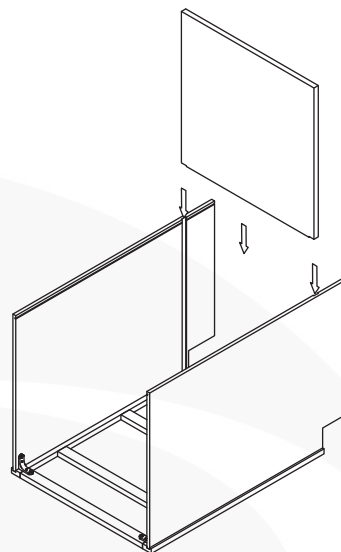


**STEP  
9**

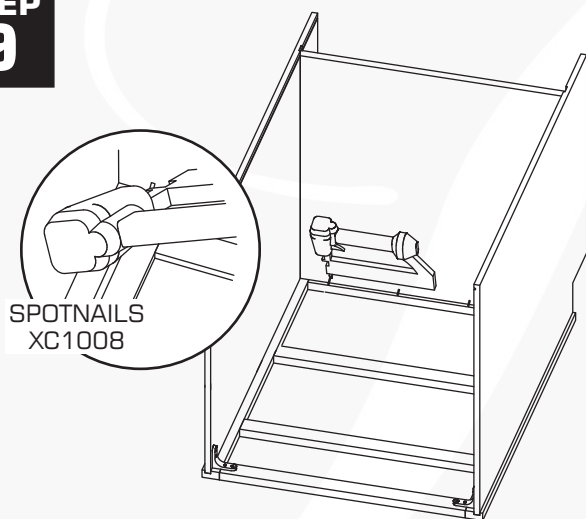


**STEP  
10**

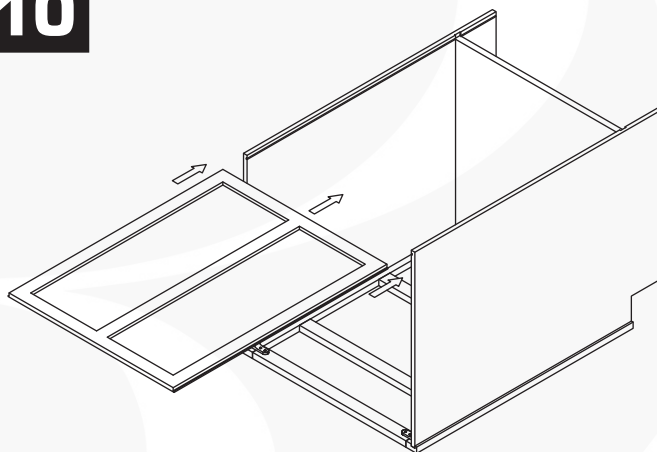


**STEP  
11**

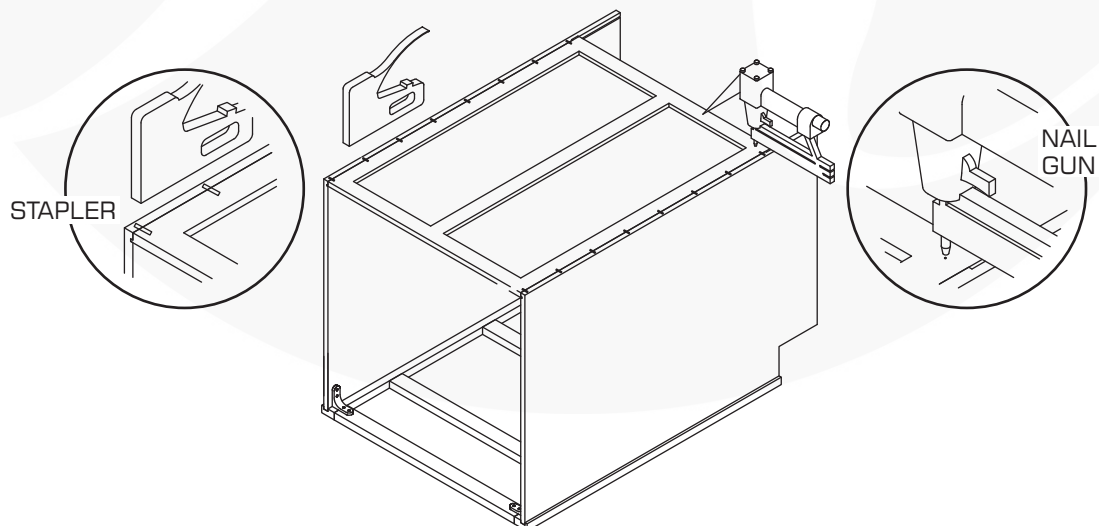


**STEP  
12**

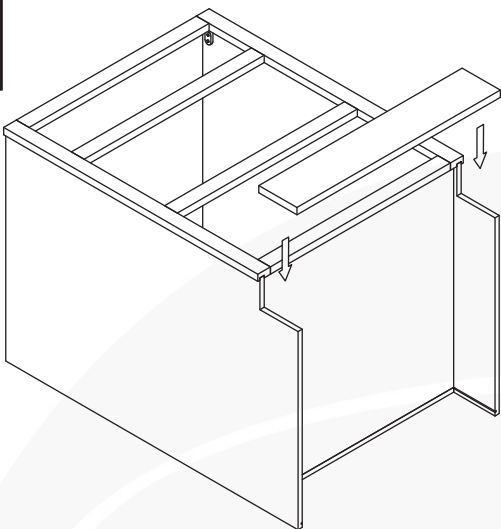


**STEP  
13**

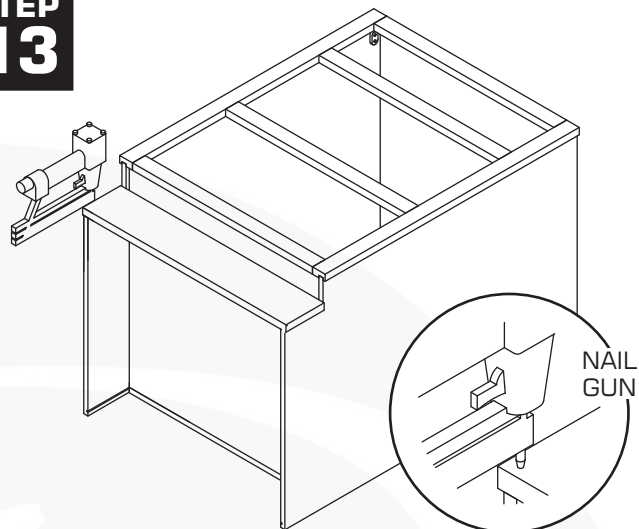


**STEP  
14**

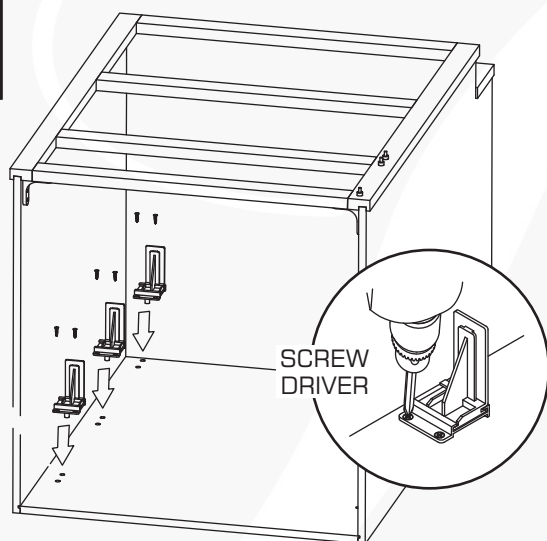


**STEP  
15**

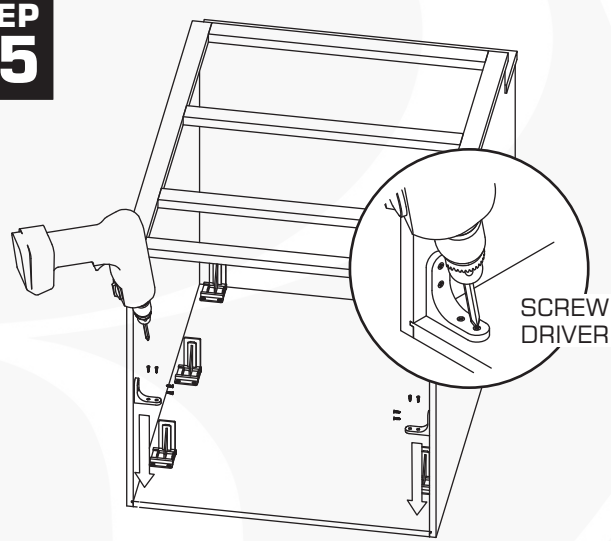


**STEP  
16**

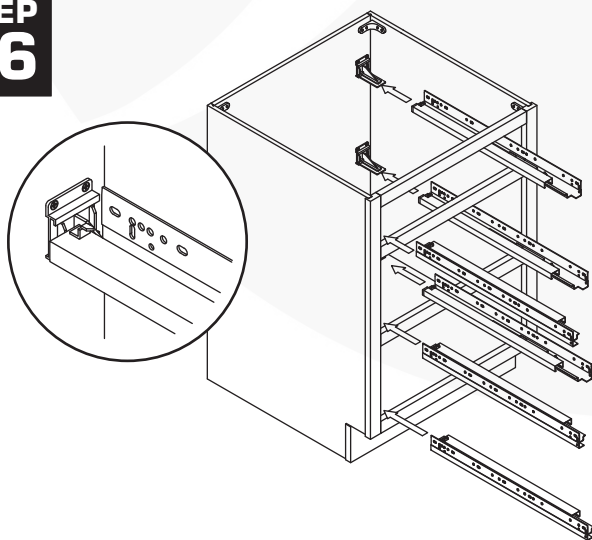


**STEP  
17**

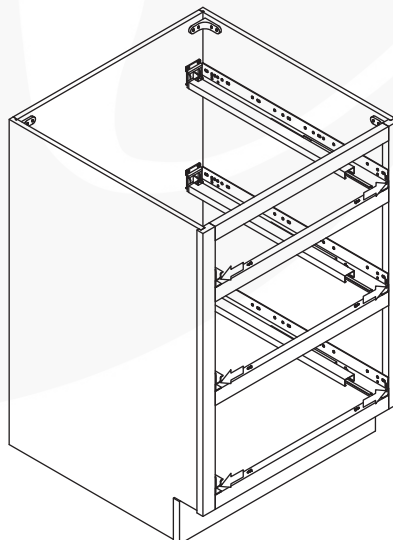


**STEP  
18**

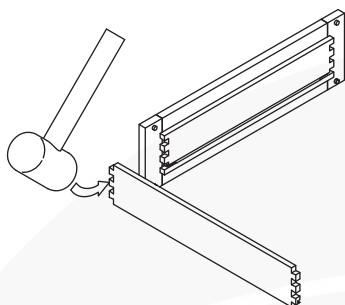


**STEP  
19**

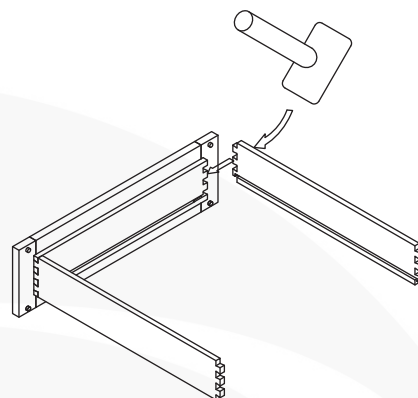


**STEP  
20**

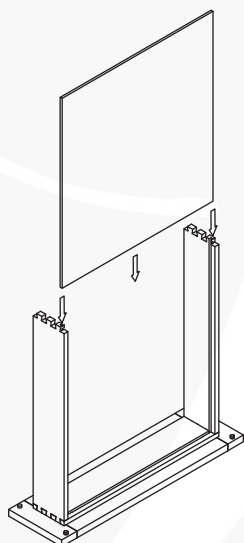


**STEP  
21**

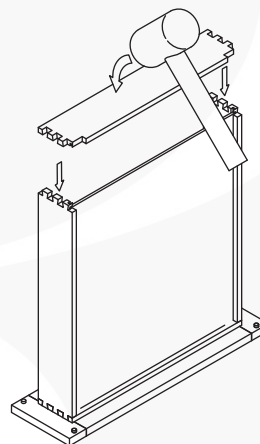


**STEP  
22**

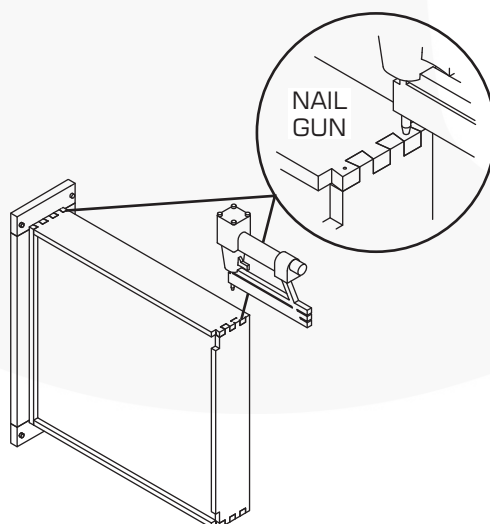


**STEP  
23**

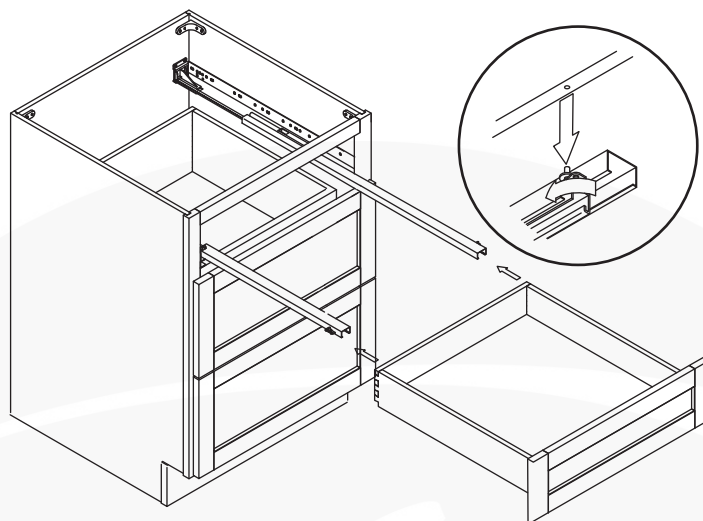

**STEP  
24**


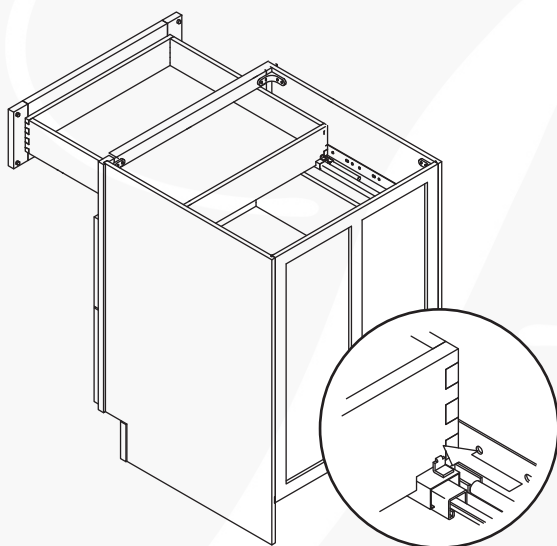


**STEP  
25**

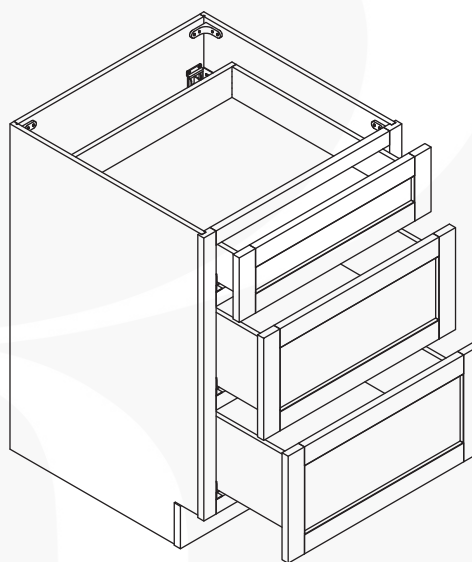


# ASSEMBLING INSTRUCTIONS - WALL CABINET


WALL CABINET

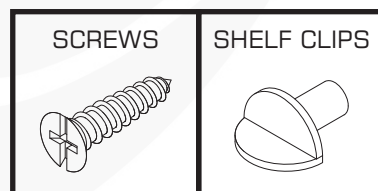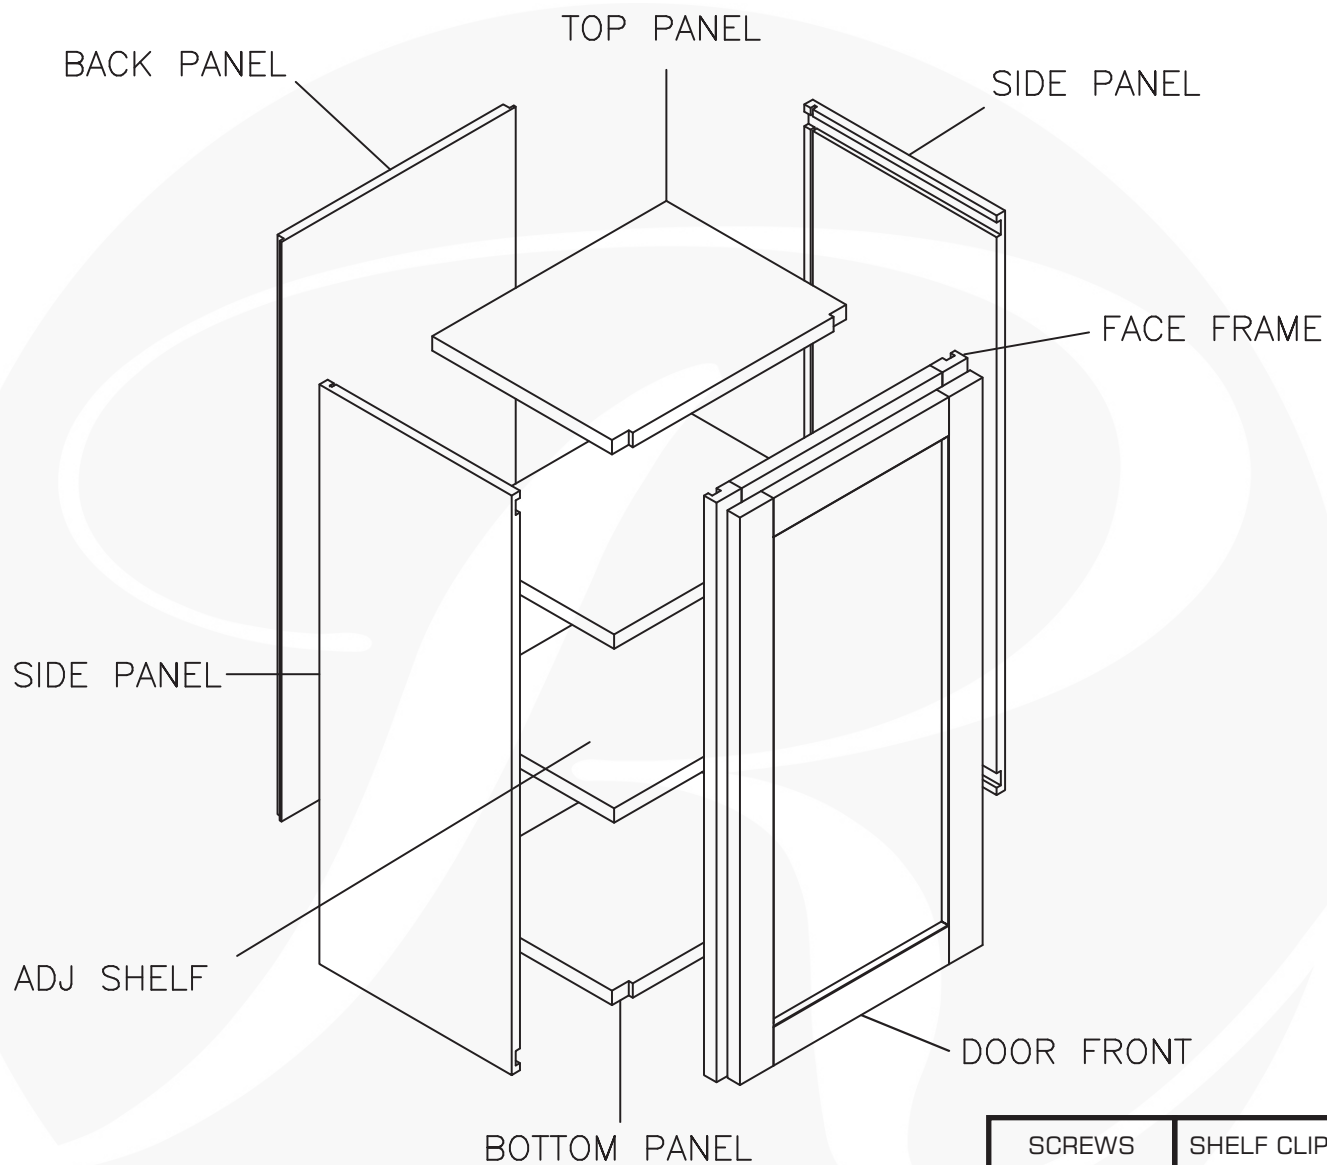


## TOOLS

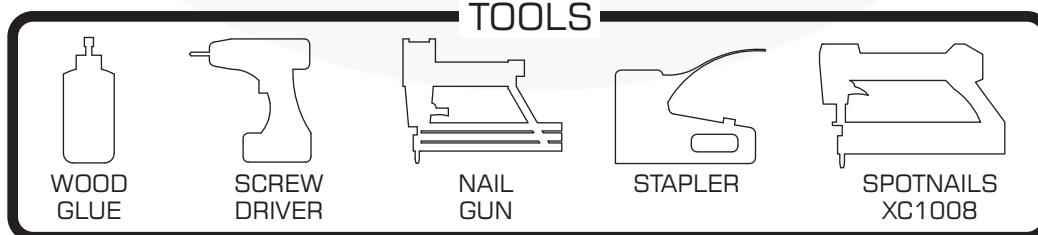


**STEP 1**

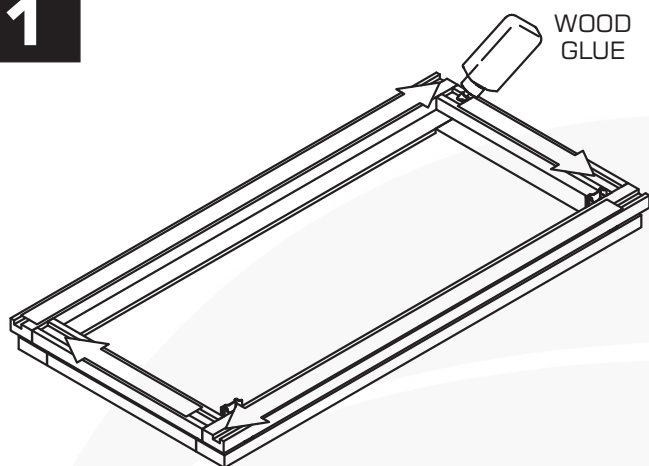


**STEP 2**

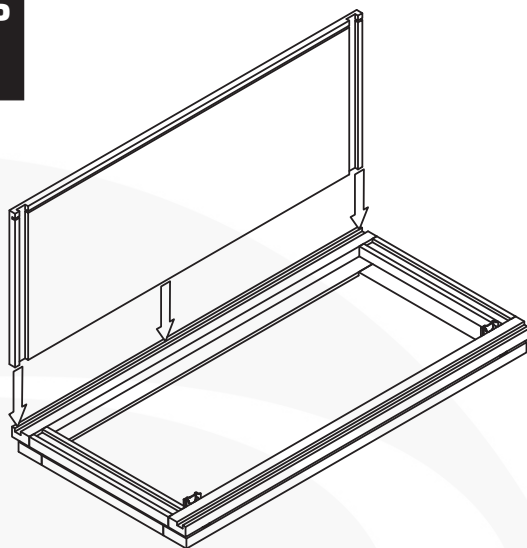


**STEP 3**

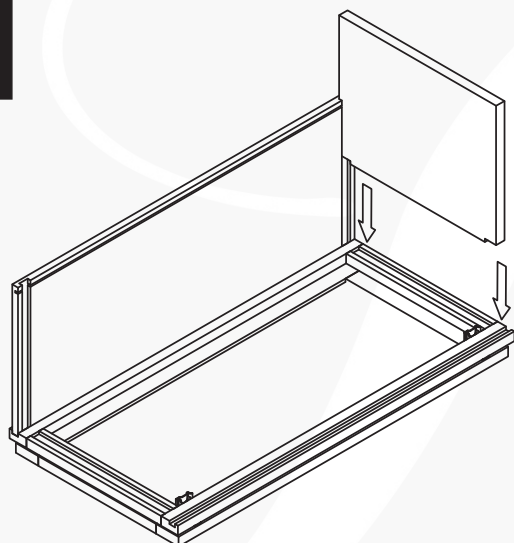


**STEP 4**

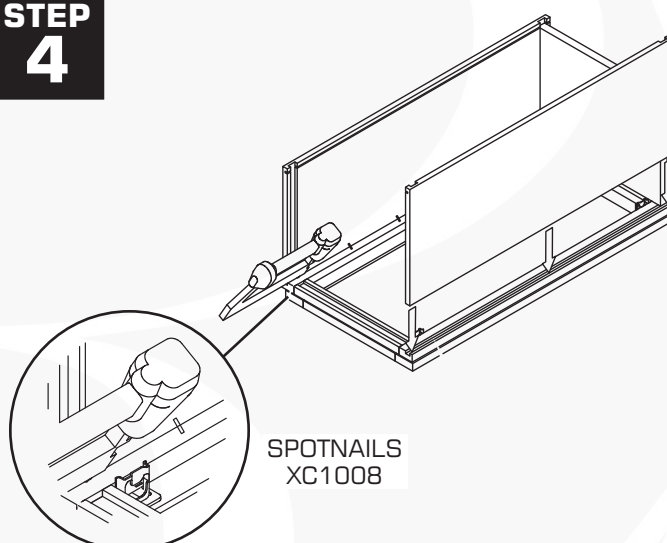


**STEP 5**

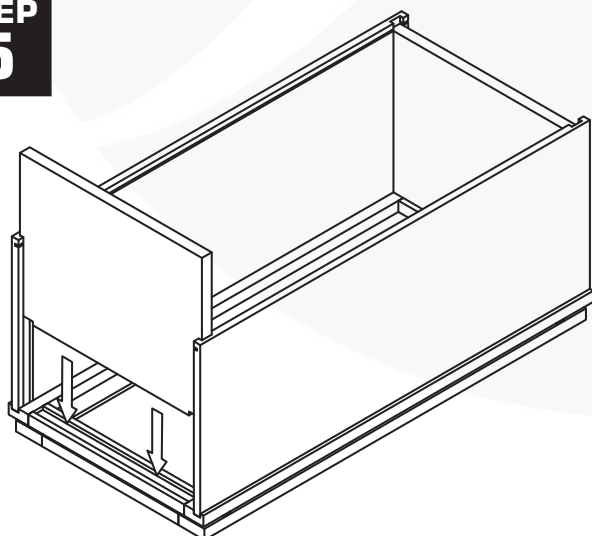


**STEP 6**

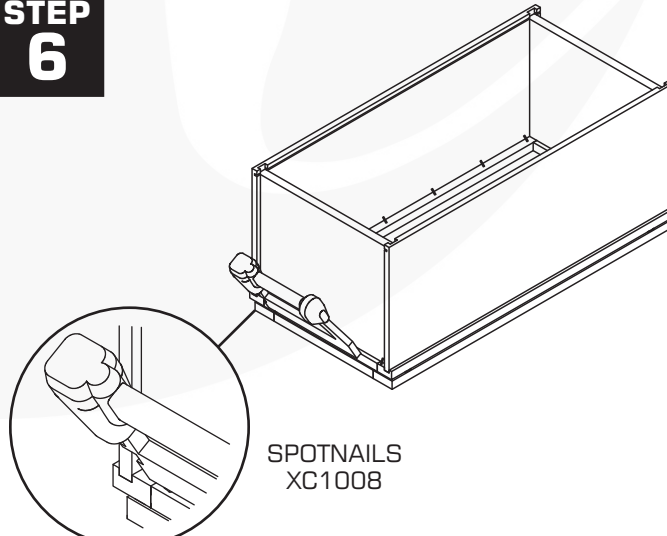


**STEP  
7**

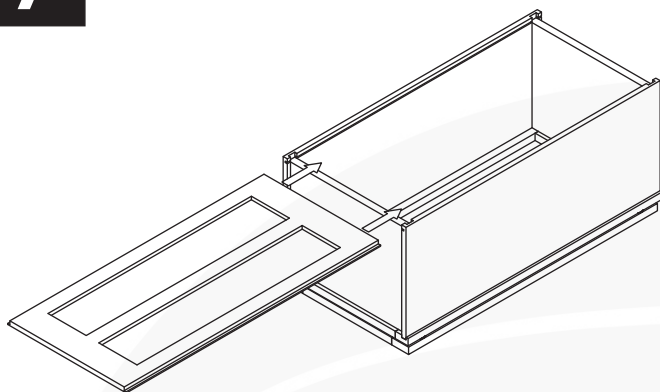


**STEP  
8**

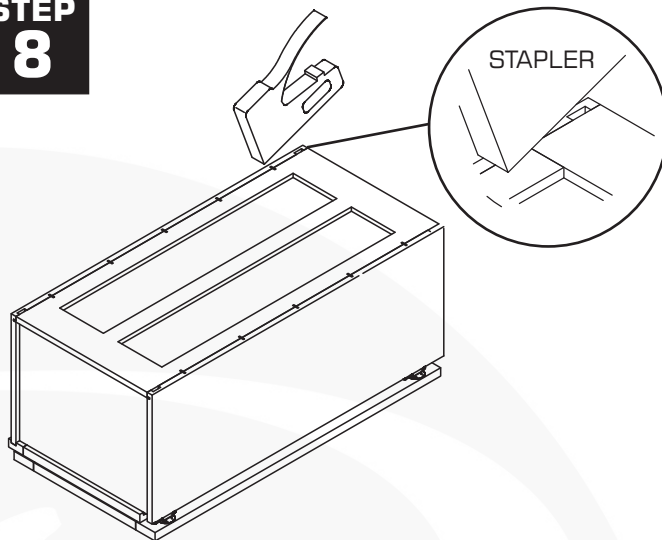


**STEP  
9**

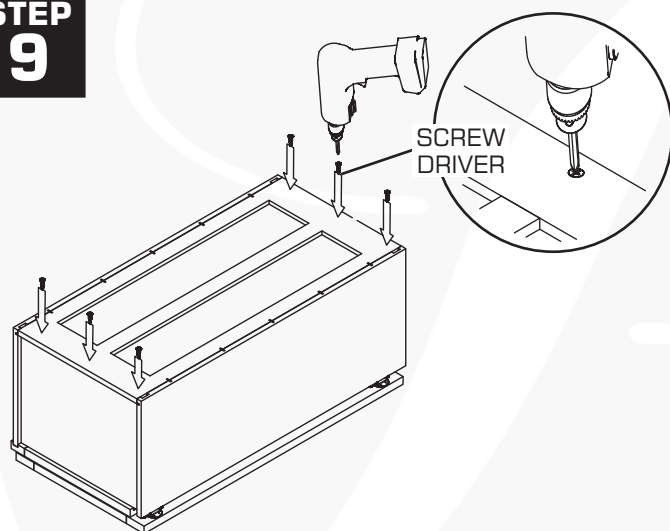


**STEP  
10**

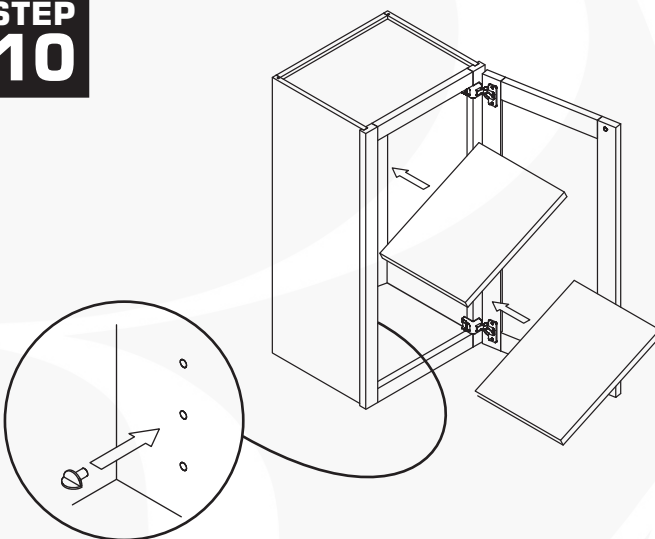


**STEP  
11**

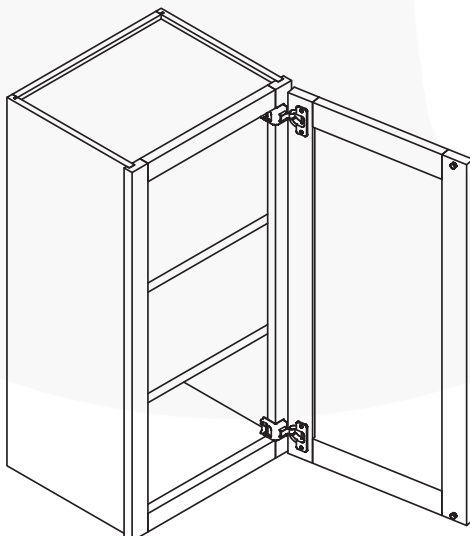


# ASSEMBLING INSTRUCTIONS - WALL DIAGONAL CORNER CABINET

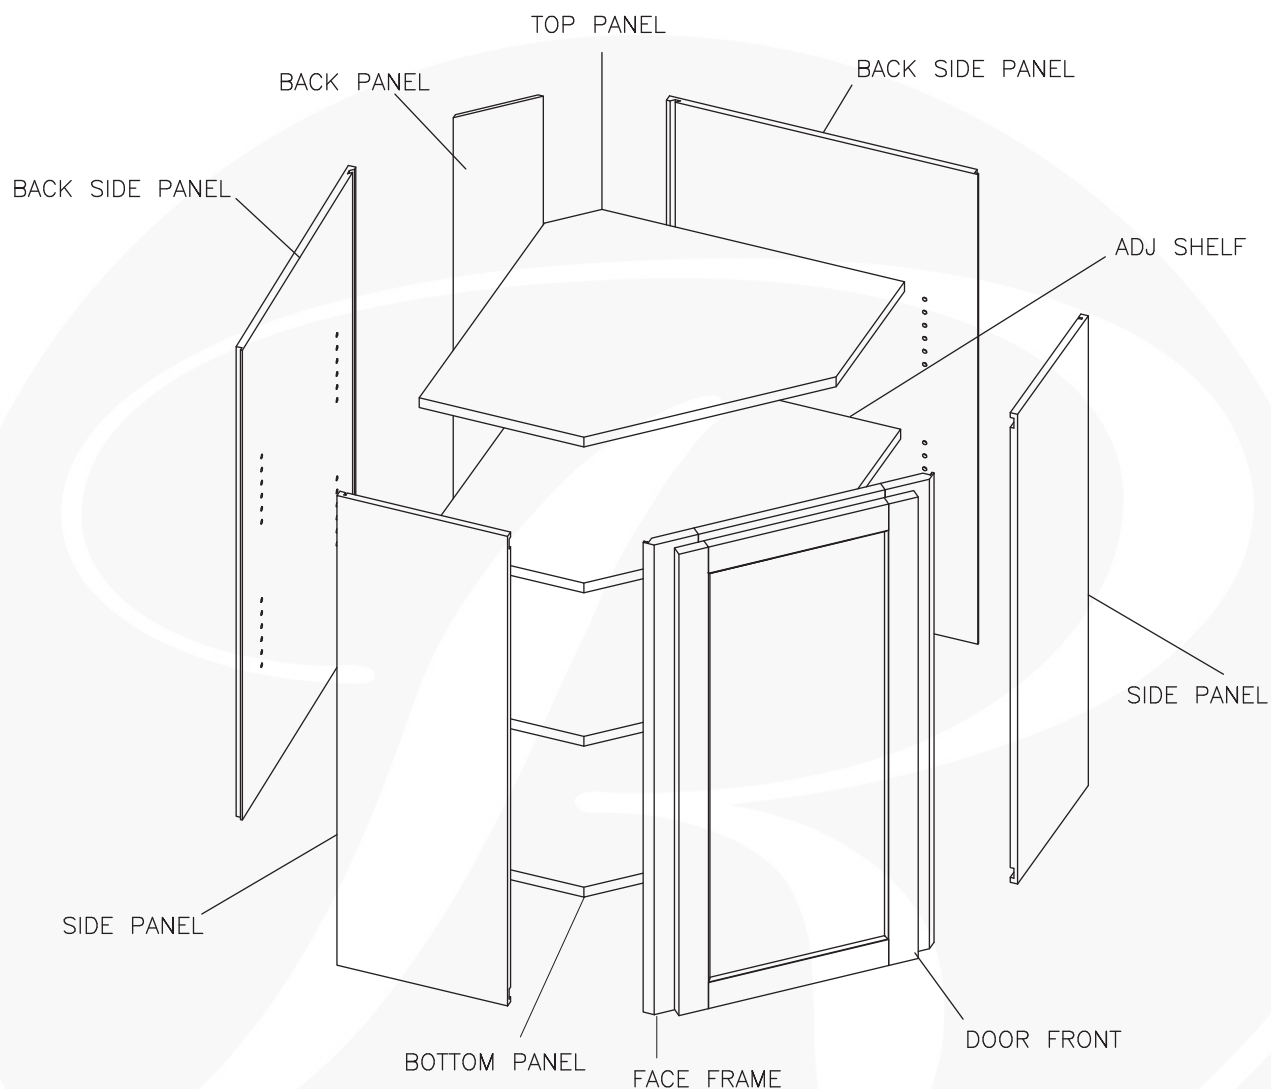


## METAL BRACKETS

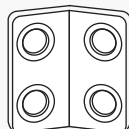

## SCREWS

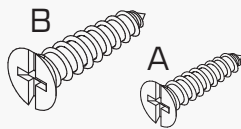

## SHELF CLIPS

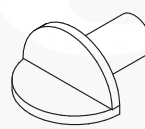

## TOOLS




WOOD  
GLUE



SCREW  
DRIVER



NAIL  
GUN

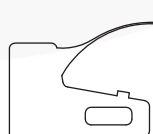


STAPLER




SPOTNAILS  
XC1008


**STEP 1**

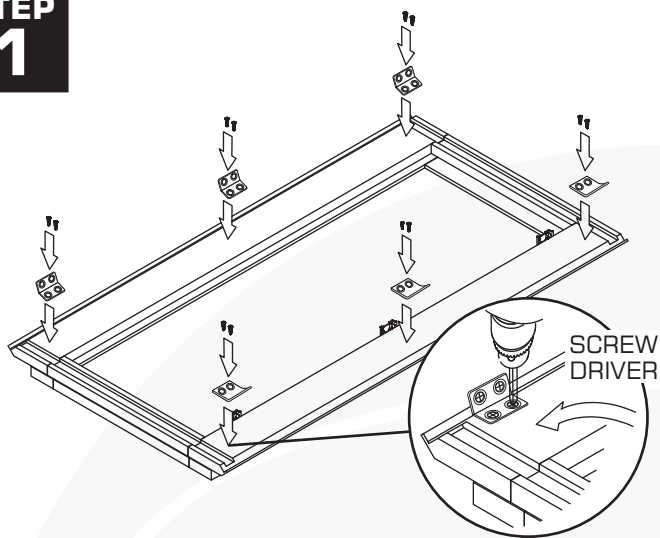


**STEP 2**

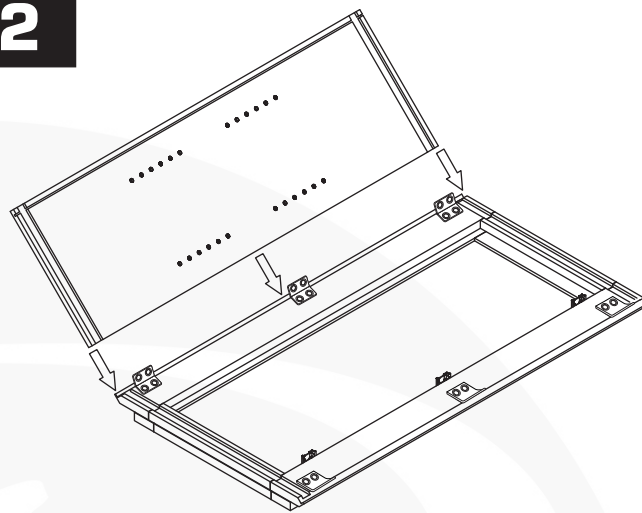


**STEP 3**

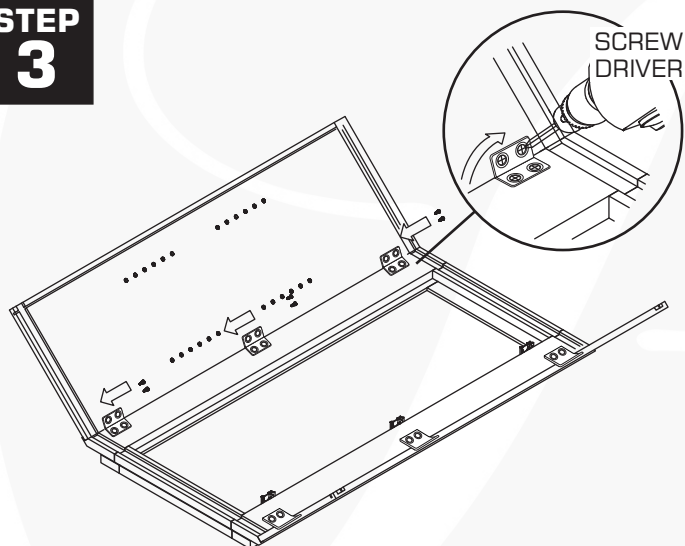


**STEP 4**

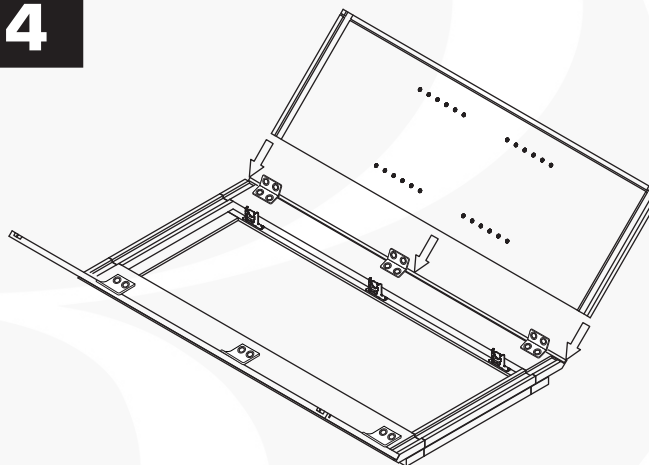


**STEP 5**

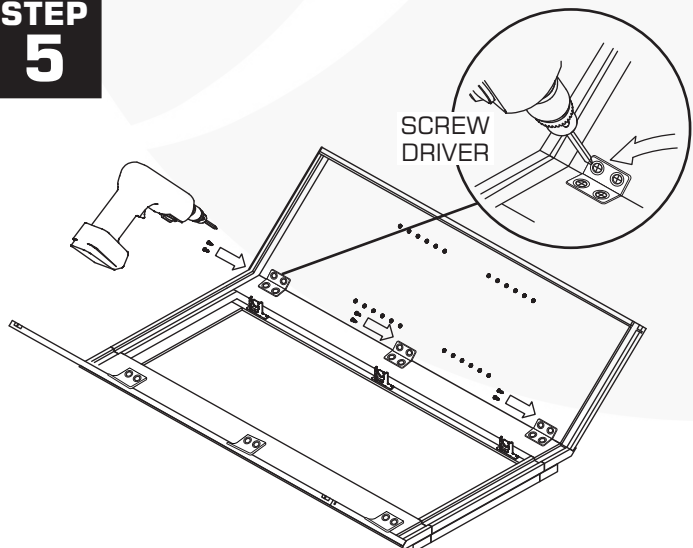


**STEP 6**

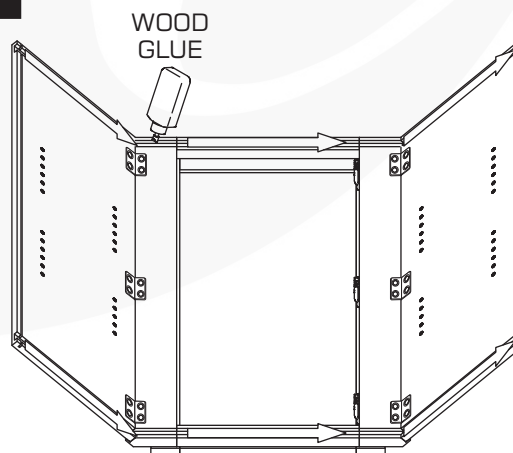


**STEP  
7**

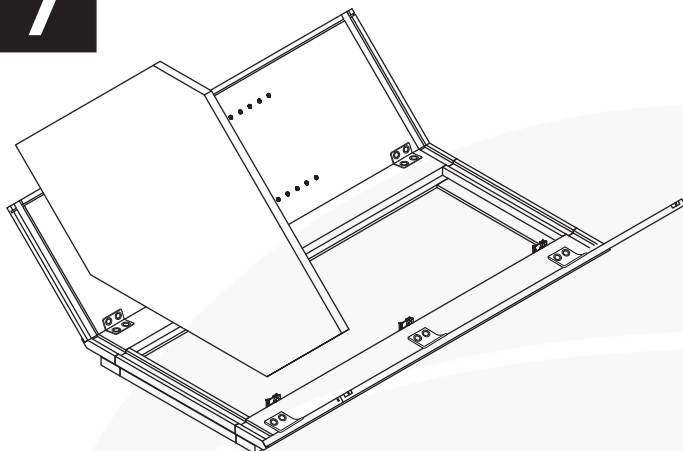


**STEP  
8**

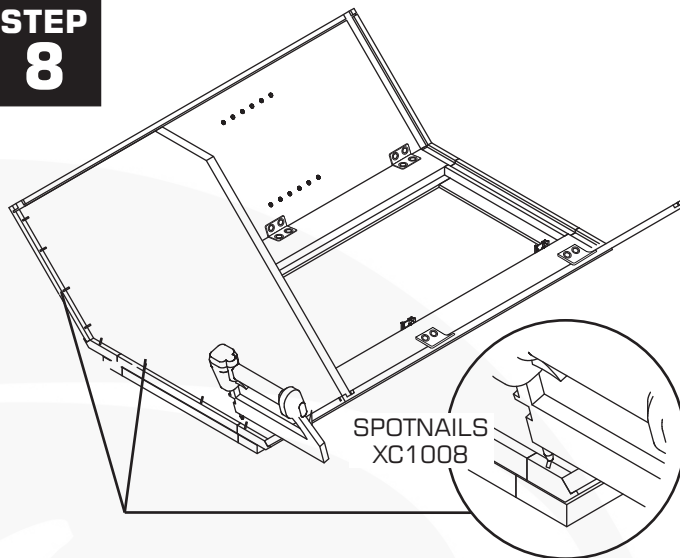


**STEP  
9**

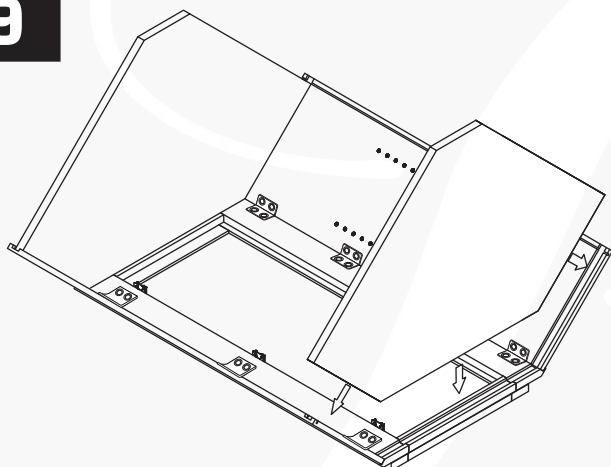


**STEP  
10**

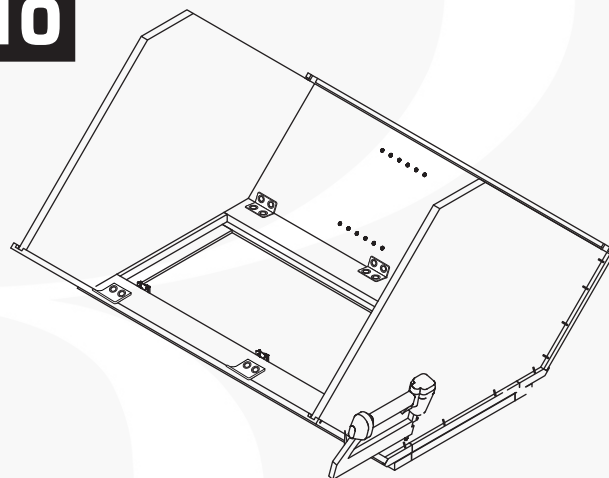


**STEP  
11**

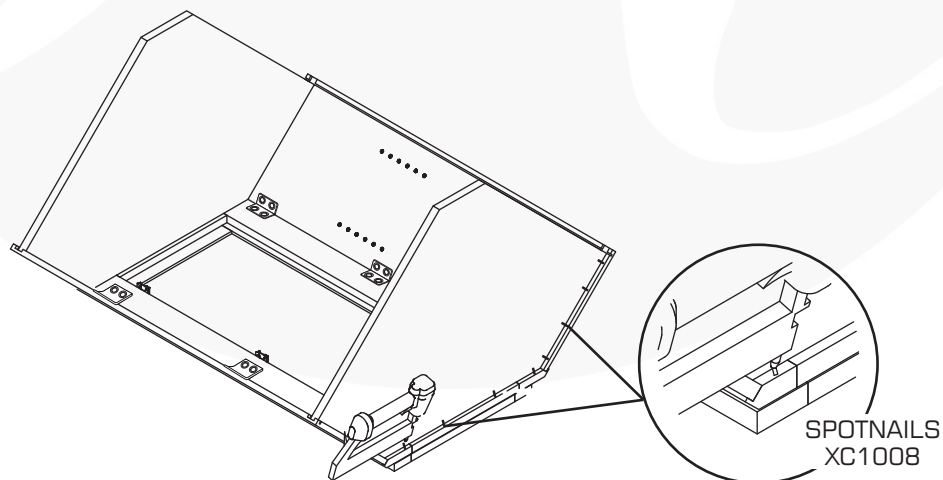


**STEP  
12**

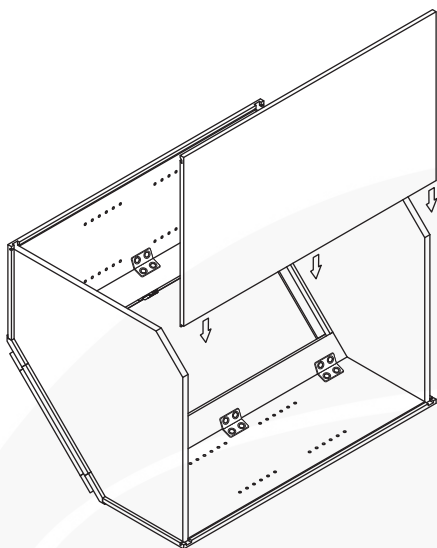


**STEP  
13**

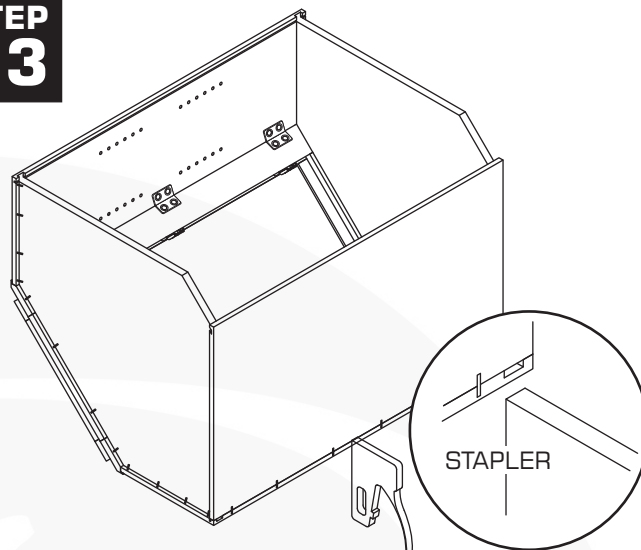


**STEP  
14**

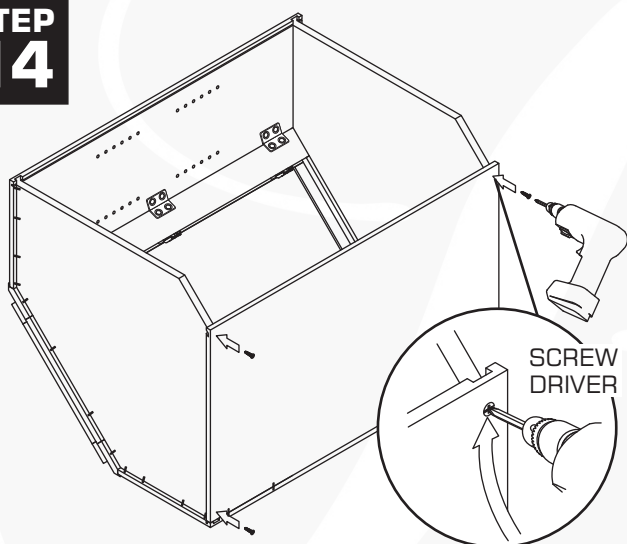


**STEP  
15**

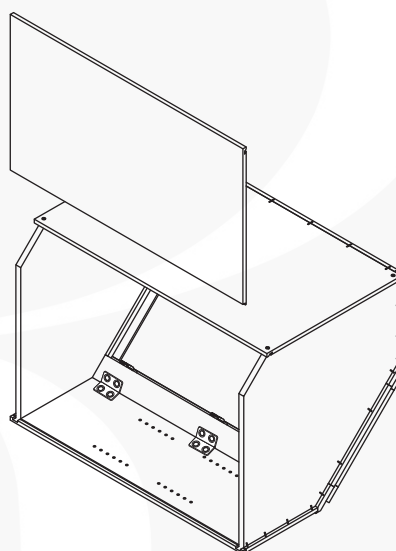


**STEP  
16**

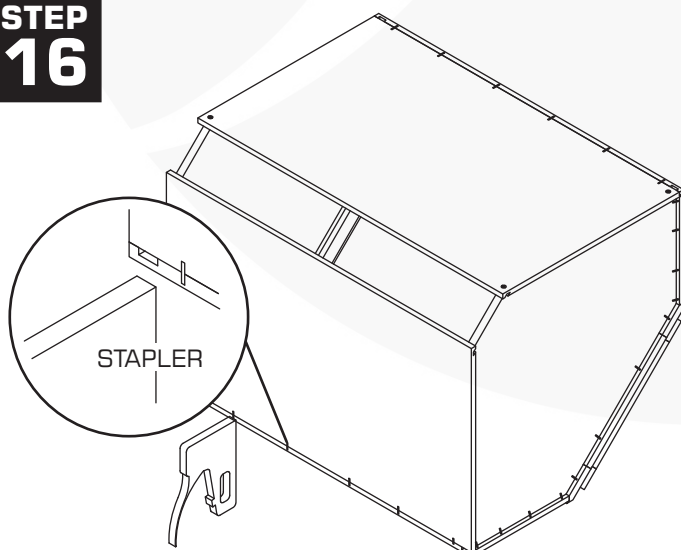


**STEP  
17**

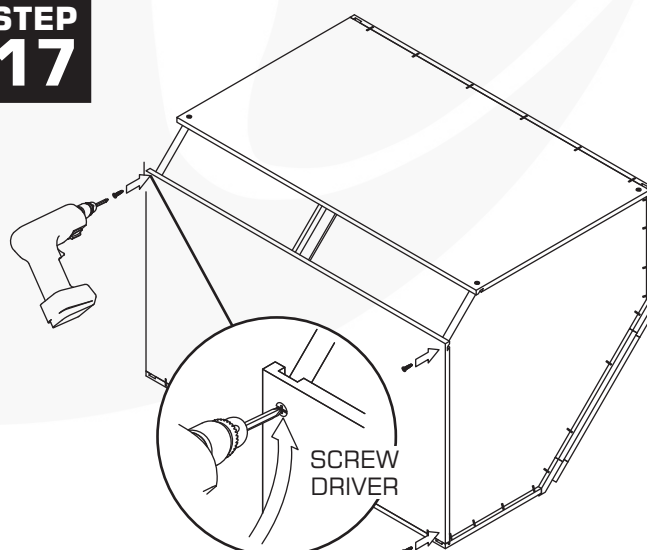


**STEP  
18**

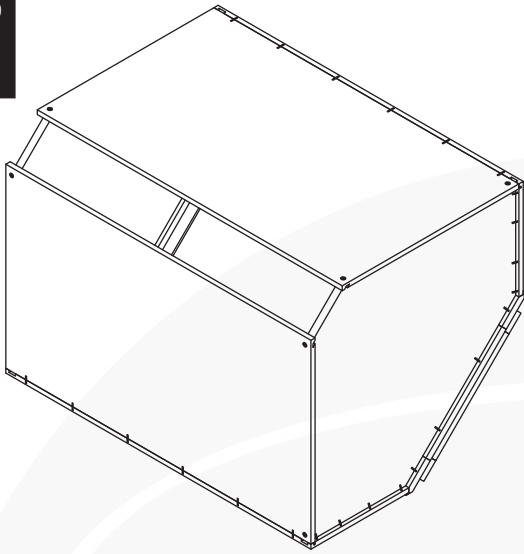


**STEP  
19**

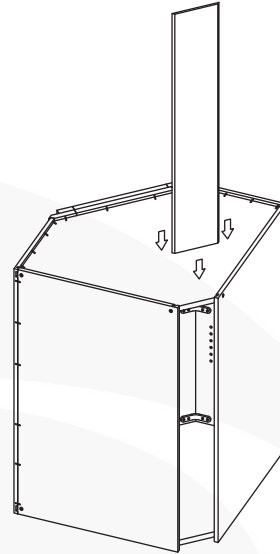


**STEP  
20**

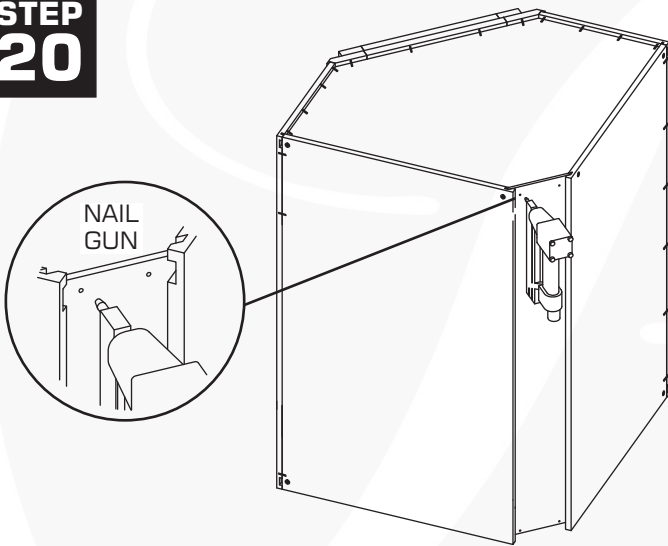

**STEP  
21**

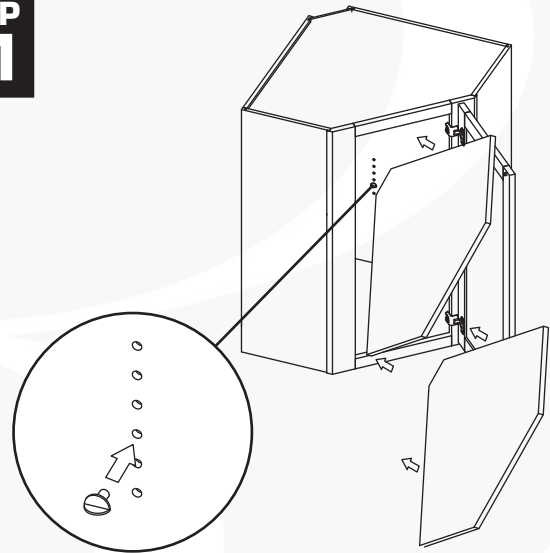


**STEP  
22**

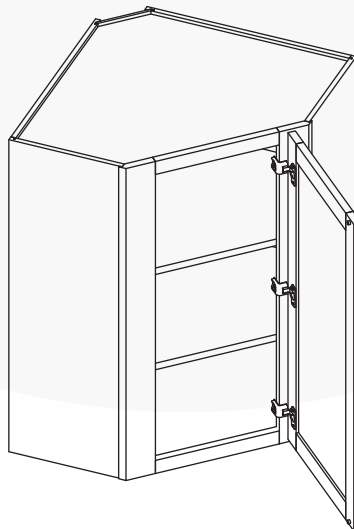


# ASSEMBLING INSTRUCTIONS - TALL PANTRY

PANTRY

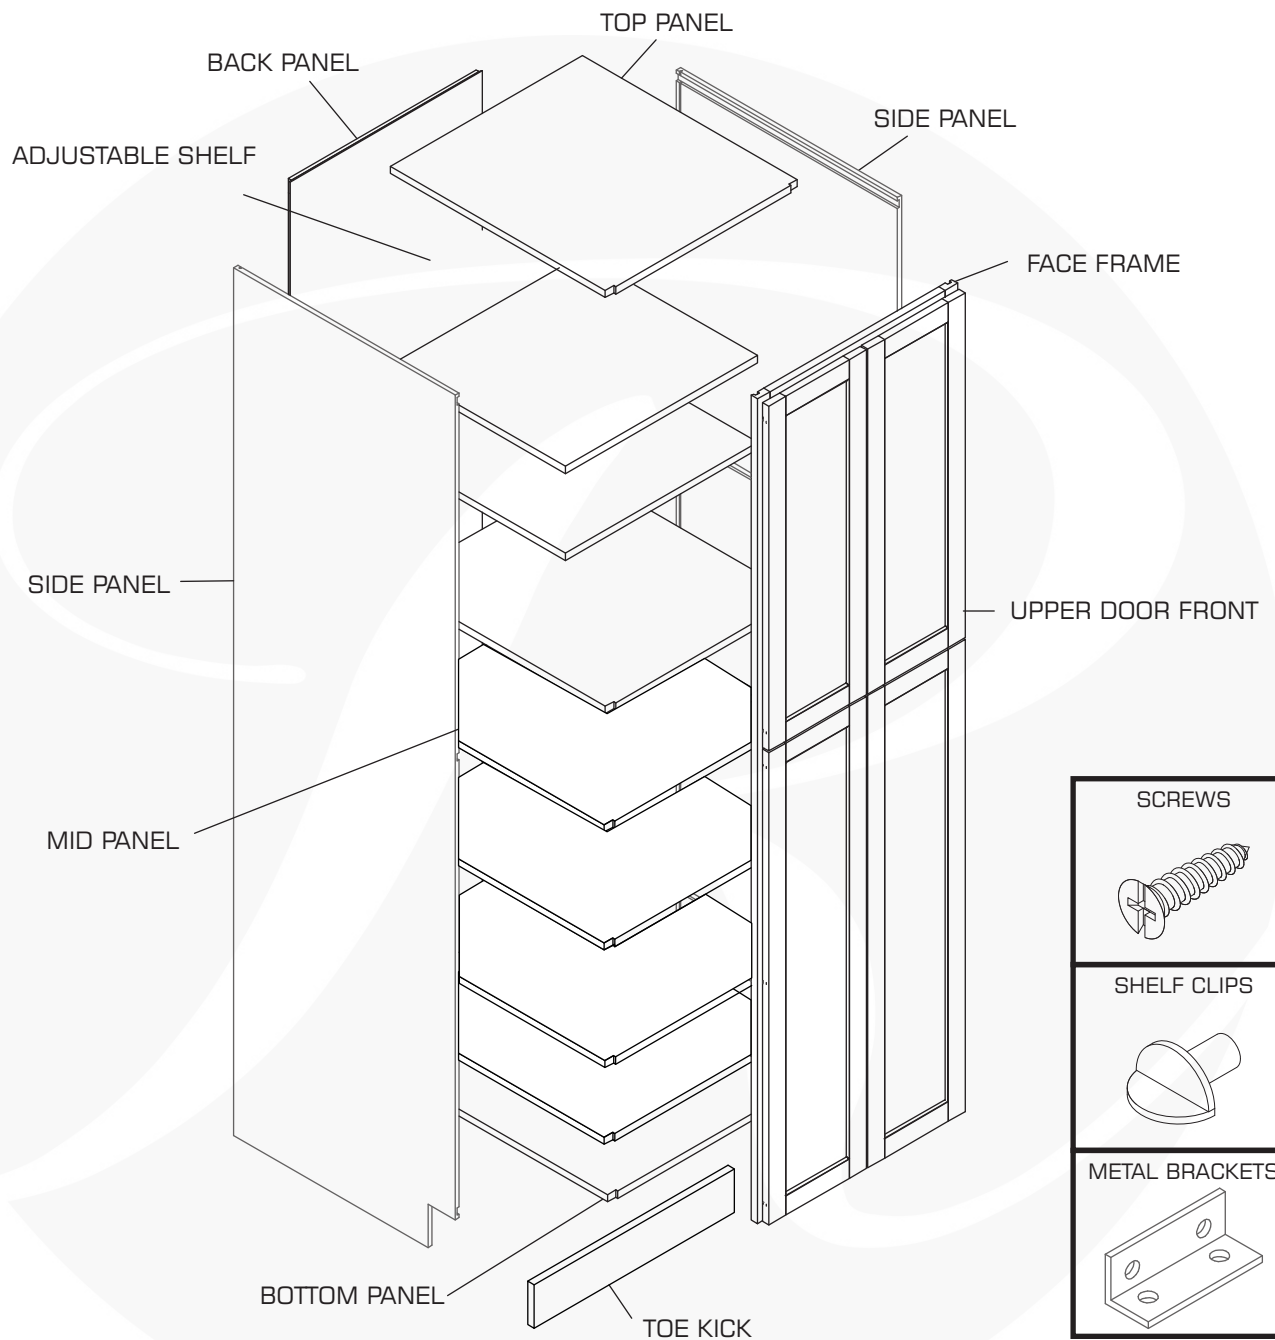

## TOOLS



WOOD  
GLUE




SCREW  
DRIVER



RUBBER  
Mallet



NAIL  
GUN

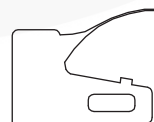


STAPLER




SPOTNAILS  
XC1008


# STEP 1

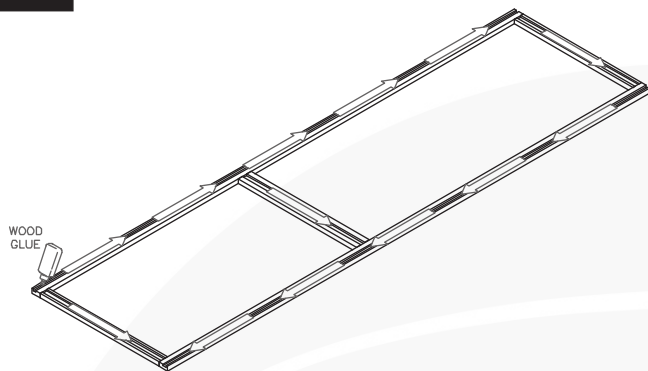


# STEP 2

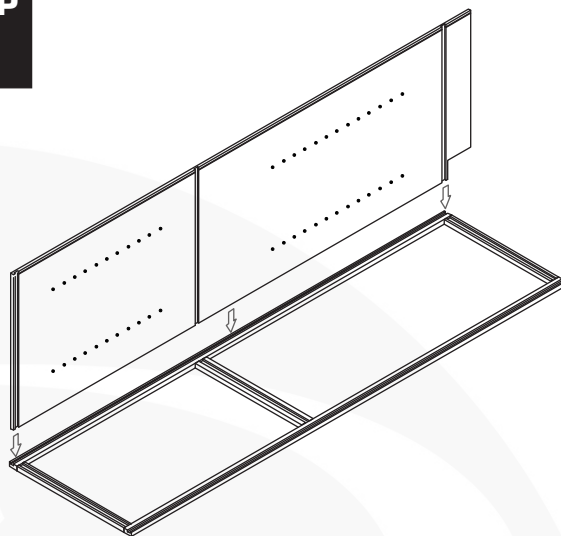


# STEP 3

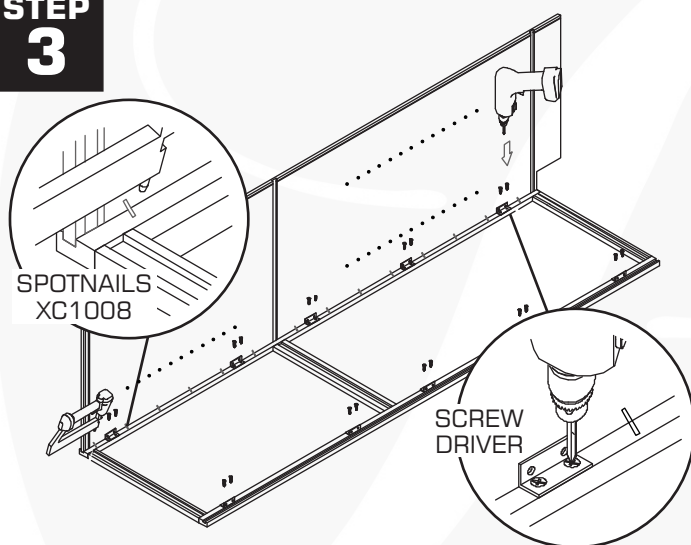


# STEP 4

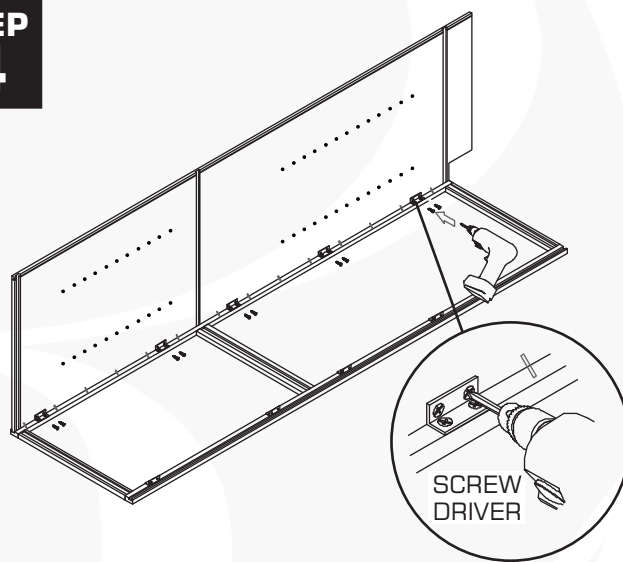


# STEP 5

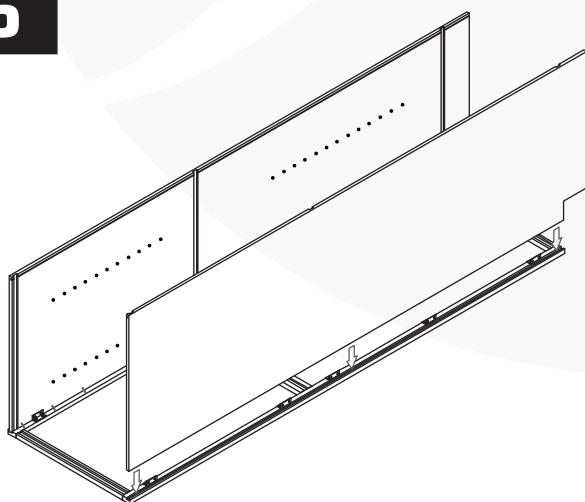


# STEP 6

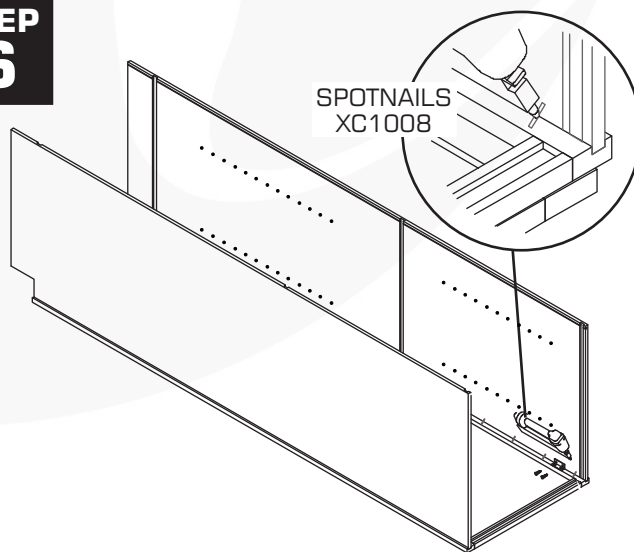


**STEP  
7**

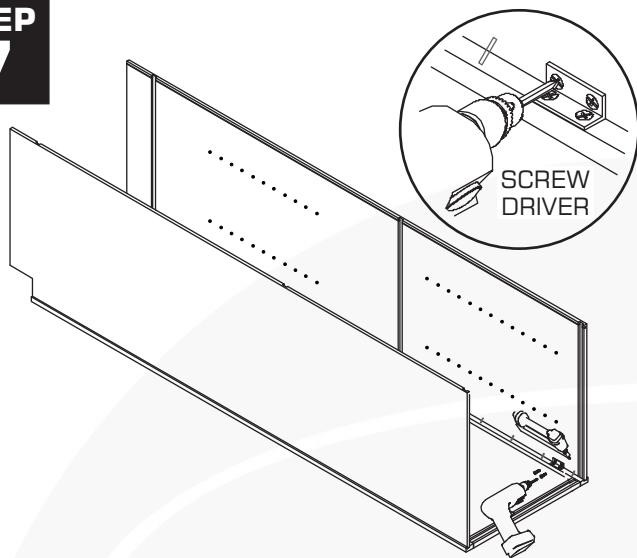


**STEP  
8**

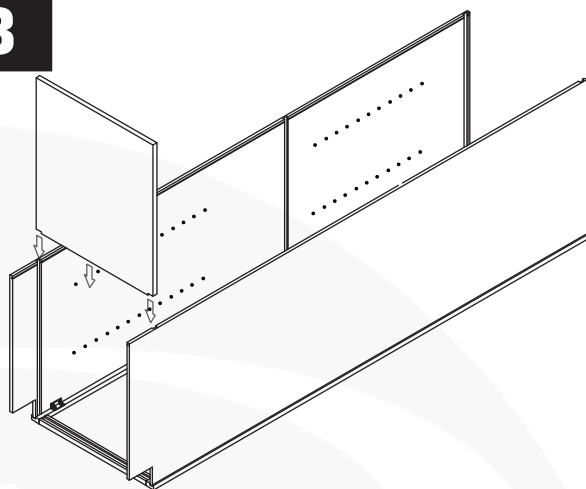


**STEP  
9**

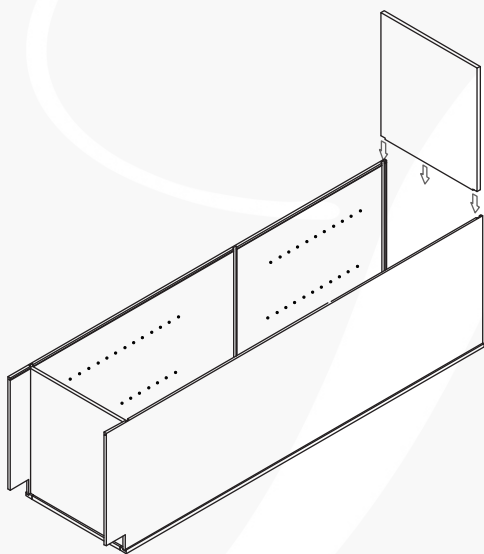


**STEP  
10**

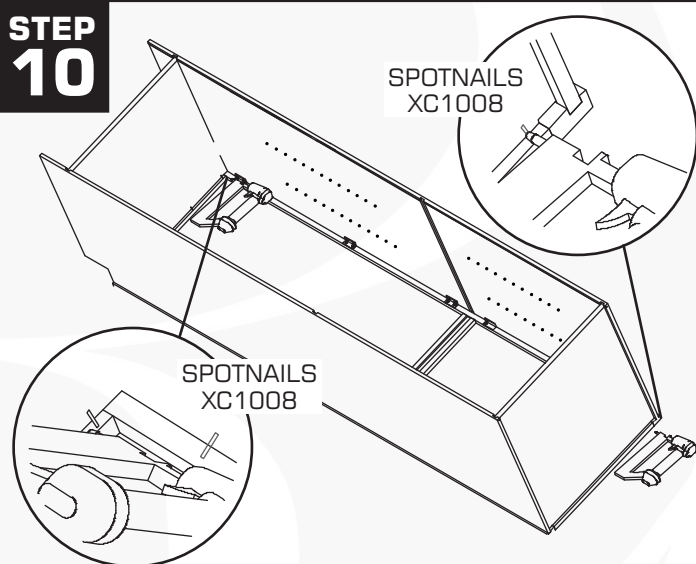


**STEP  
11**

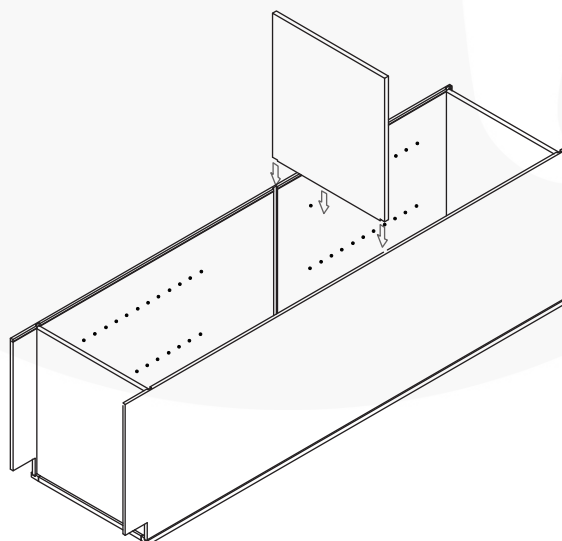


**STEP  
12**

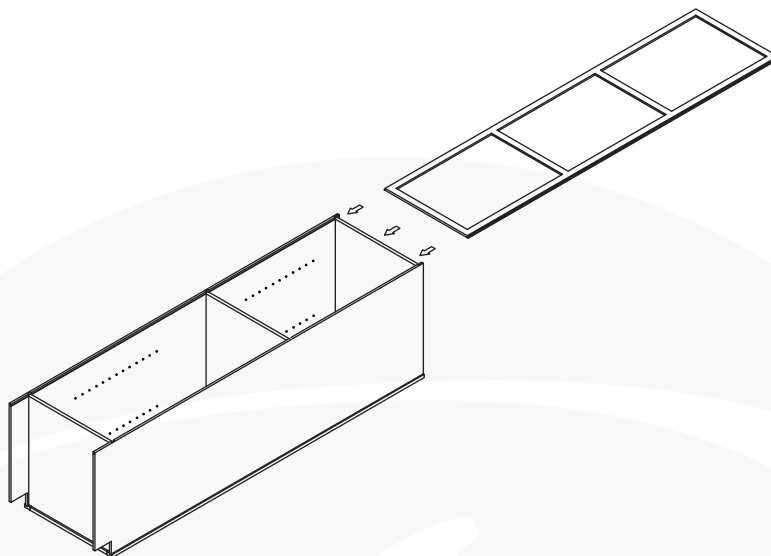


**STEP  
13**

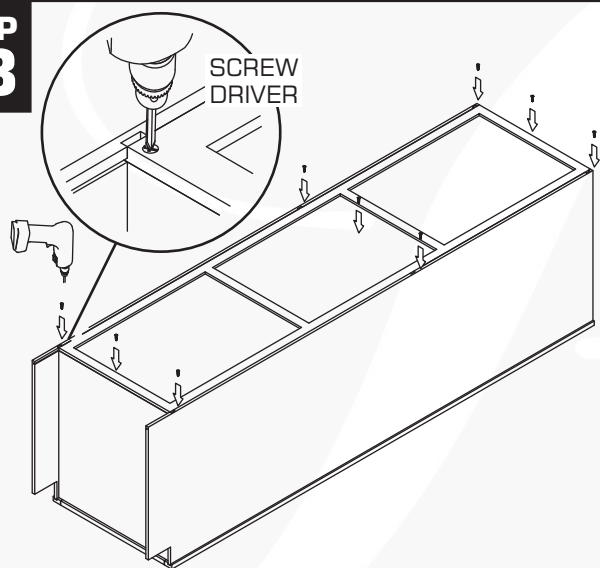


**STEP  
14**

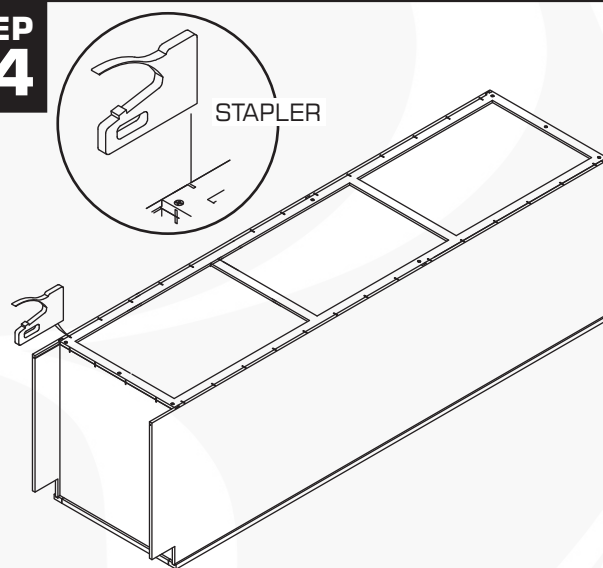


**STEP  
15**

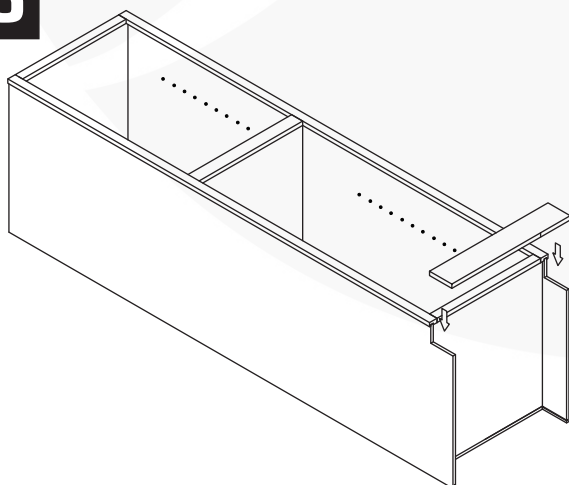


**STEP  
16**

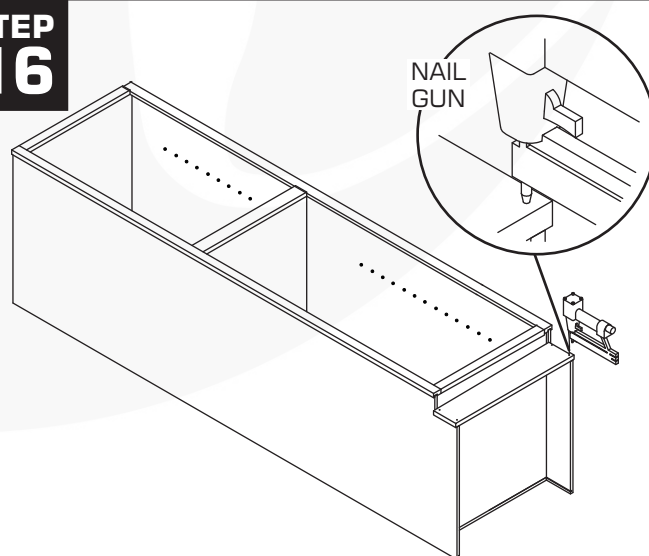


**STEP  
17**

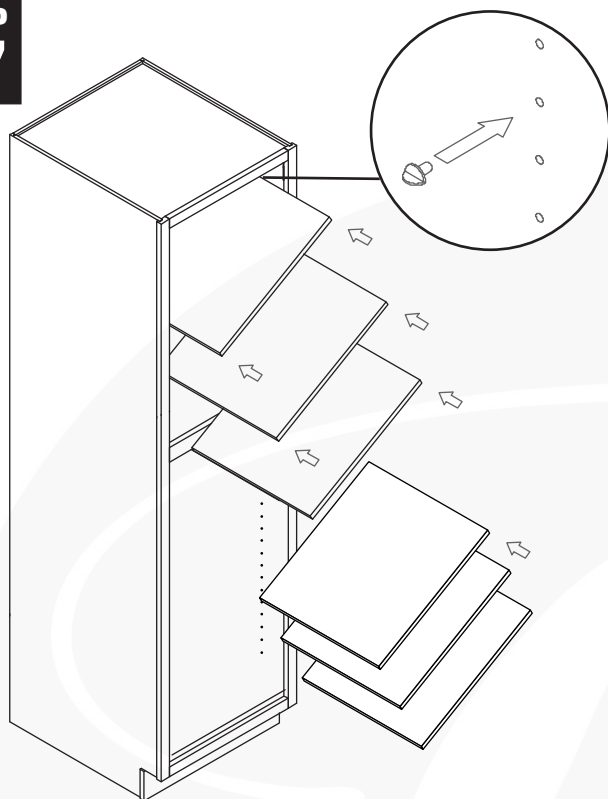


**STEP  
18**

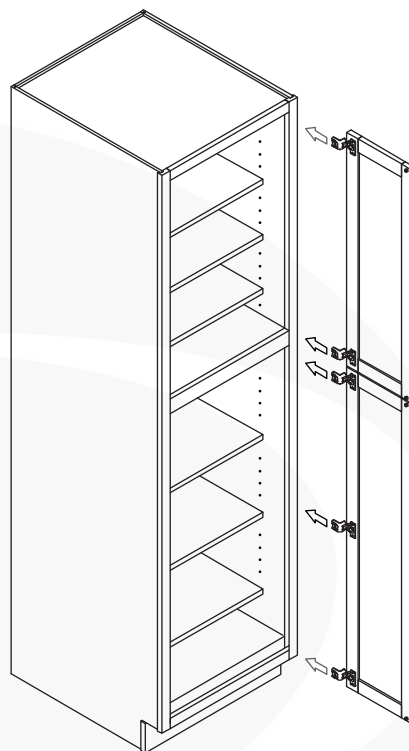


**STEP  
19**

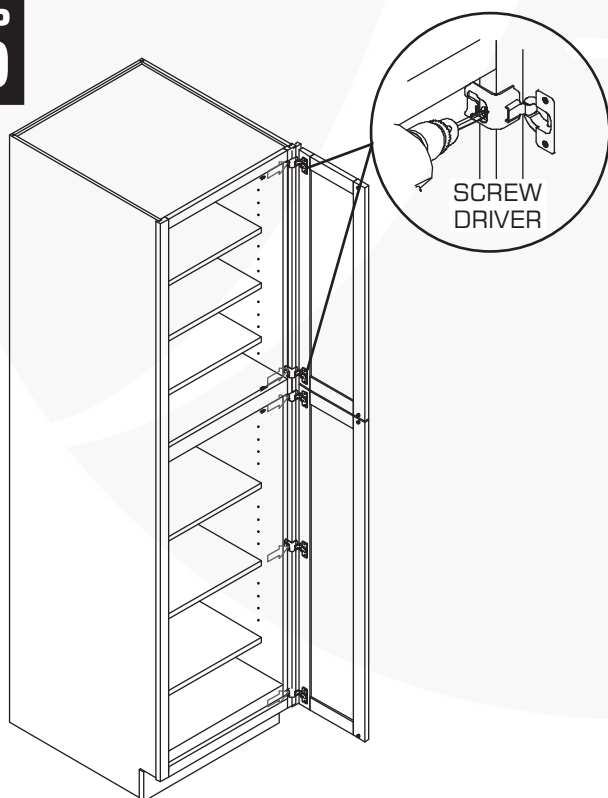


**STEP  
20**

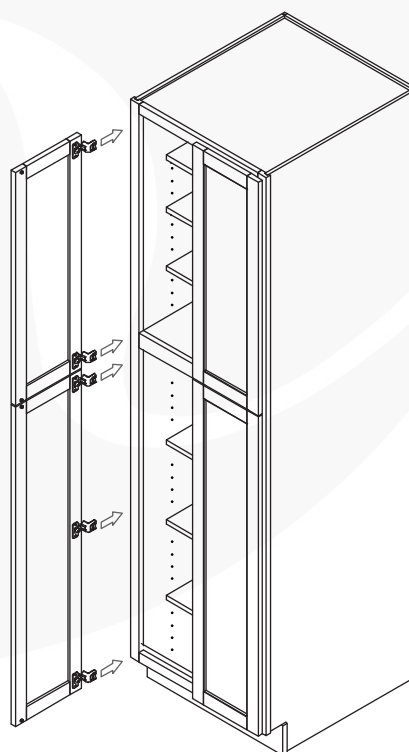

**STEP  
21**

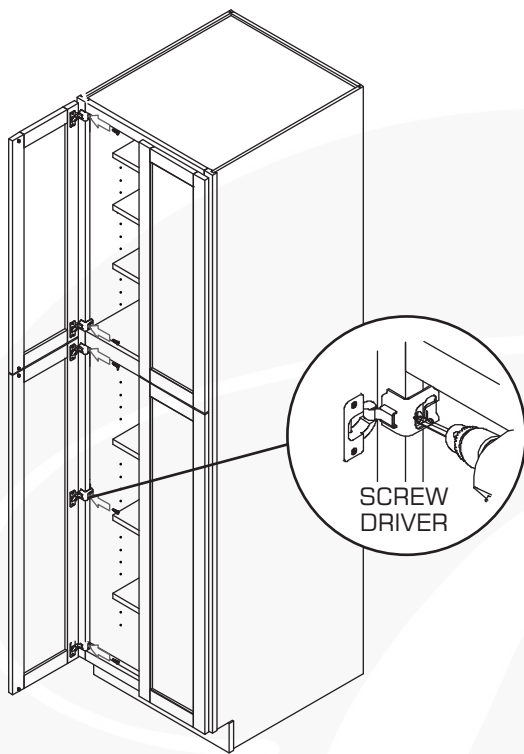



**STEP  
22**

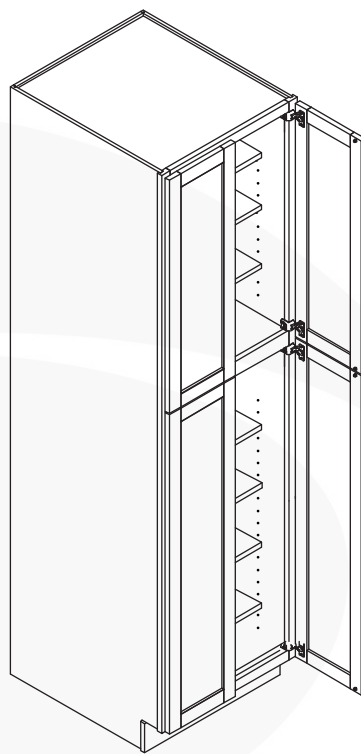


**PANTRY**

# ASSEMBLING INSTRUCTIONS - OVEN CABINET


OVEN CABINET

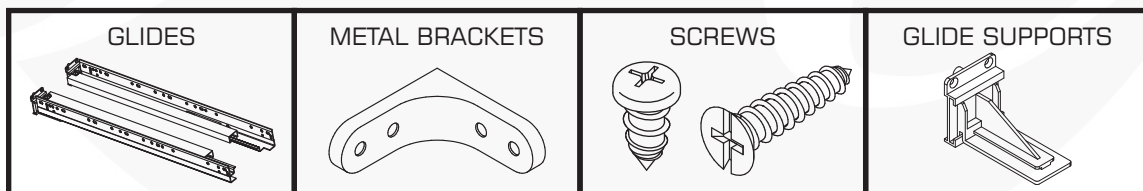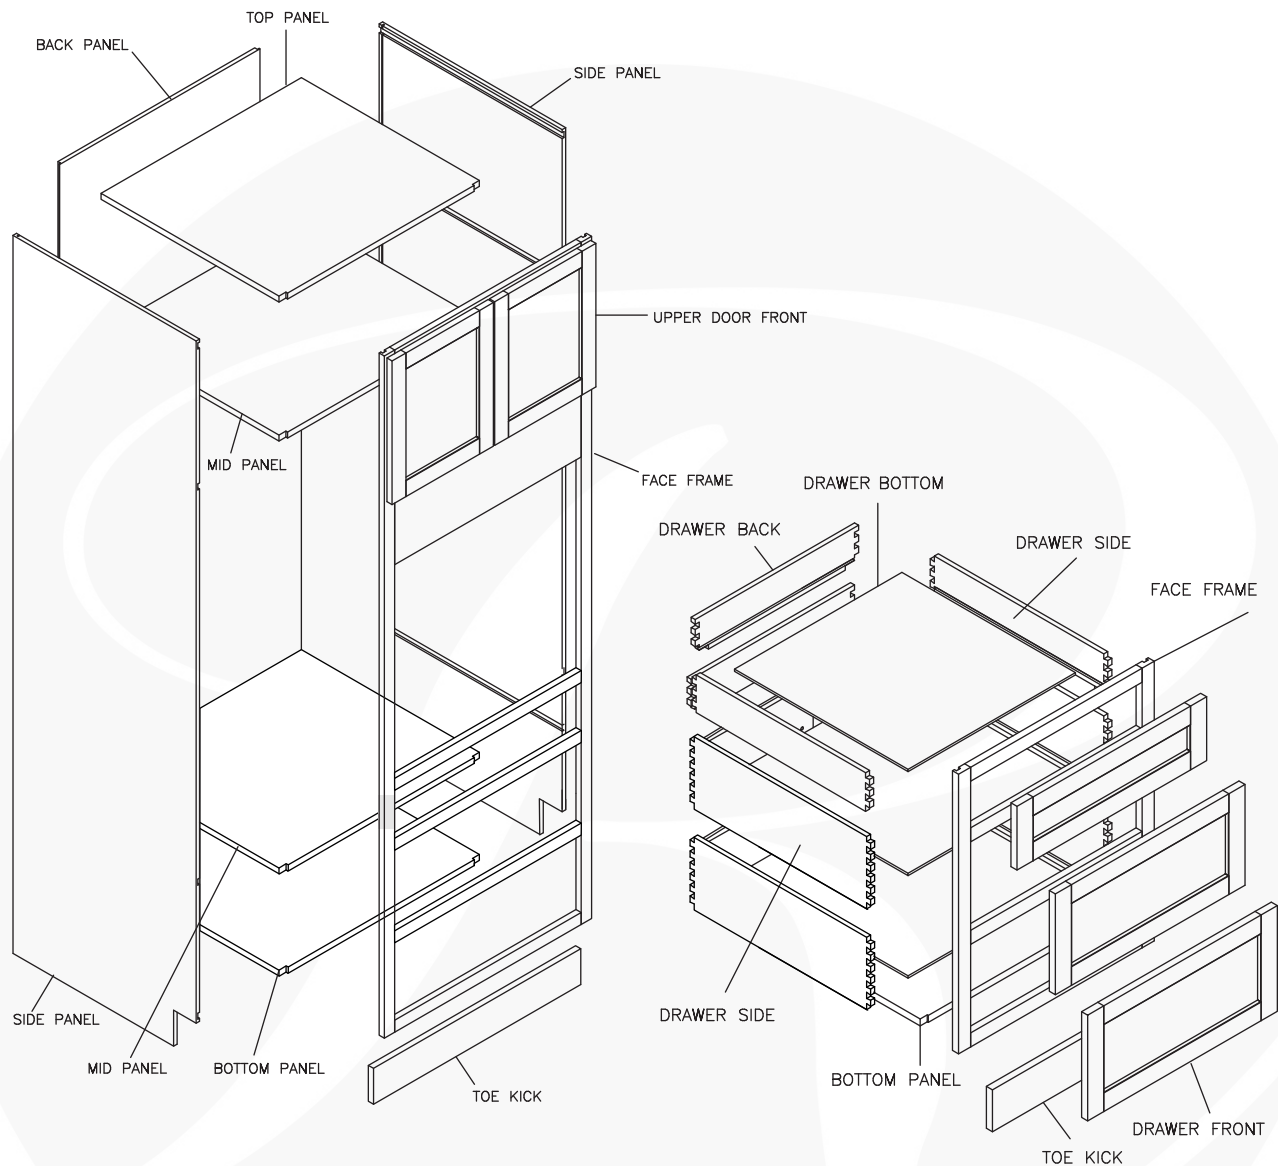


**STEP 1**

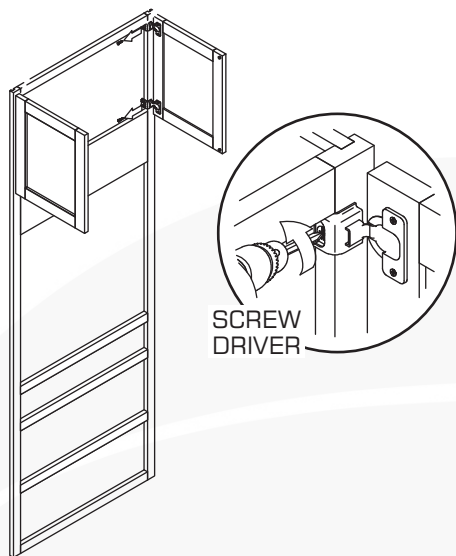


**STEP 2**

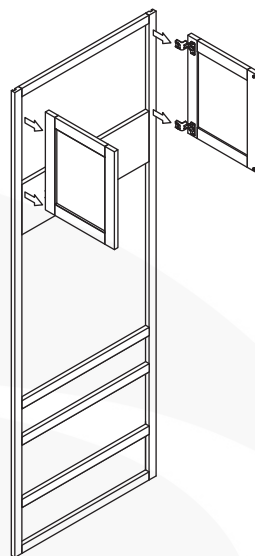


**STEP 3**

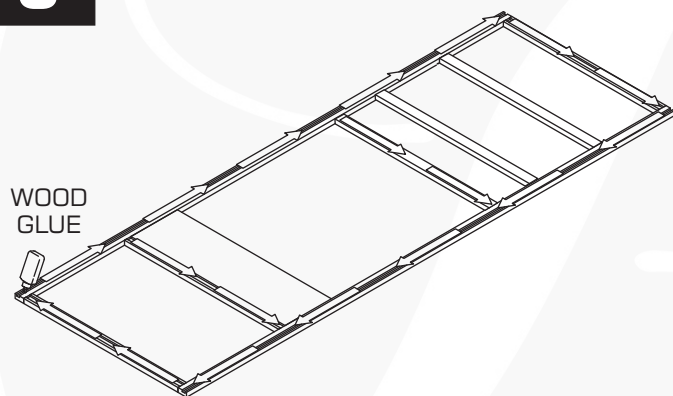


**STEP 4**

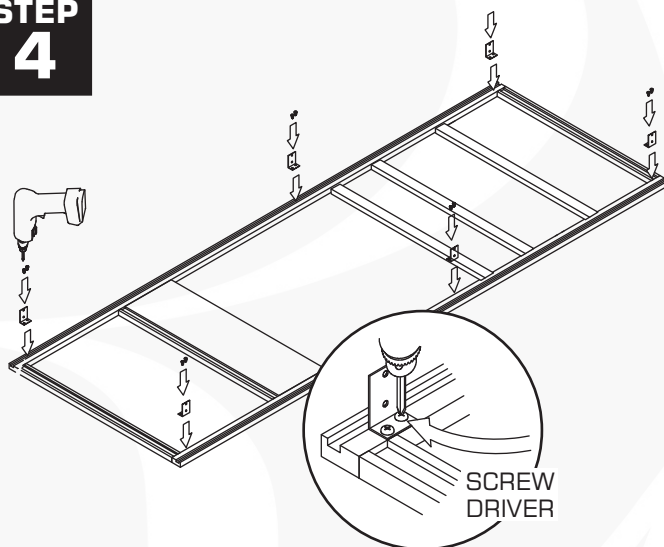


**STEP 5**

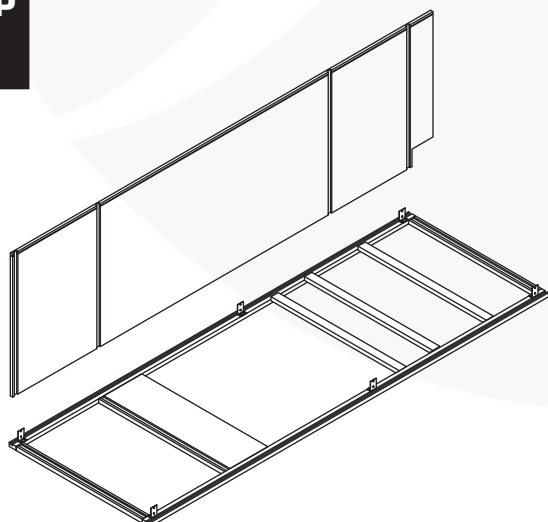


**STEP 6**

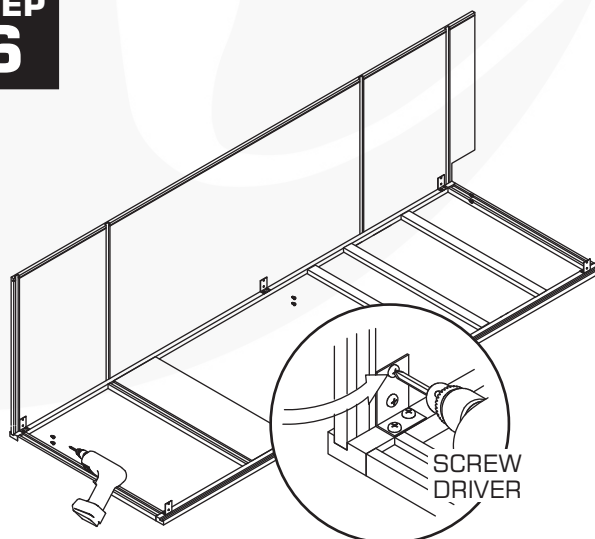


**STEP  
7**

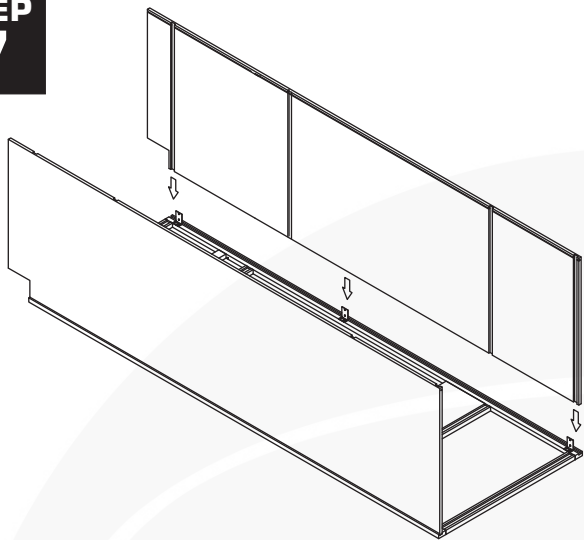


**STEP  
8**

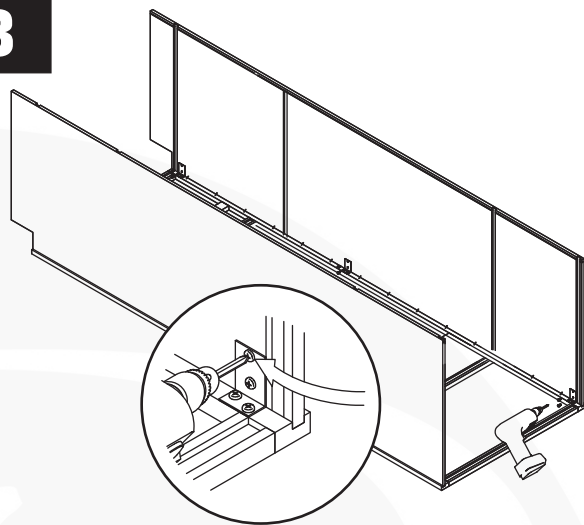


**STEP  
9**




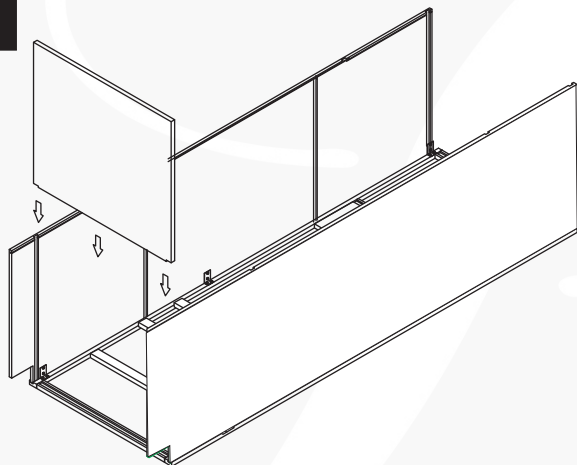










**STEP  
10**



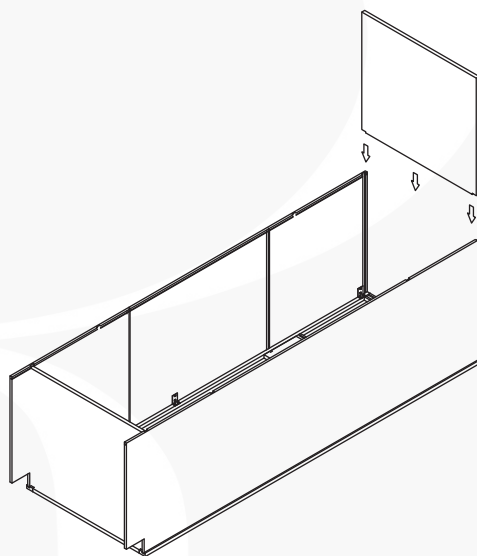






**STEP  
11**

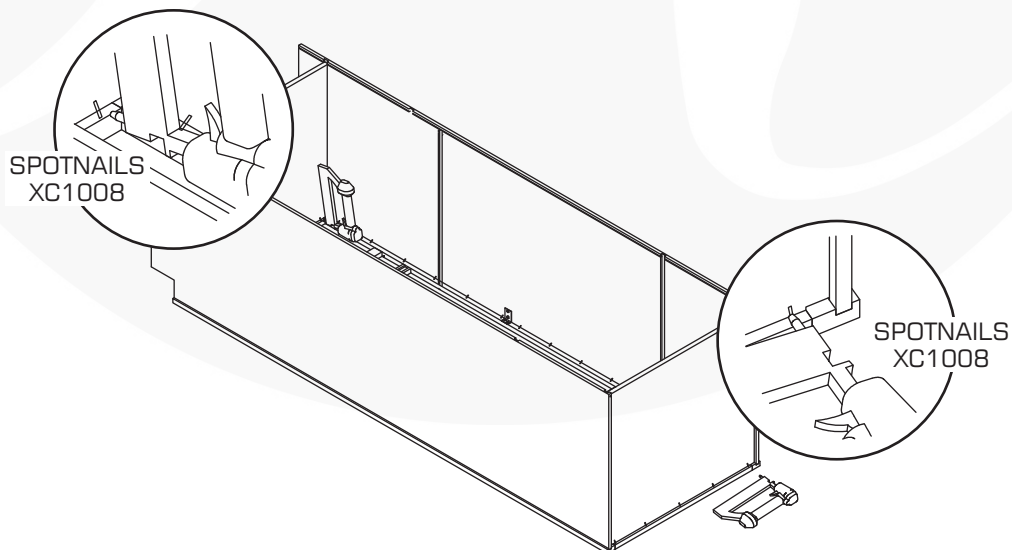

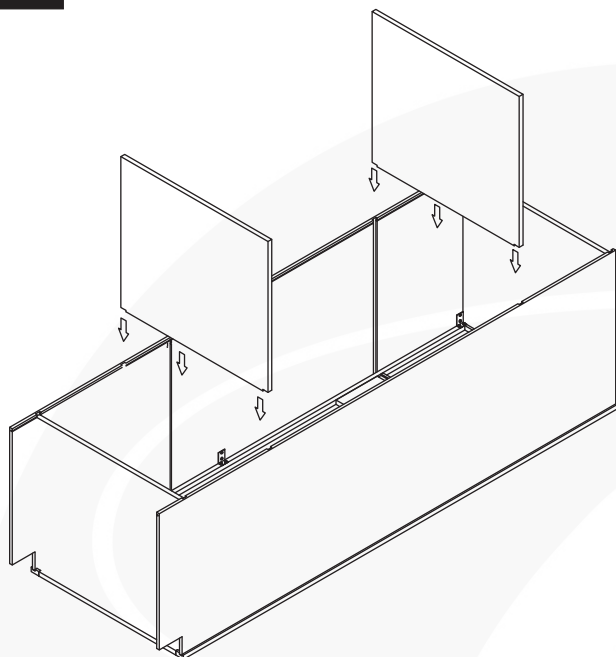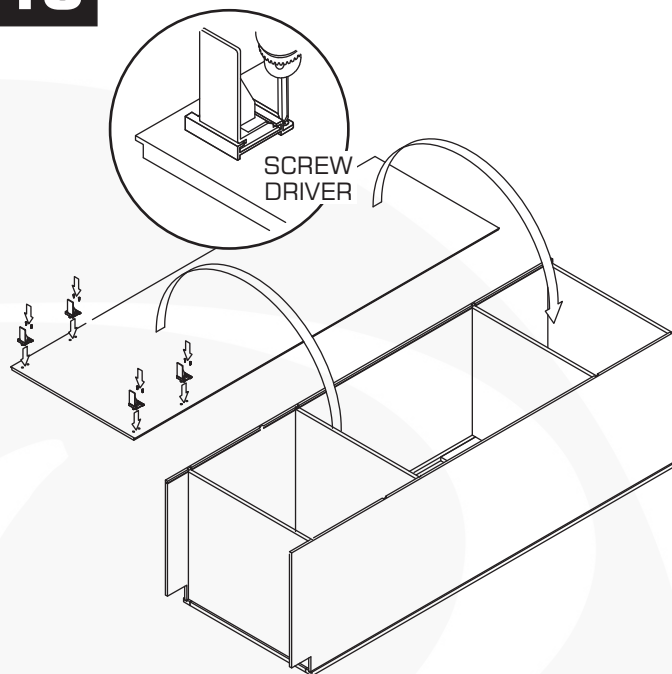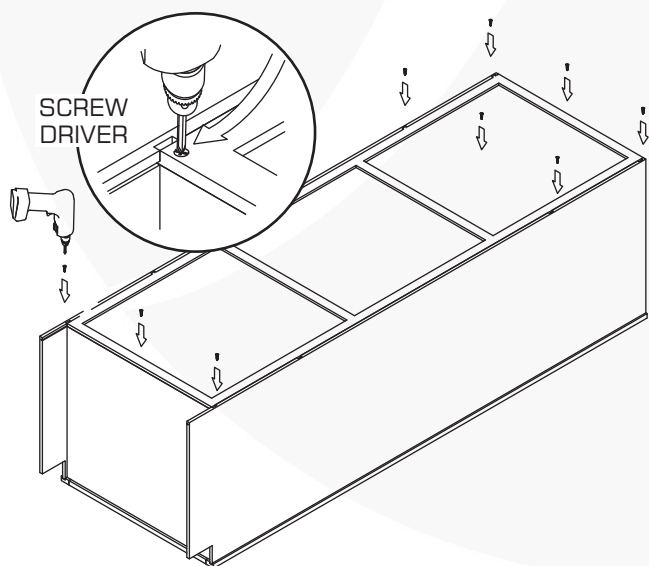
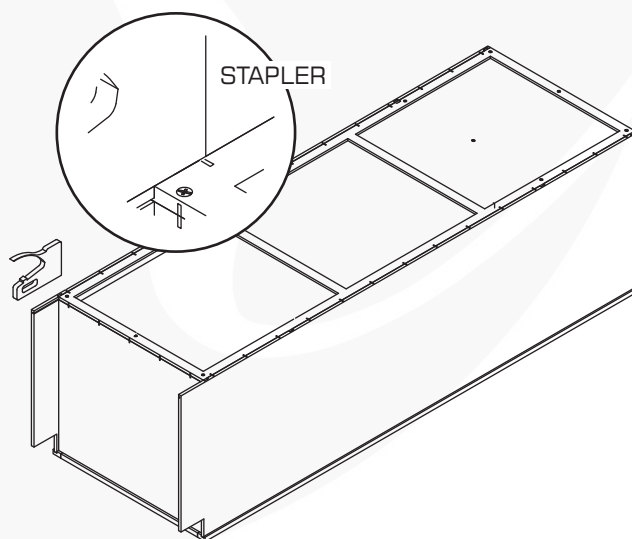
**STEP  
12****STEP  
13****STEP  
14****STEP  
15**

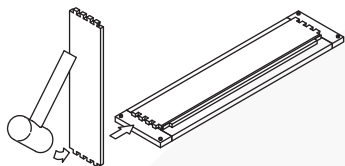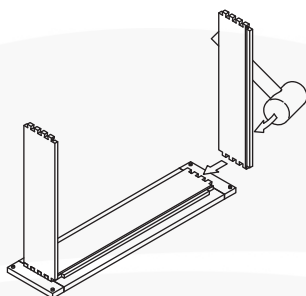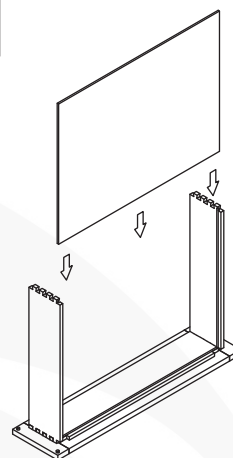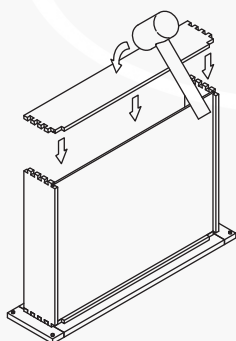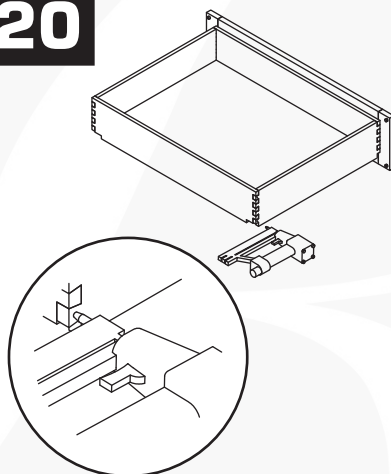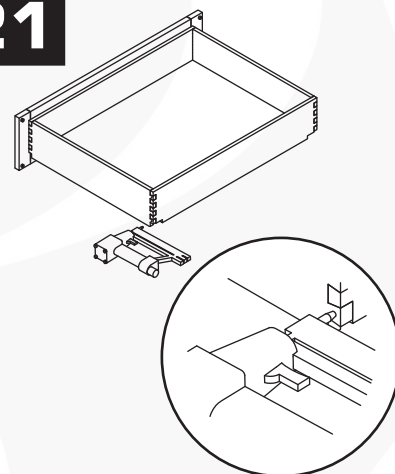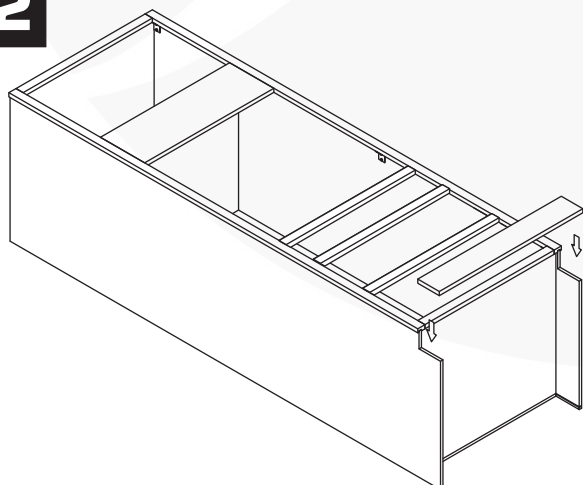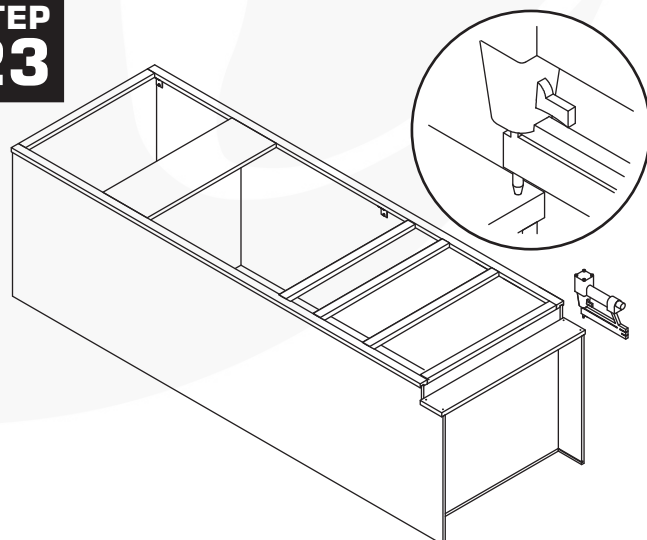**STEP  
16****STEP  
17****STEP  
18****STEP  
19****STEP  
20****STEP  
21****STEP  
22****STEP  
23**

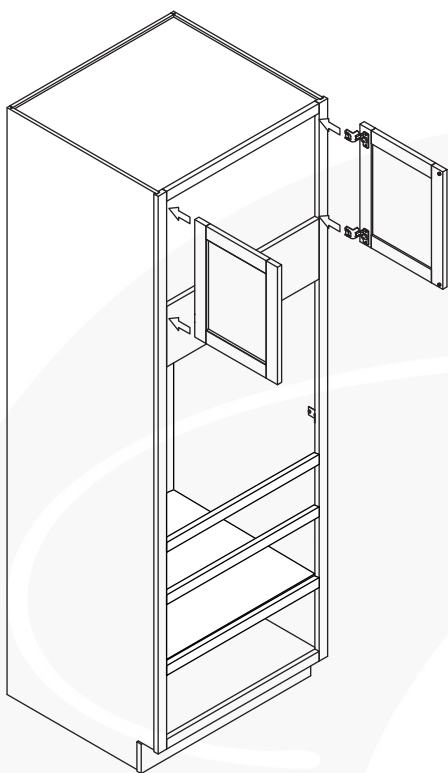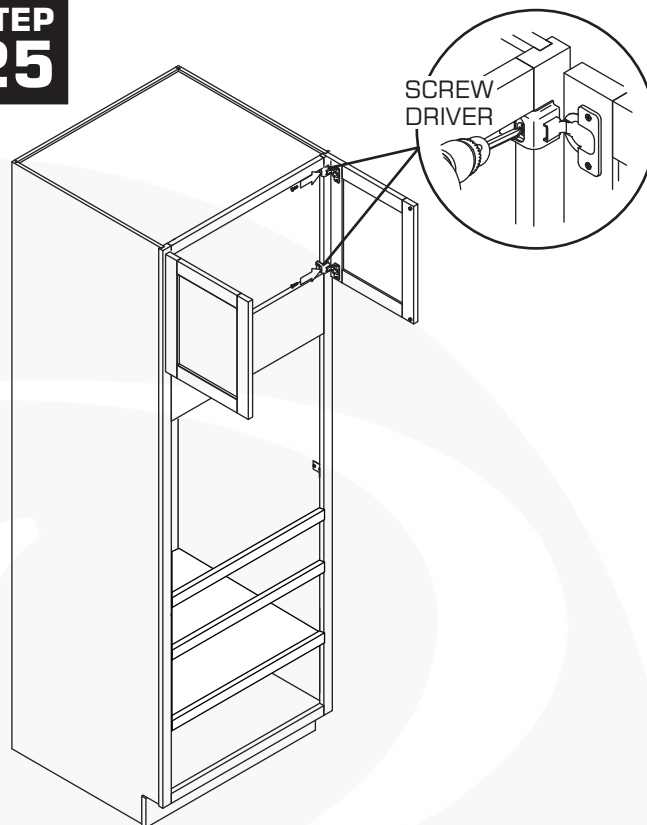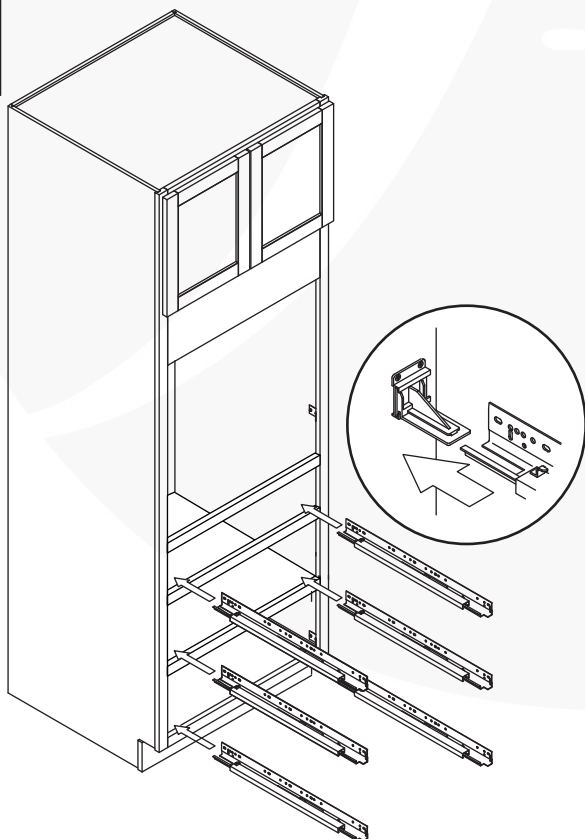**STEP  
24****STEP  
25****STEP  
26****STEP  
27**

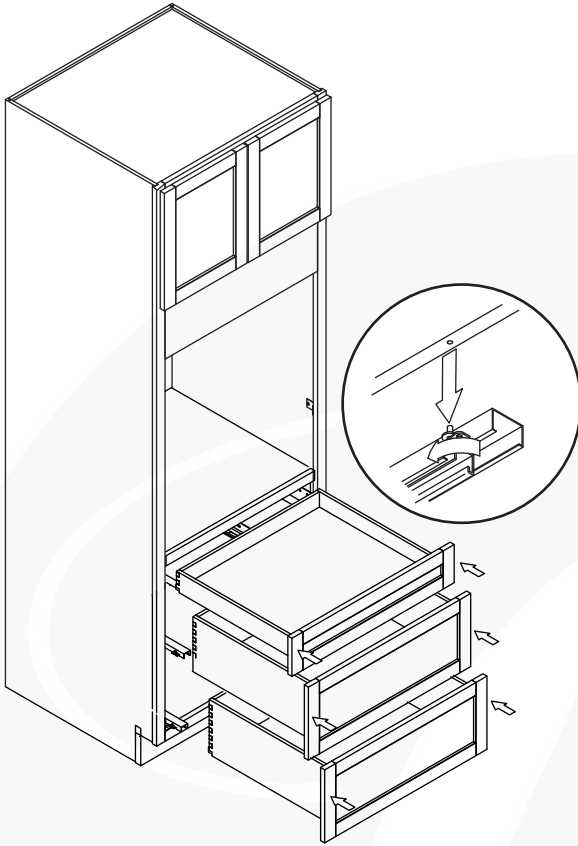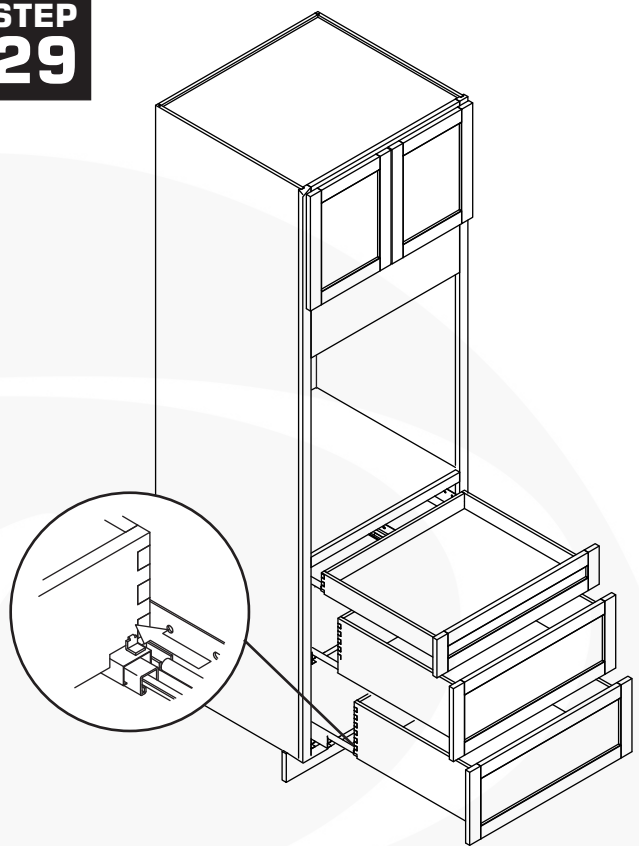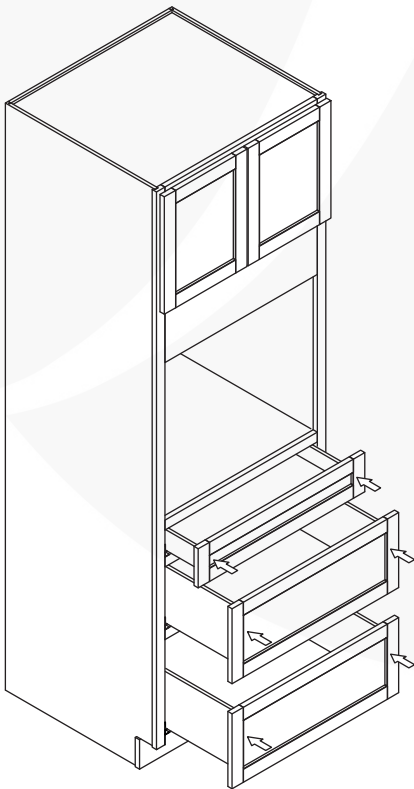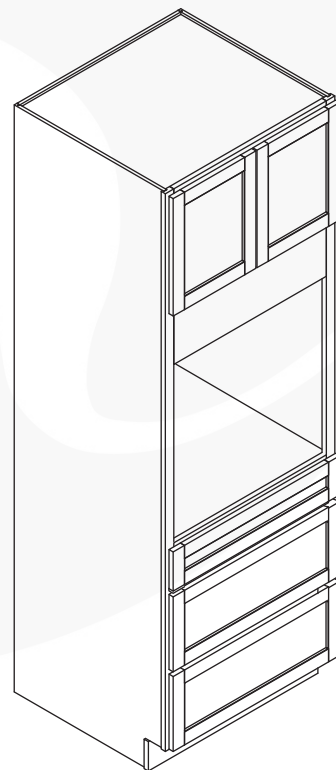
**STEP  
28****STEP  
29****STEP  
30****STEP  
31**

# ASSEMBLING INSTRUCTIONS - VANITY CABINET

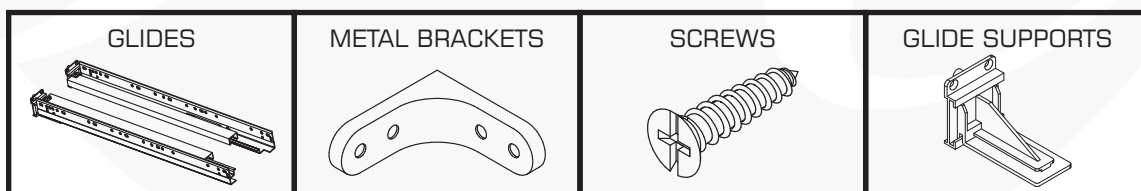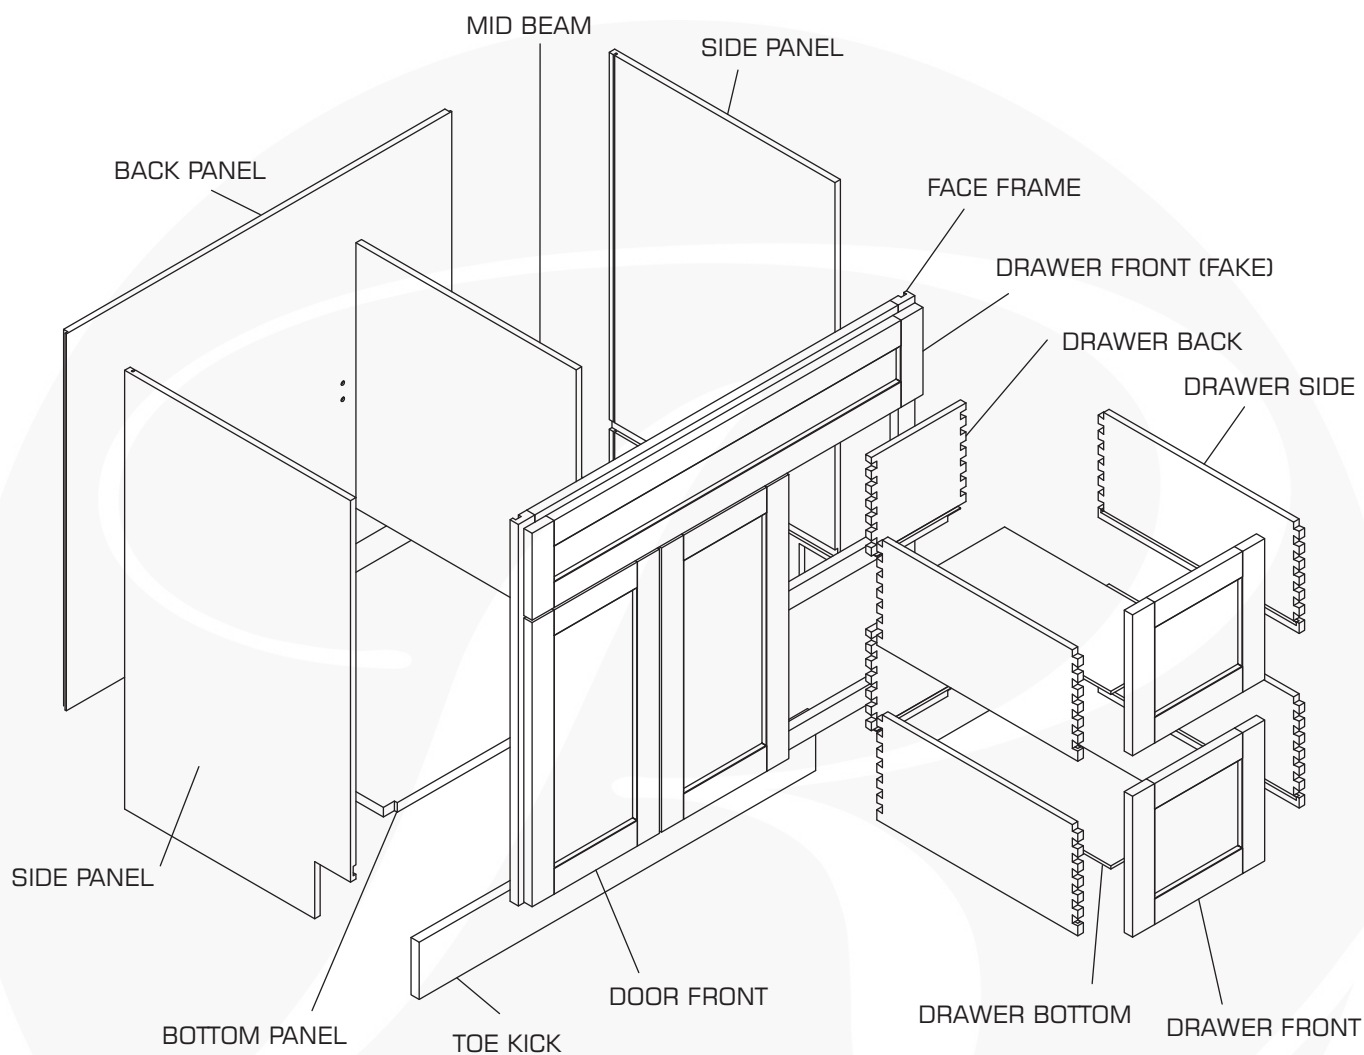


**STEP 1**

WOOD  
GLUE

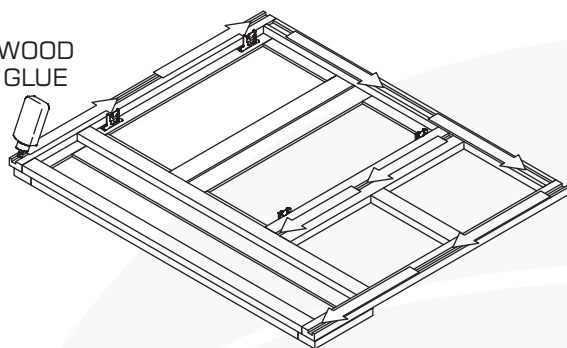


**STEP 2**

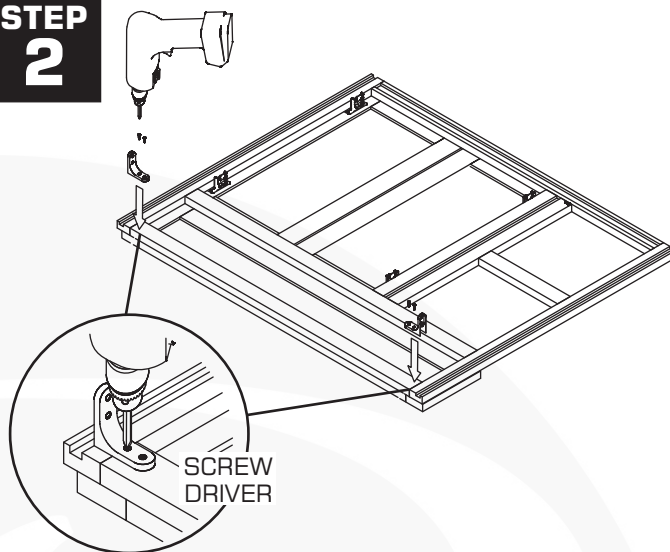


SCREW  
DRIVER

**STEP 3**

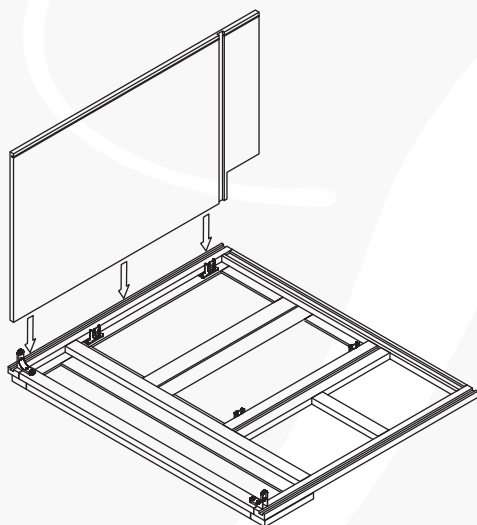


**STEP 4**

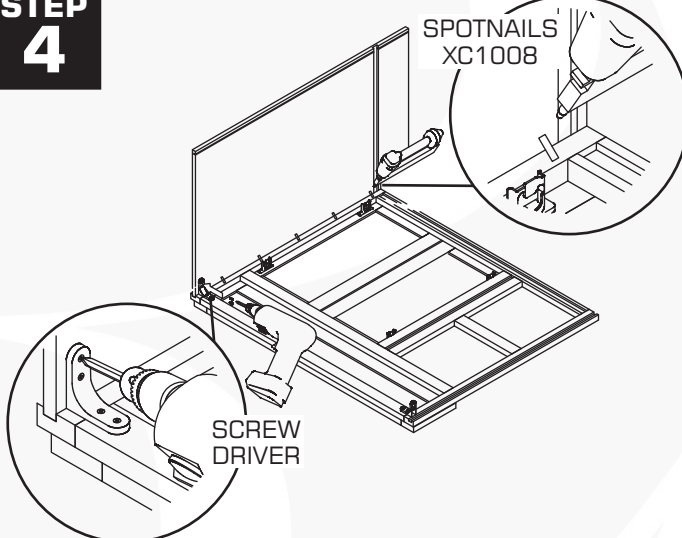


SPOTNAILS  
XC1008

SCREW  
DRIVER

**STEP 5**

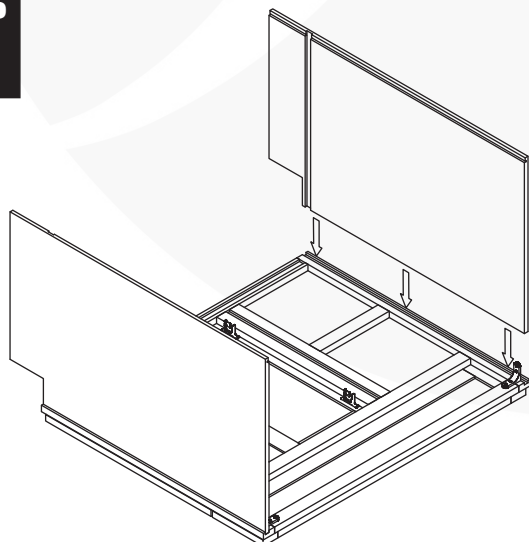


**STEP 6**

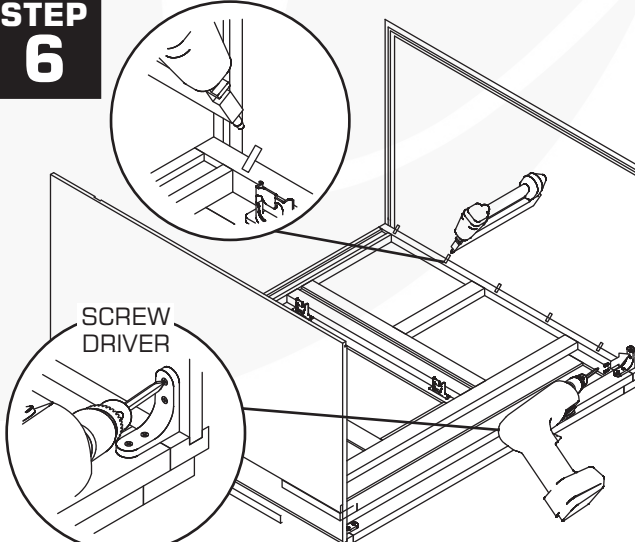


SCREW  
DRIVER


**STEP  
7**

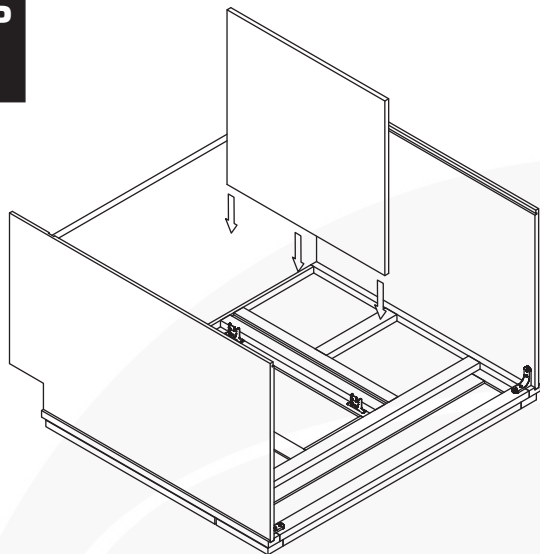


**STEP  
8**

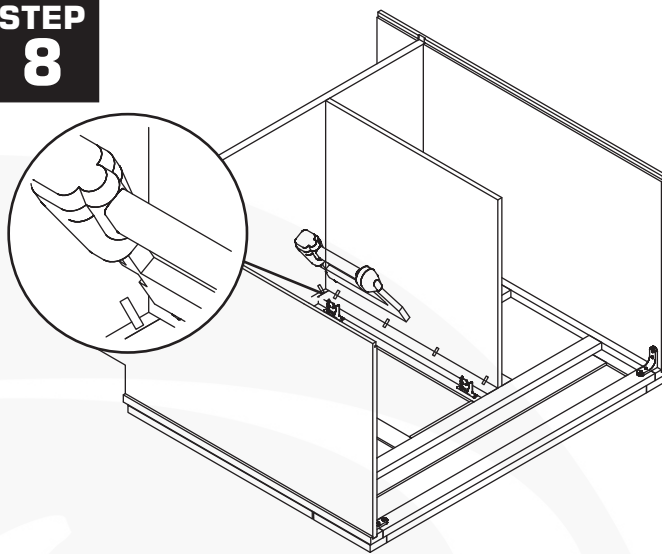


**STEP  
9**

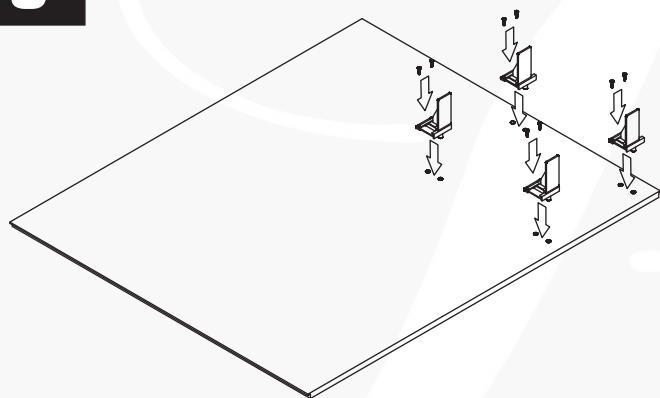


**STEP  
10**

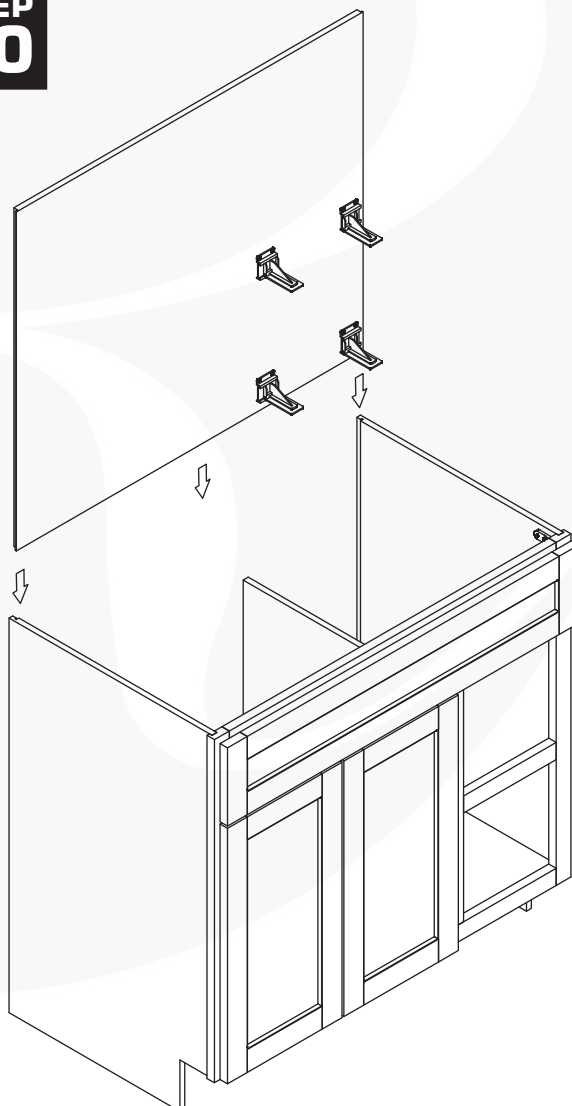


**STEP 11**

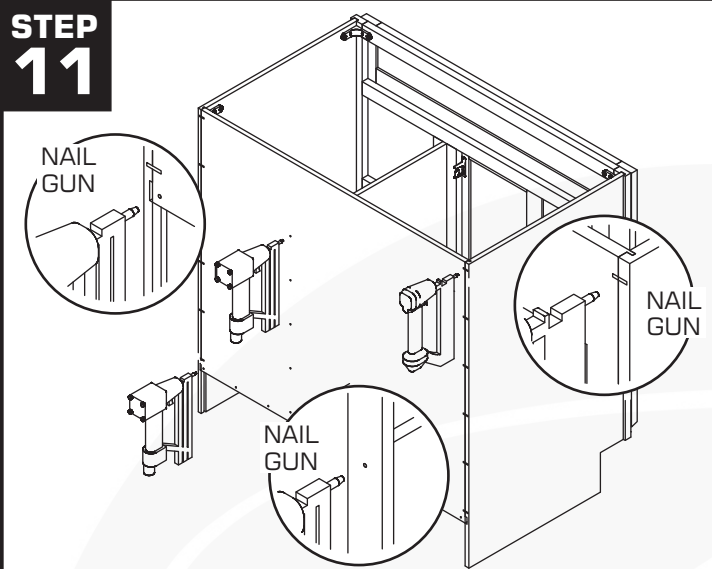


**STEP 12**

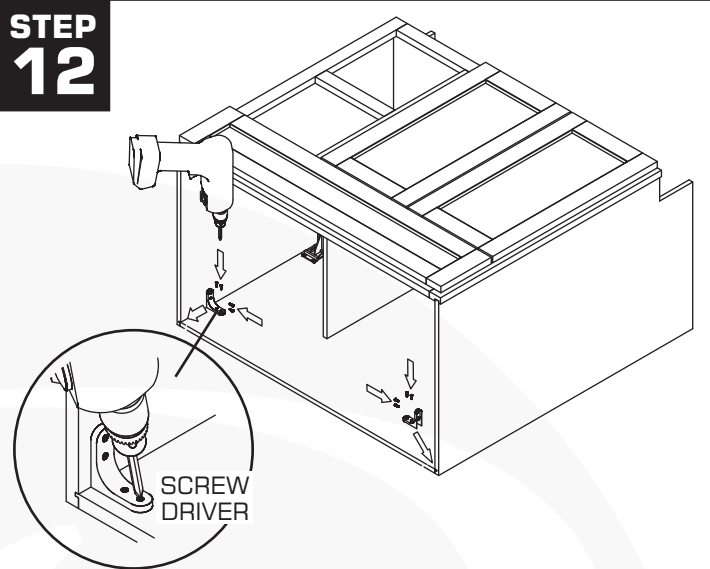


**STEP 13**

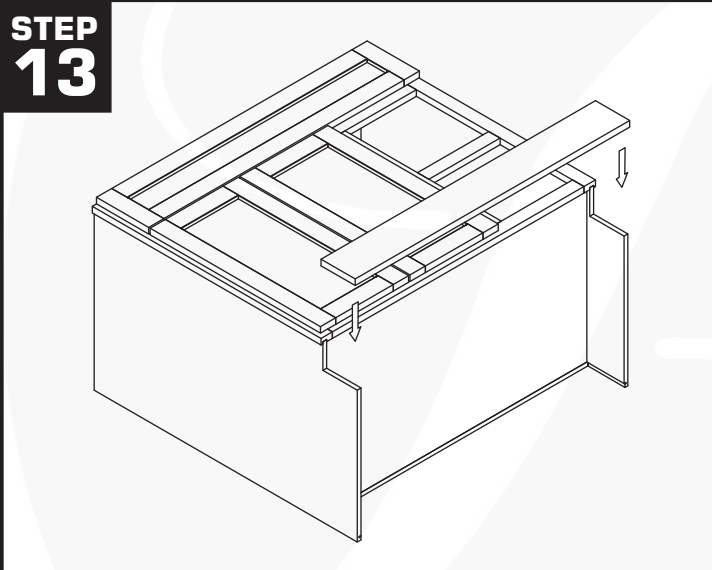


**STEP 14**

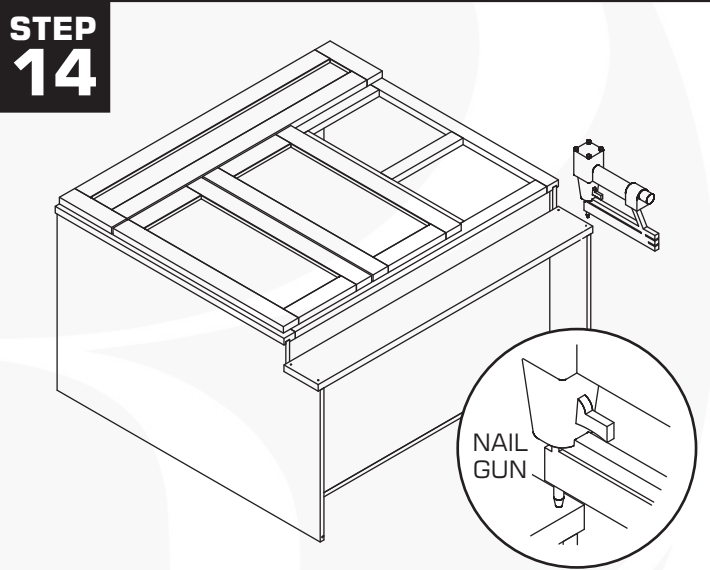


**STEP 15**

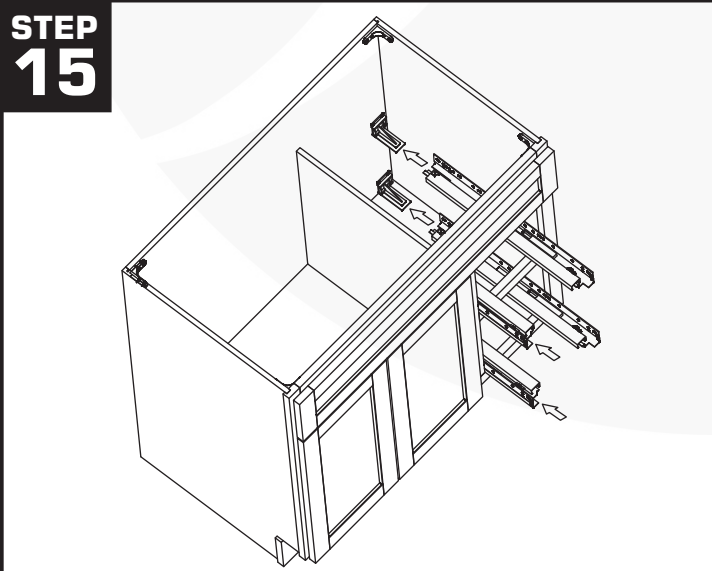


**STEP 16**

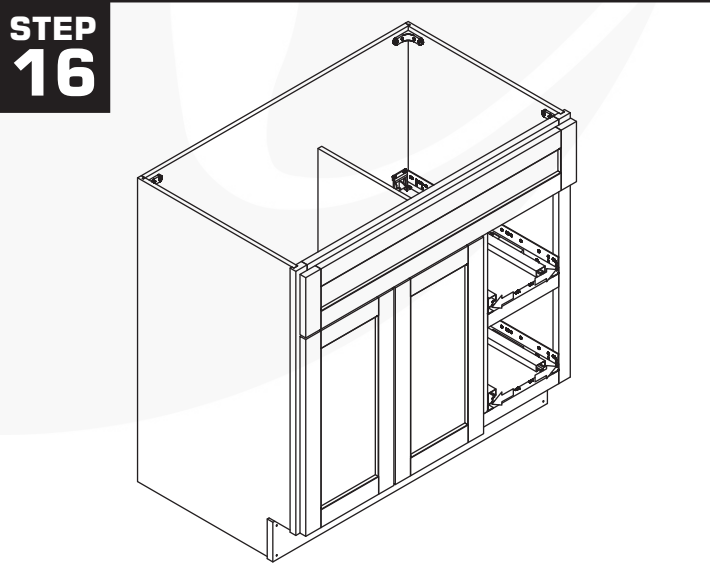


**STEP  
17**

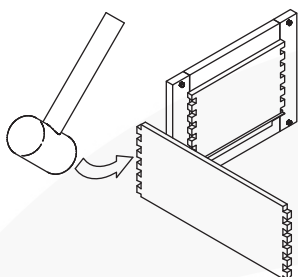


**STEP  
18**

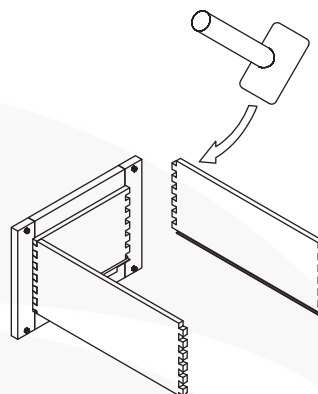


**STEP  
19**

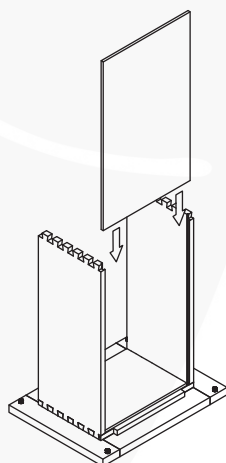


**STEP  
20**

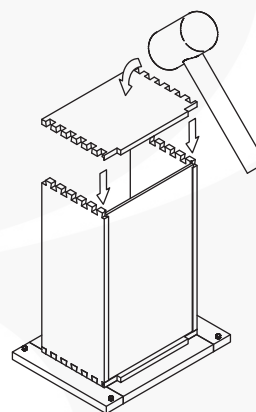


**STEP  
21**

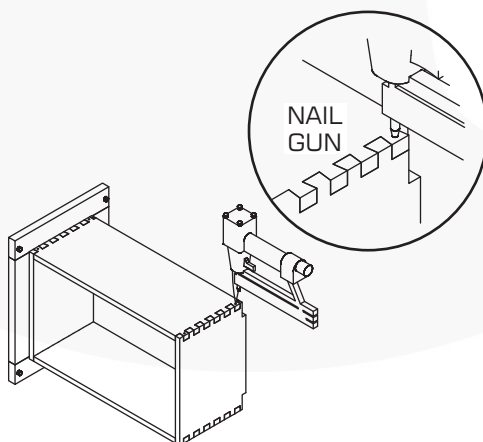

**STEP  
22**

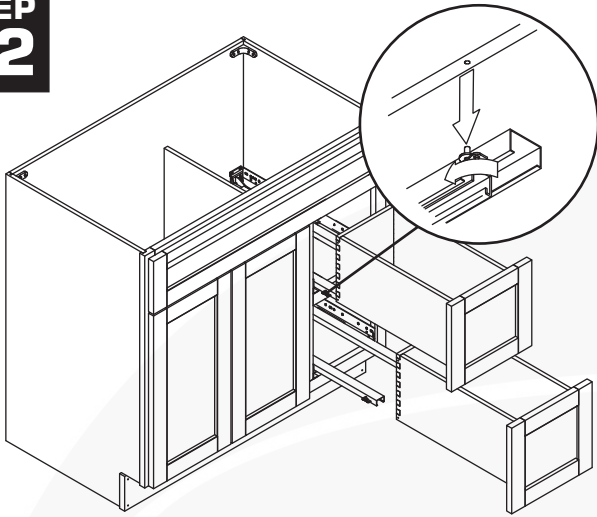

**STEP  
23**

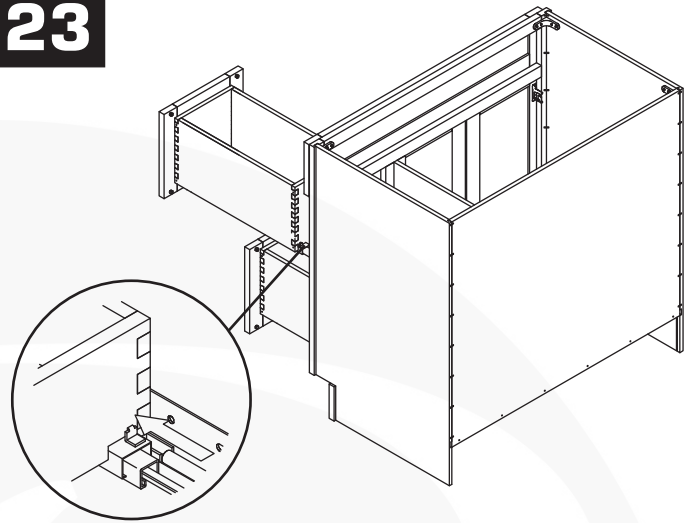

**VANITY CABINET**

**STEP  
24**

